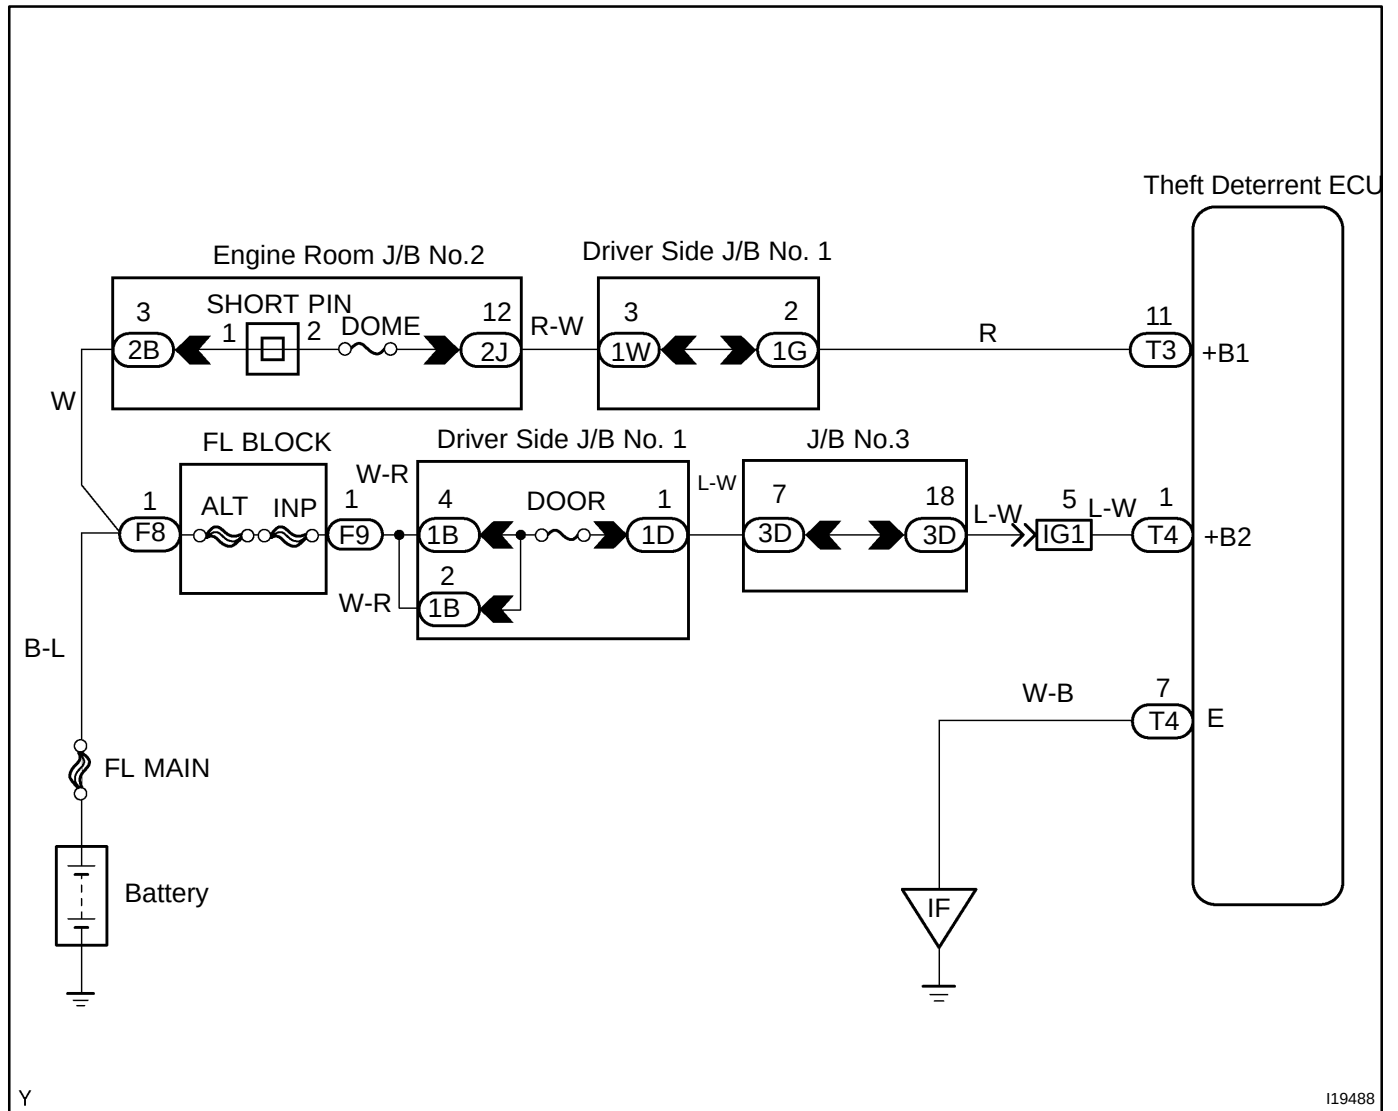


ECU Power Source Circuit

CIRCUIT DESCRIPTION

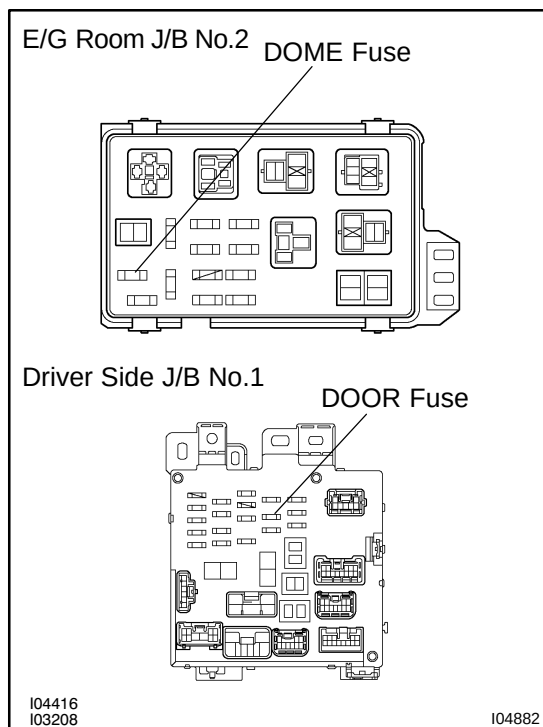
This circuit provides power to operate the theft deterrent ECU.

WIRING DIAGRAM



INSPECTION PROCEDURE

1 Check DOME and DOOR fuses.

**PREPARATION:**

- (a) Remove DOME fuse from engine room J/B No.2.
- (b) Remove DOOR fuse from driver side J/B No.1.

CHECK:

Check continuity of DOME and DOOR fuses.

OK:

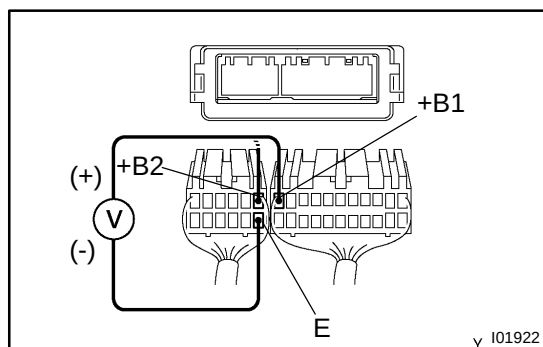
Continuity

NG

Check for short in all the harness and components connected to the DOME and DOOR fuses (See attached wiring diagram).

OK

2 Check voltage between each of terminals +B1 and +B2 and E of theft deterrent ECU connector.

**PREPARATION:**

Disconnect the theft deterrent ECU connector.

CHECK:

Measure voltage between each of terminals +B1 and +B2 and E of theft deterrent ECU connector.

OK:

Voltage: 10-14V

OK

Proceed to next circuit inspection shown on matrix chart (See page [DI-532](#)).

NG

3	Check for open in harness and connector between ECU and body ground (See page IN-31).
---	--

NG

Repair or replace harness or connector.

OK

Check and repair harness and connector between ECU and battery.