


CIRCUIT INSPECTION

Indicator Light Circuit

CIRCUIT DESCRIPTION


When the theft deterrent system is preparing to set, this circuit lights up the indicator light. When the system has been set, it continuously turns the indicator light on for 1 second and turns it off for 1 second, thus blinking the indicator light.

WIRING DIAGRAM

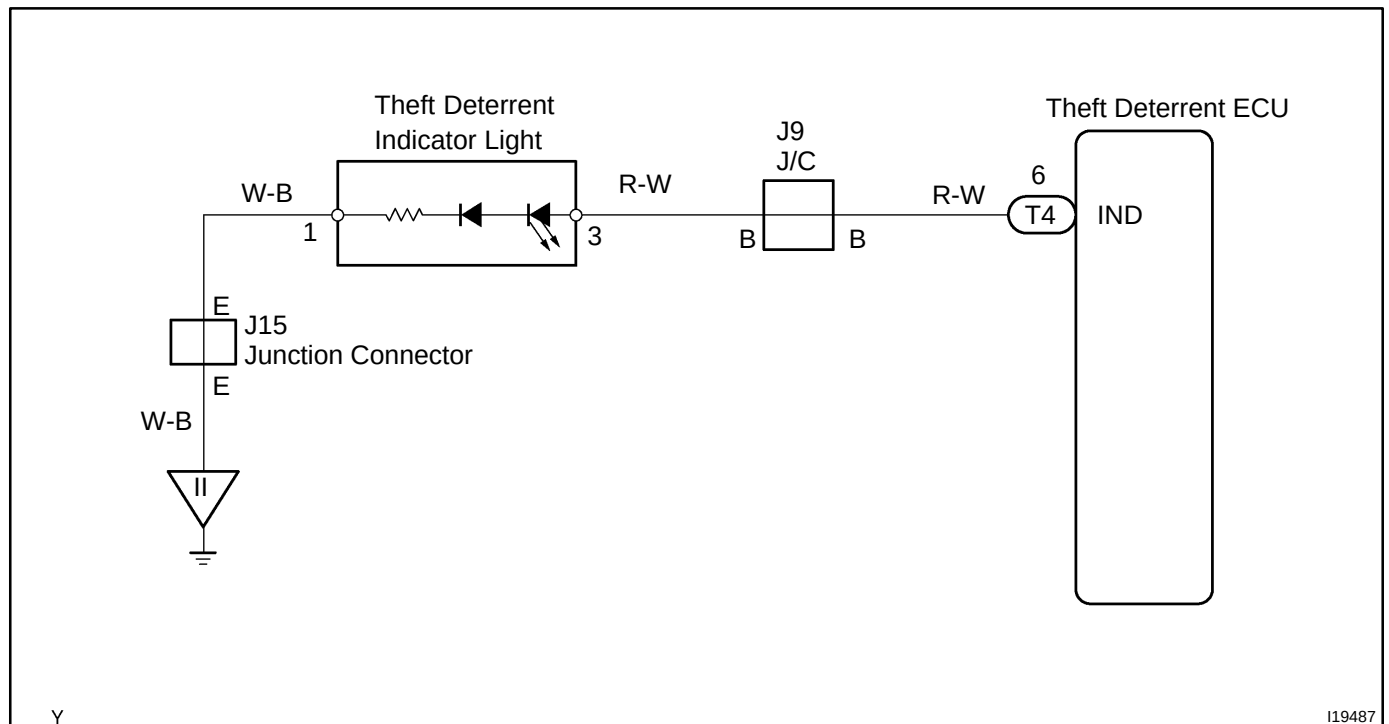

INSPECTION PROCEDURE

1 Check indicator light.

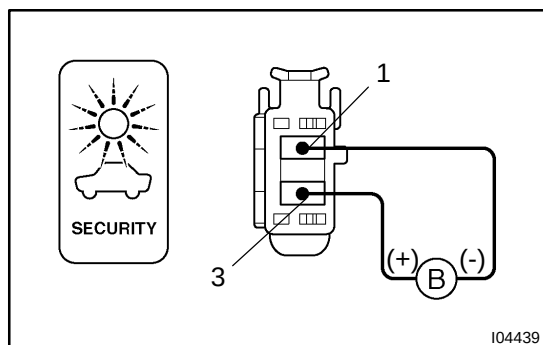**PREPARATION:**

Disconnect the indicator connector.

CHECK:

Connect the positive (+) lead to terminal 3 and negative (-) lead to terminal 1 of the indicator light connector.

OK:

Indicator light comes on.

NG

Replace combination meter.

OK

2 Check harness and connector between theft deterrent ECU and indicator light, indicator light and body ground (See page [IN-31](#)).

NG

Repair or replace harness or connector.

OK

Check and replace theft deterrent ECU.*1

*1: When there is a malfunction that prevents the theft deterrent system from being set, proceed to the next numbered circuit inspection shown on matrix chart (See page [DI-532](#)).