

PROBLEM SYMPTOMS TABLE

Proceed to the reference page shown in the matrix chart below for each malfunction symptom and trouble-shoot for each circuit.

HINT:

Troubleshooting of the theft deterrent system is based on the premise that the door lock control system is operating normally. Accordingly, before troubleshooting the theft deterrent system, first make certain that the door lock control system is operating normally.

Details of Problem			Inspecting Circuit*1	See page
The theft deterrent system cannot be set			1. Indicator light circuit	DI-533
			2. ECU power source circuit	DI-535
			3. Key unlock warning switch circuit	DI-549
			4. Back door key lock and unlock switch circuit	DI-553
			5. Back door courtesy switch circuit	DI-551
			6. Door key lock and unlock switch circuit	DI-553
			7. Door courtesy switch circuit	DI-557
			8. Door unlock detection switch circuit	DI-555
			9. Engine hood courtesy switch circuit	DI-559
The indicator light does not blink when system is set			Indicator light circuit	DI-533
When the system is set	When the side doors are unlocked	The system does not operate	Door unlock detection switch circuit	DI-555
	When the back door is opened by a method other than the key		Back door courtesy switch circuit	DI-551
	When the engine hood is opened		Engine hood courtesy switch circuit	DI-559
While the system is in warning operation		Horns do not sound	Horn relay circuit	DI-541
		Theft deterrent horn does not sound	Theft deterrent horn circuit	DI-538
		Headlights do not flash	Headlight control relay circuit	DI-543
		Taillights do not flash	Taillight control relay circuit	DI-545
		The door is not locked in unlock condition	Door unlock detection switch circuit	DI-555
When the system is set	It is not canceled when the ignition key is turned to ACC or ON position		Ignition switch circuit	DI-547
	It still operates when the back door is opened with the key		Back door key lock and unlock switch circuit	DI-553
System is still set even when a side door is open			Door courtesy switch circuit	DI-557
Even when the system is not set		Horns sound	Horn relay circuit	DI-541
		Theft deterrent horn sounds	Theft deterrent horn circuit	DI-538
		Headlights stay on	Headlight control relay circuit	DI-543
		Taillights stay on	Taillight control relay circuit	DI-545

*1: If numbers are given to the circuit proceed with troubleshooting in the order indicated by those numbers.