




CYLINDER HEAD COMPONENTS


EM087-05

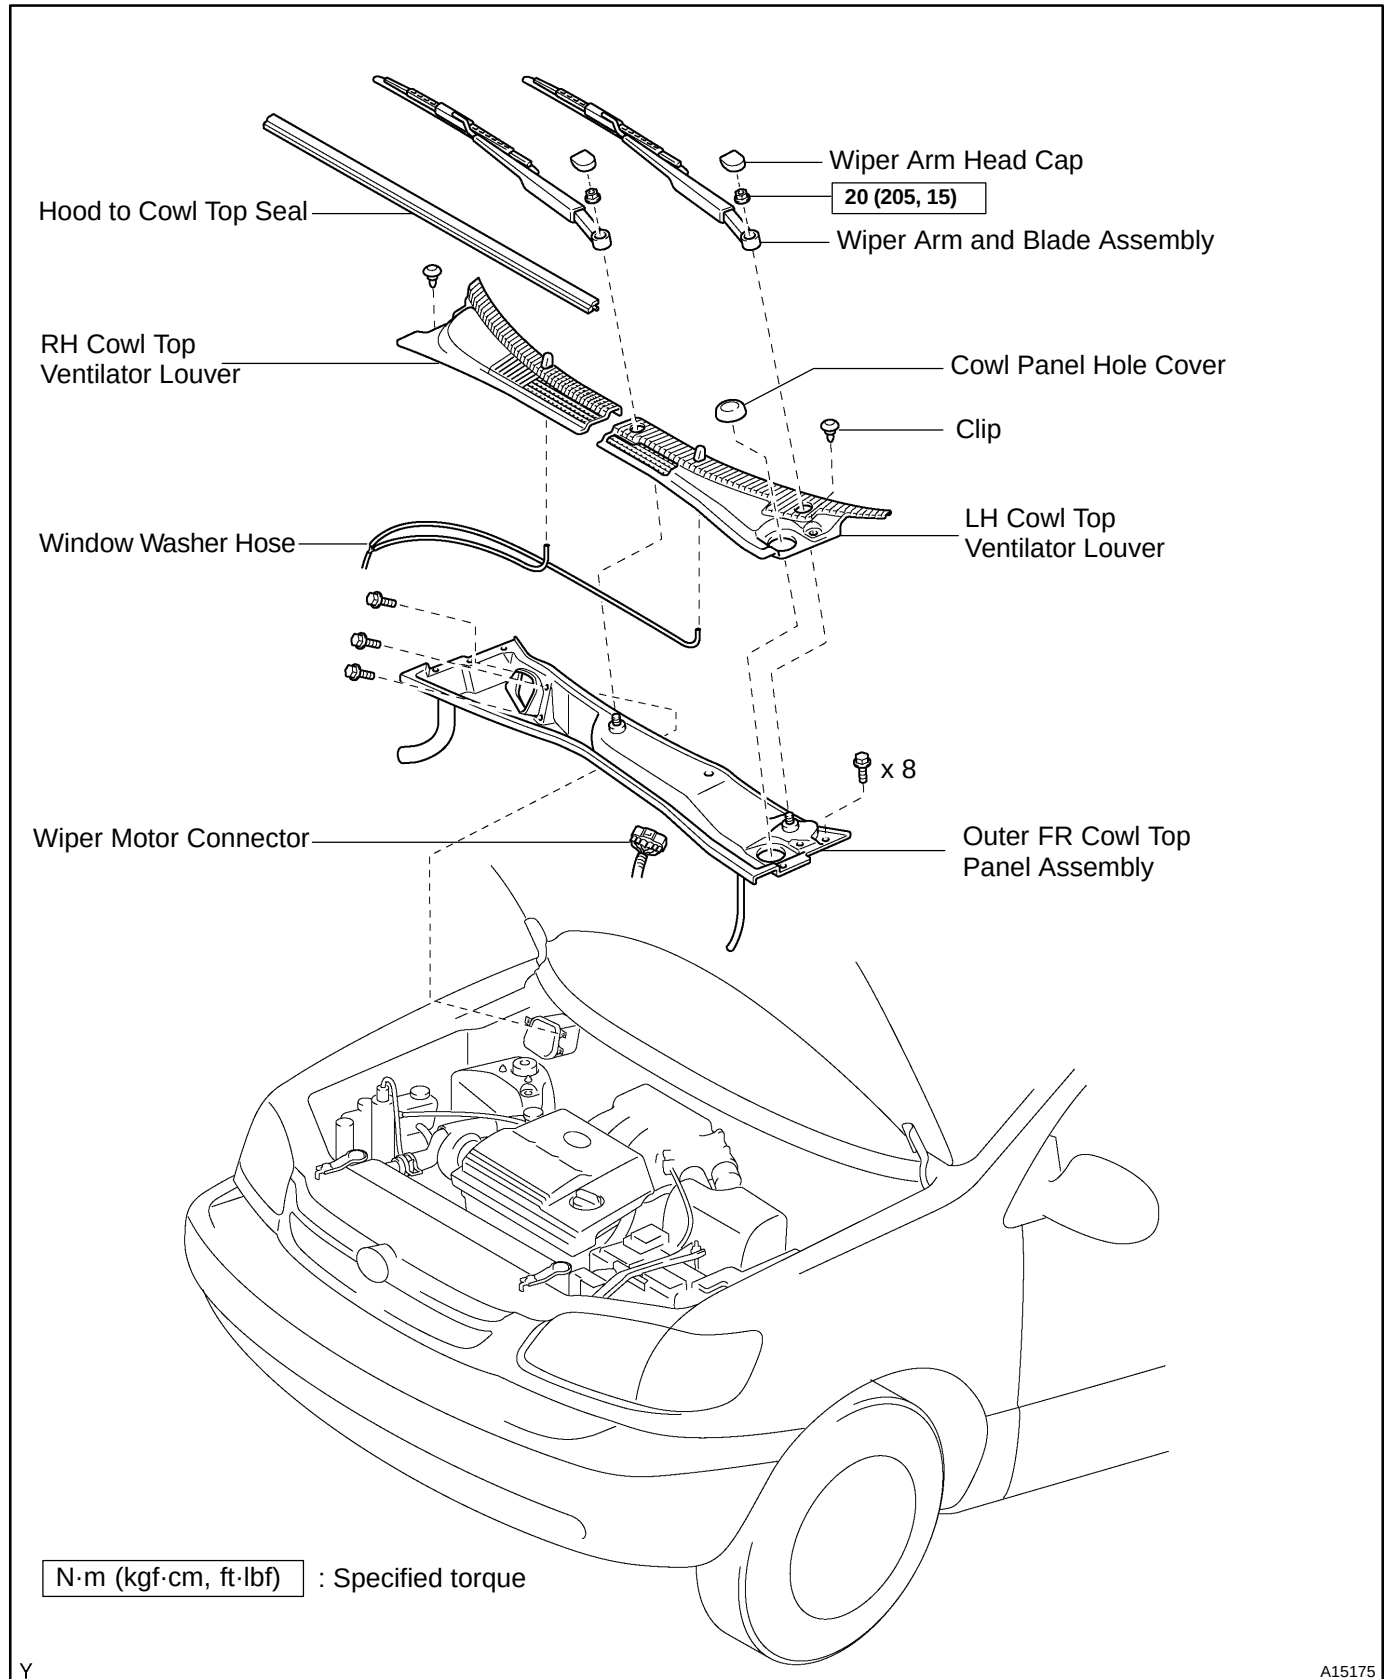

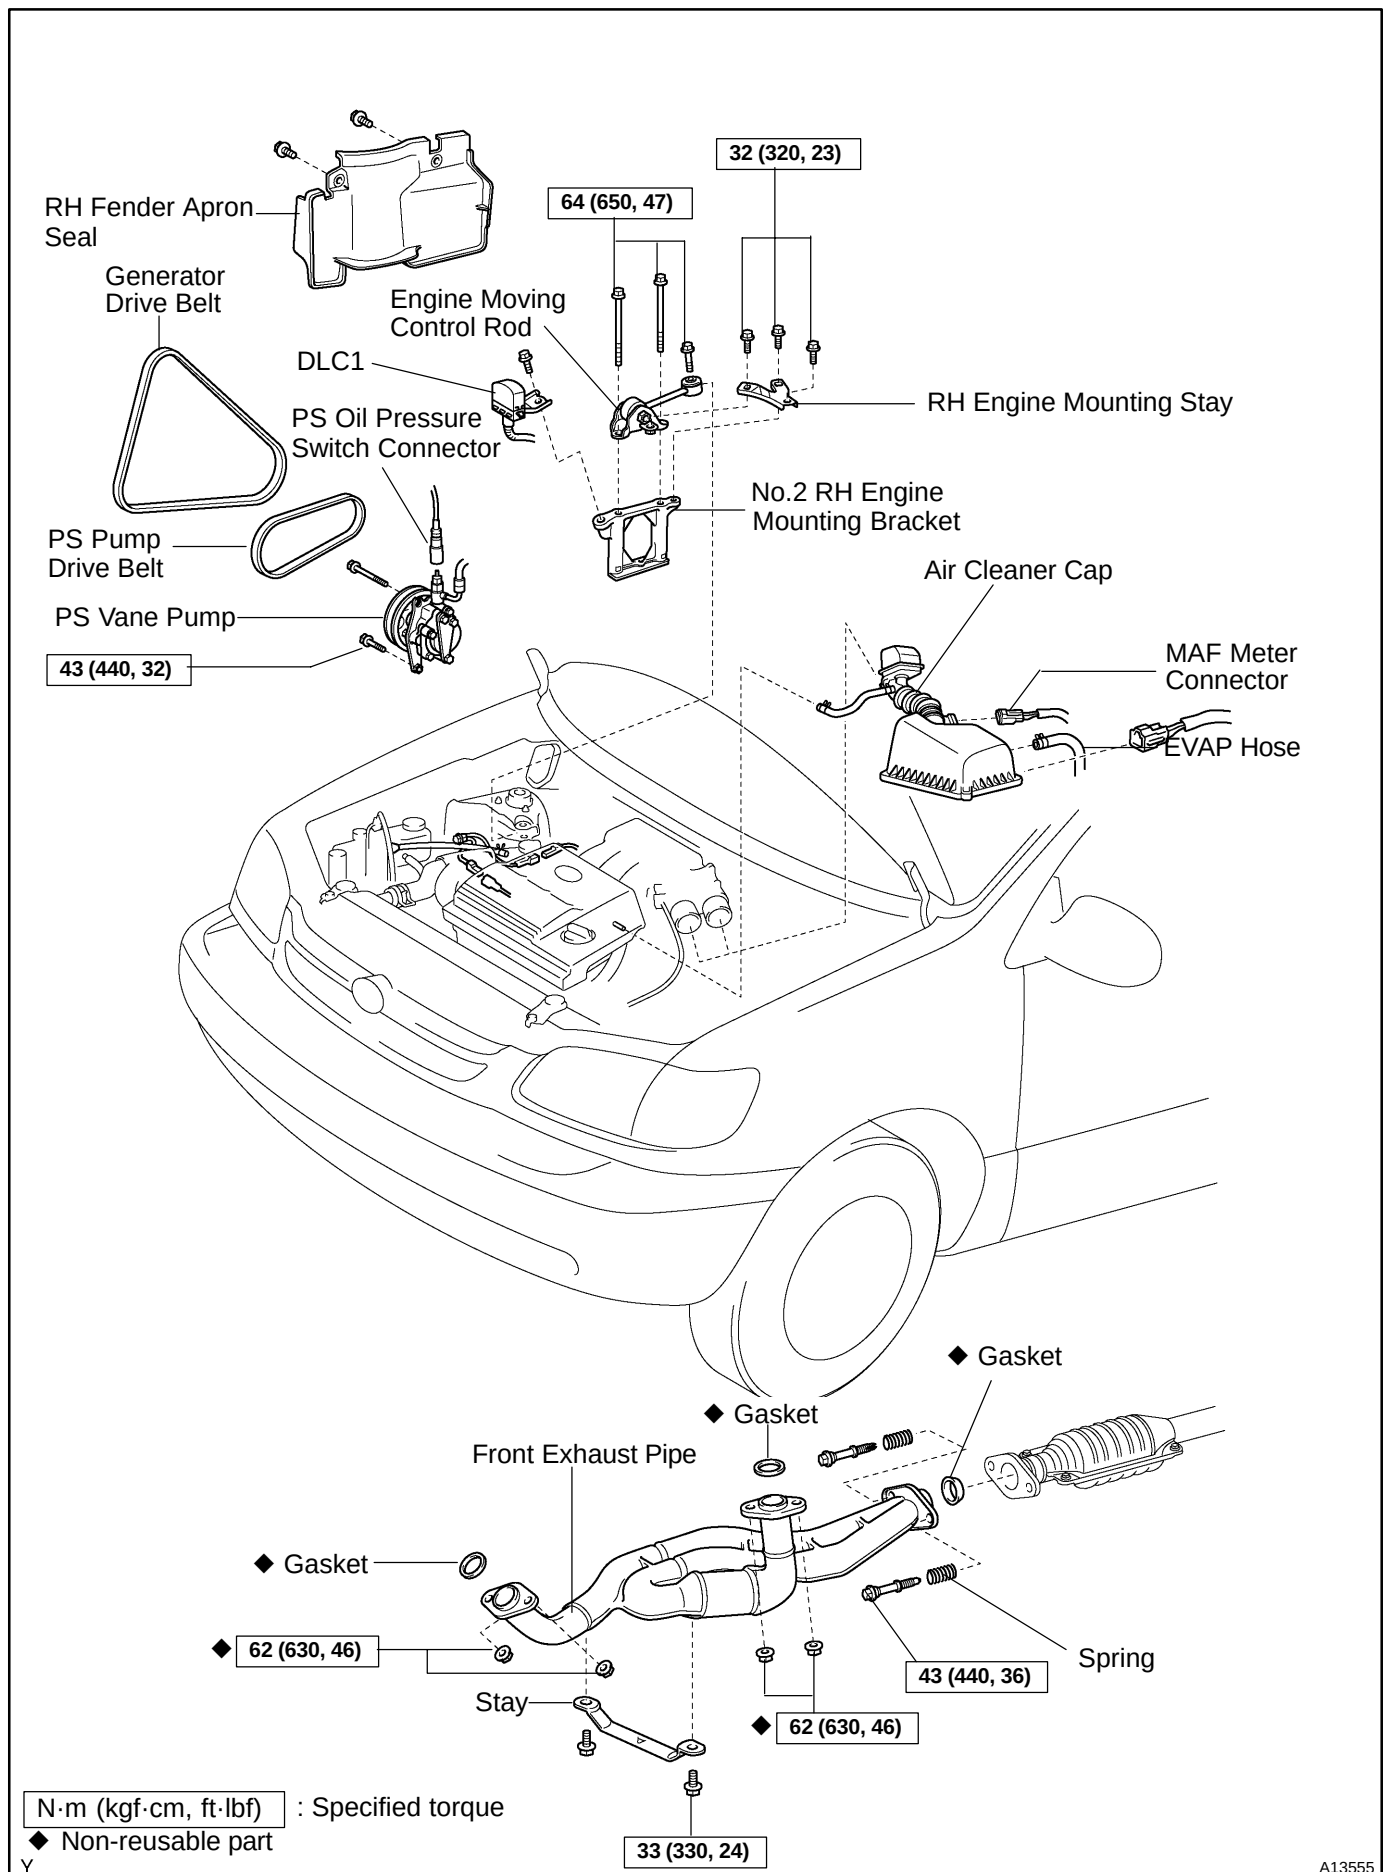


A13555

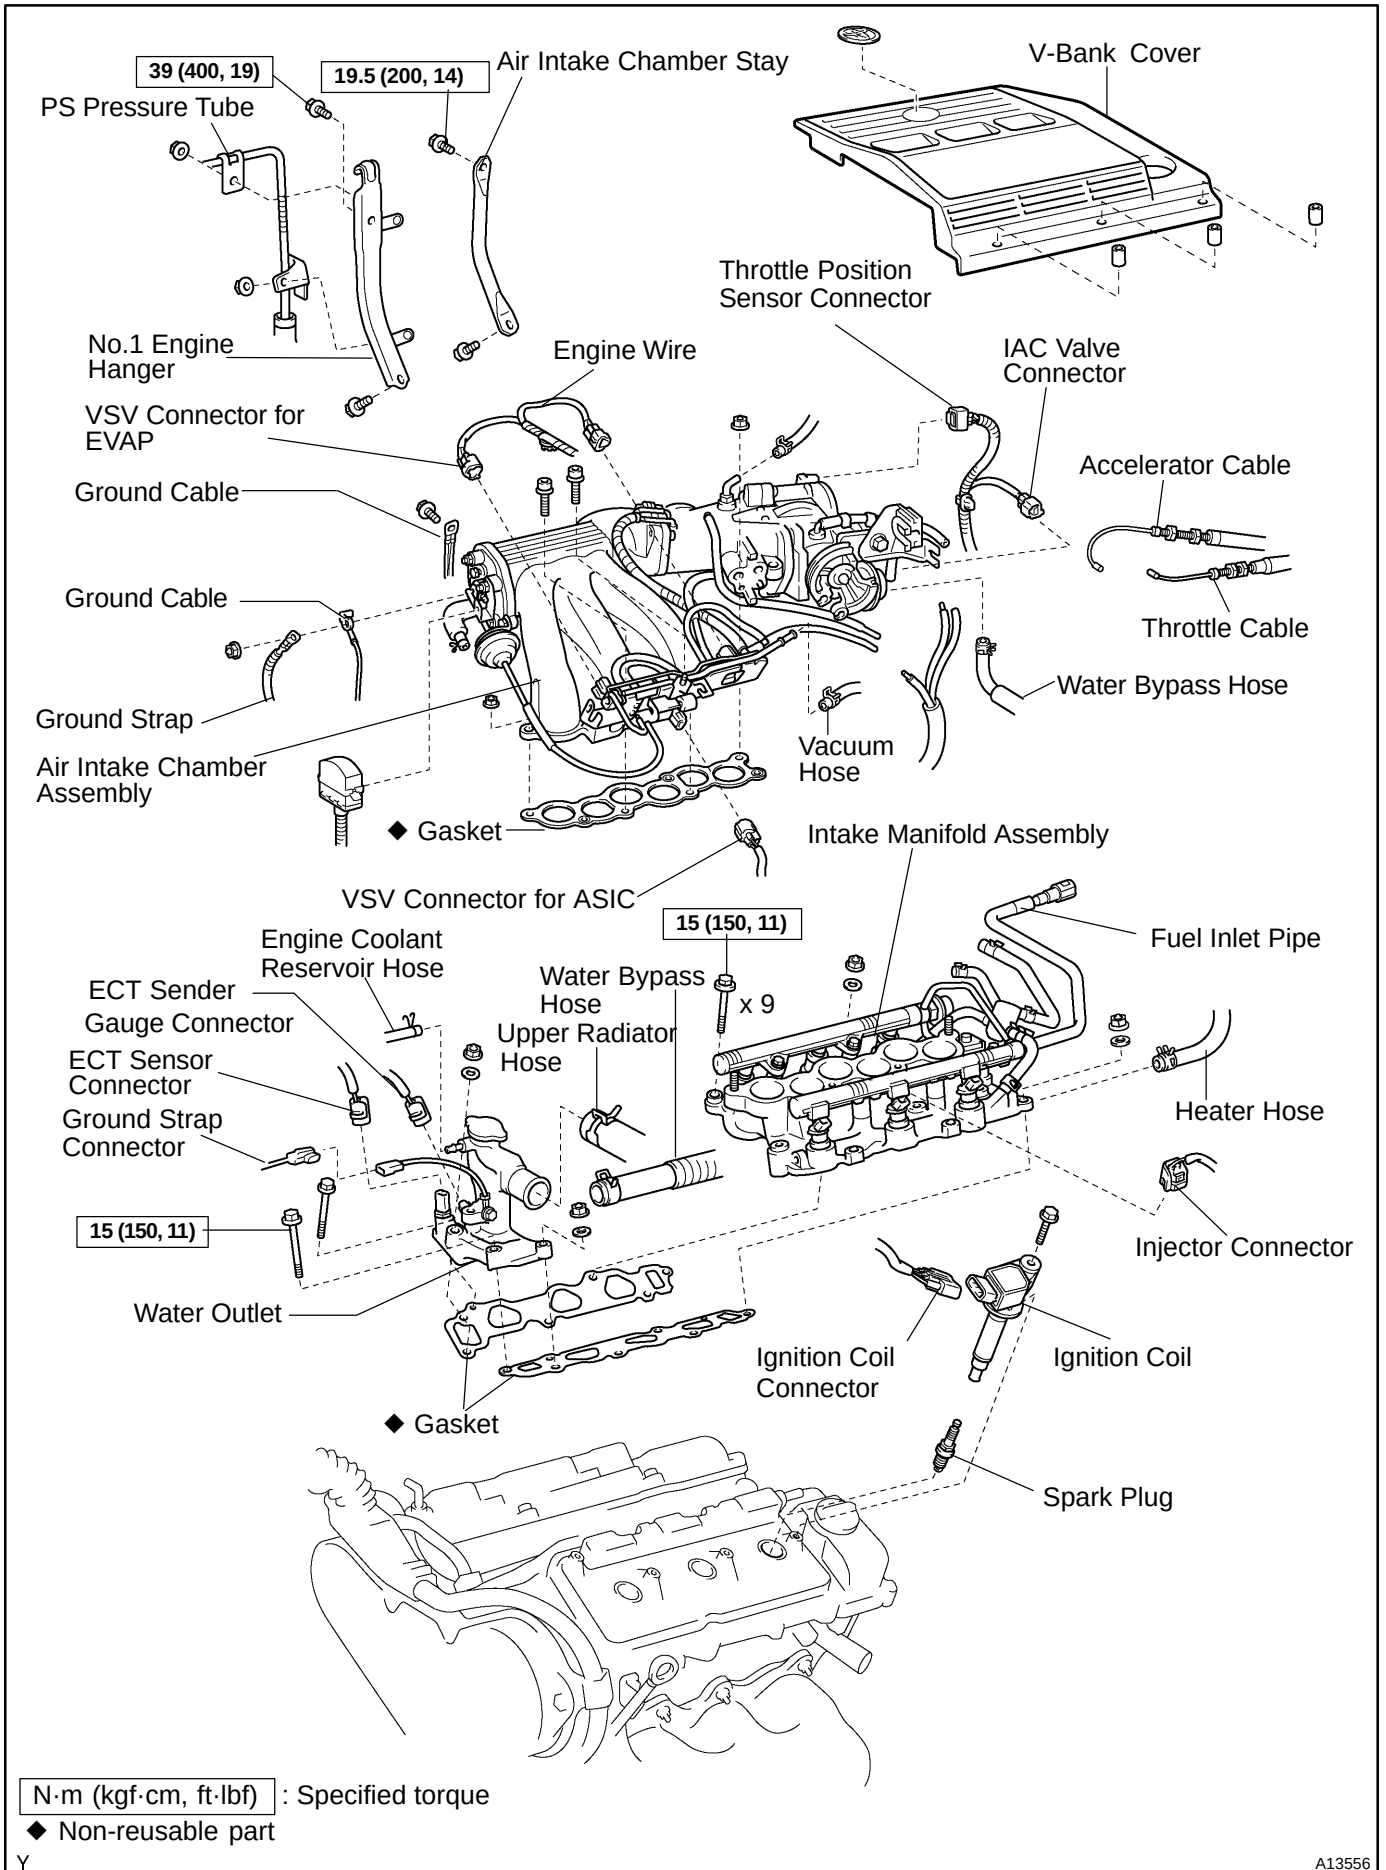


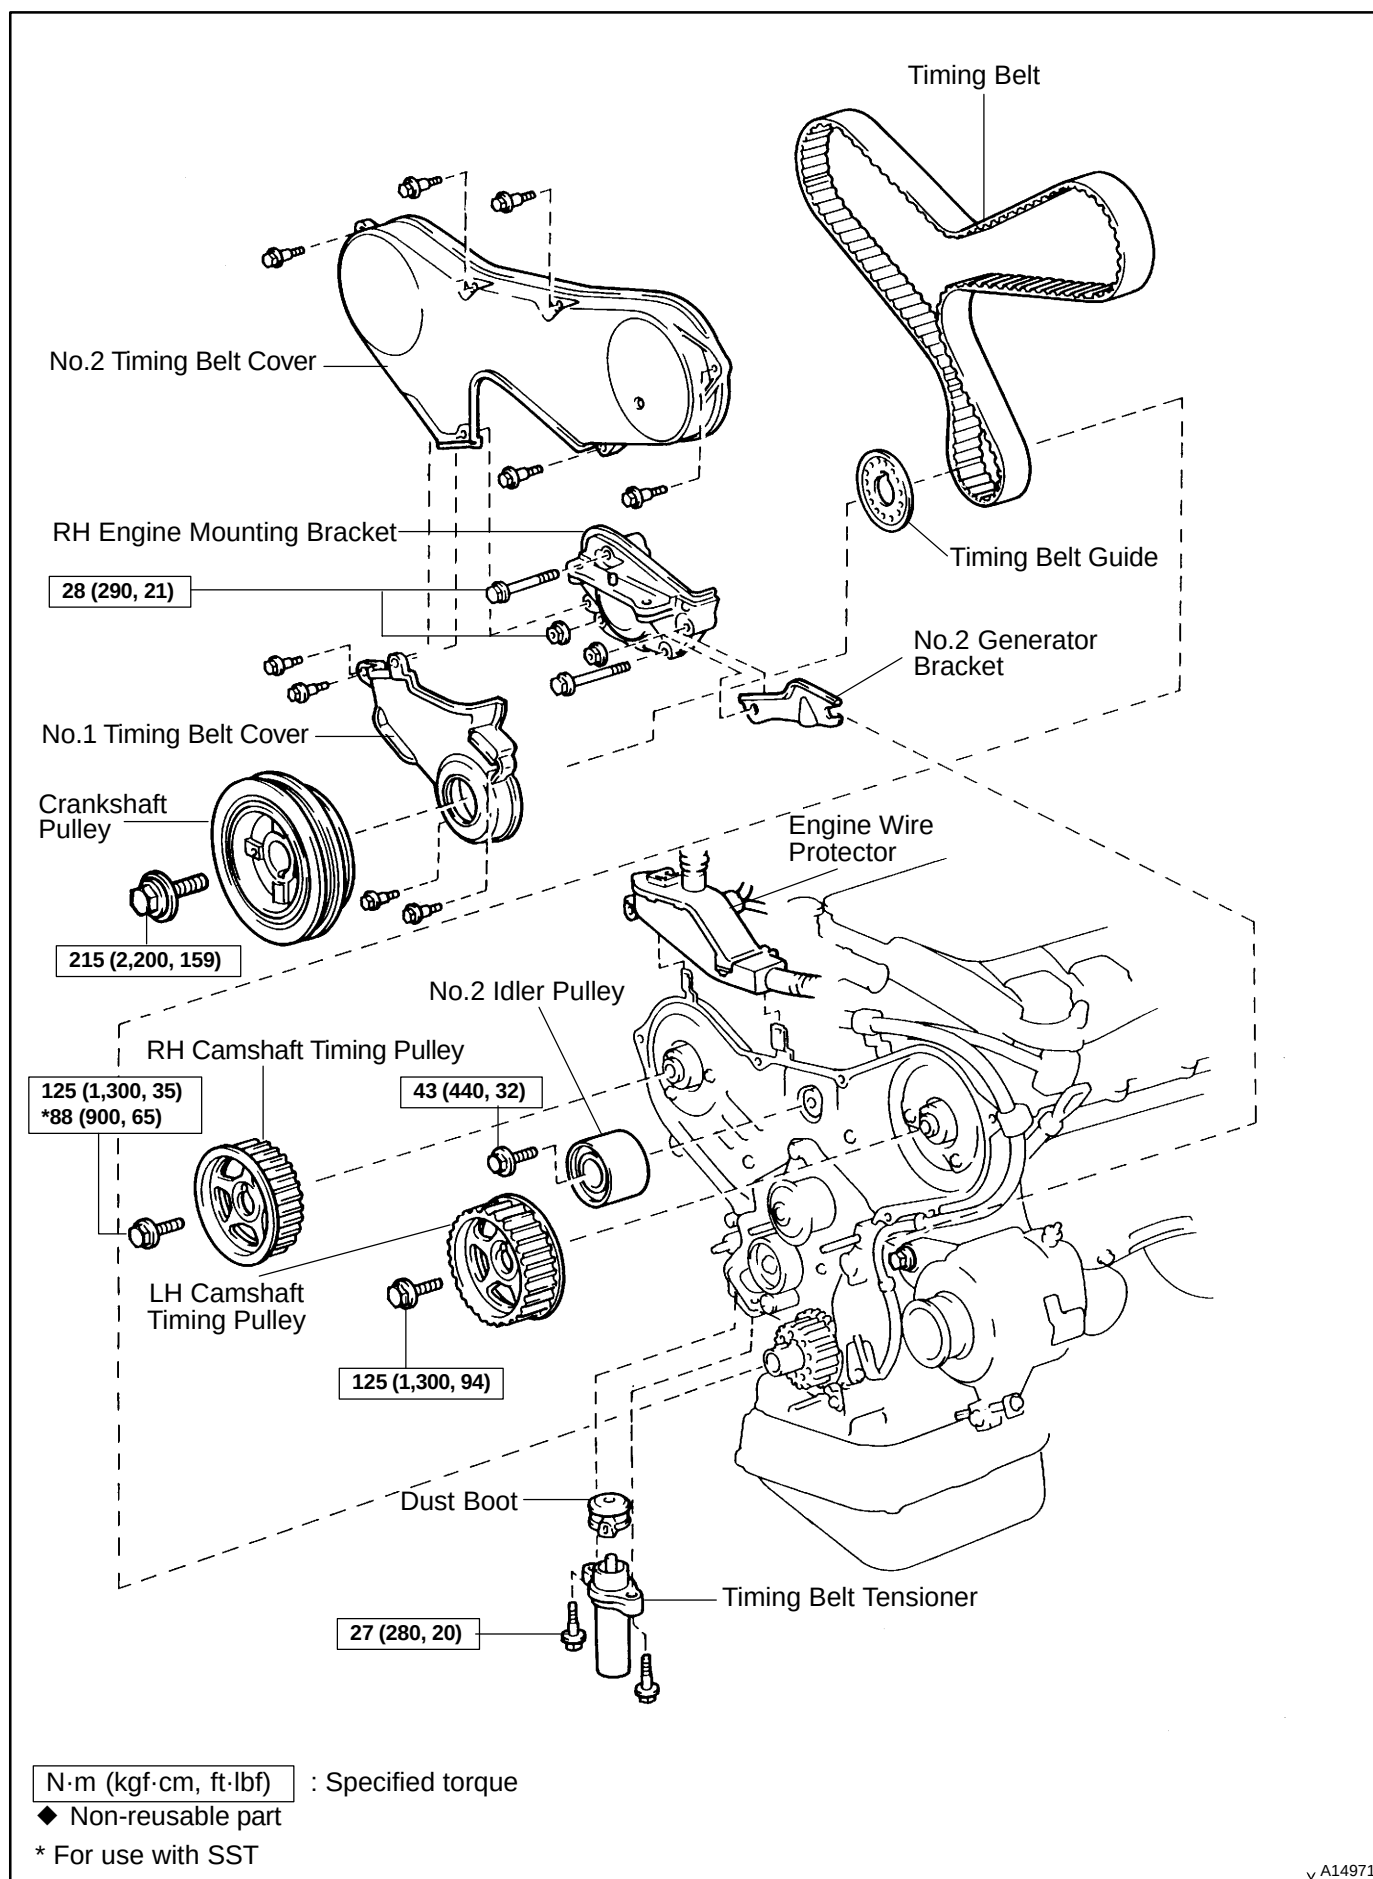

A14971

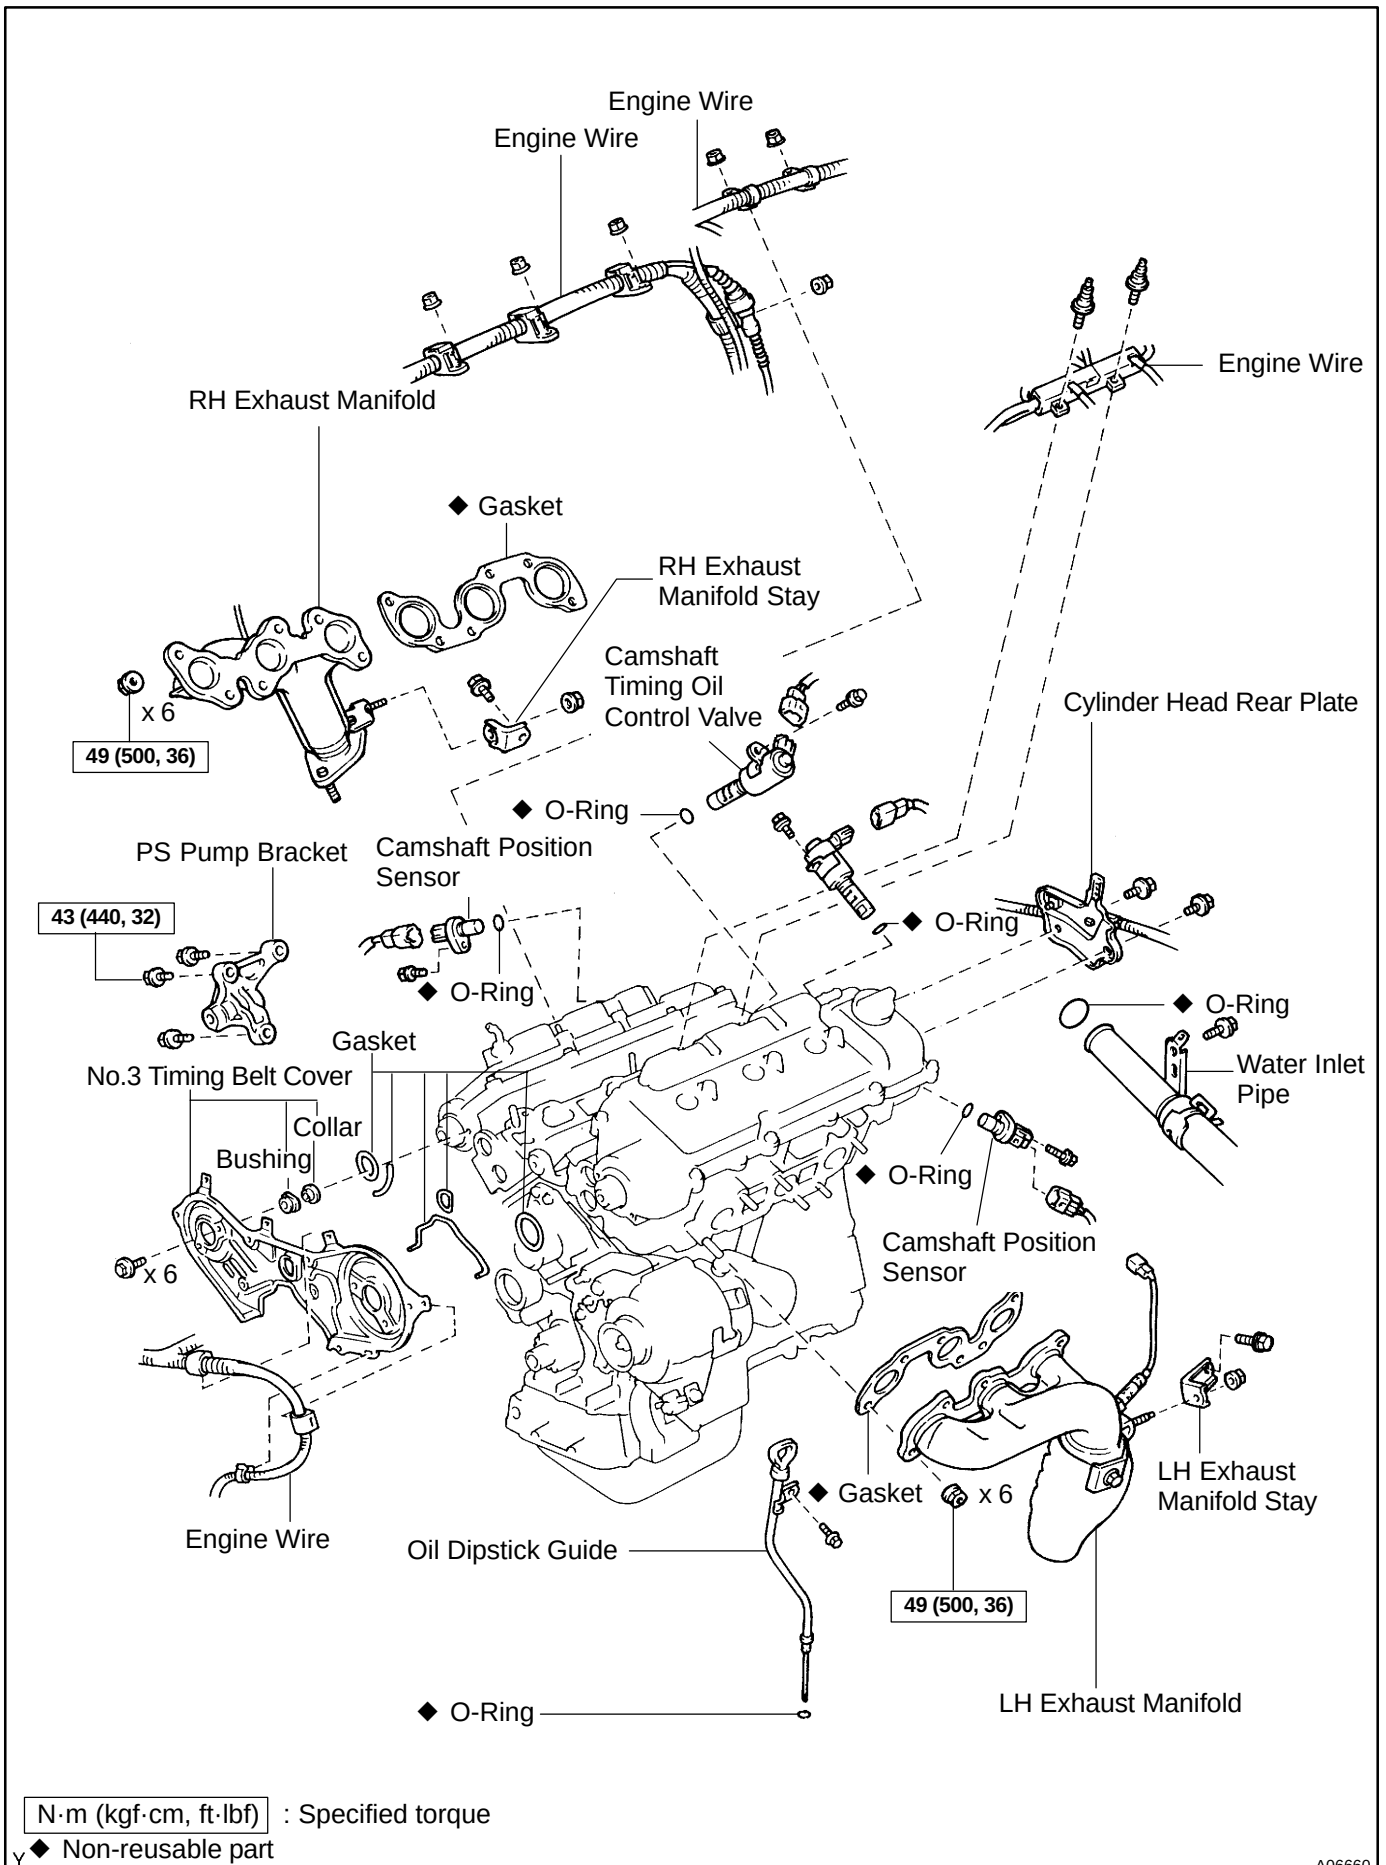

A06660

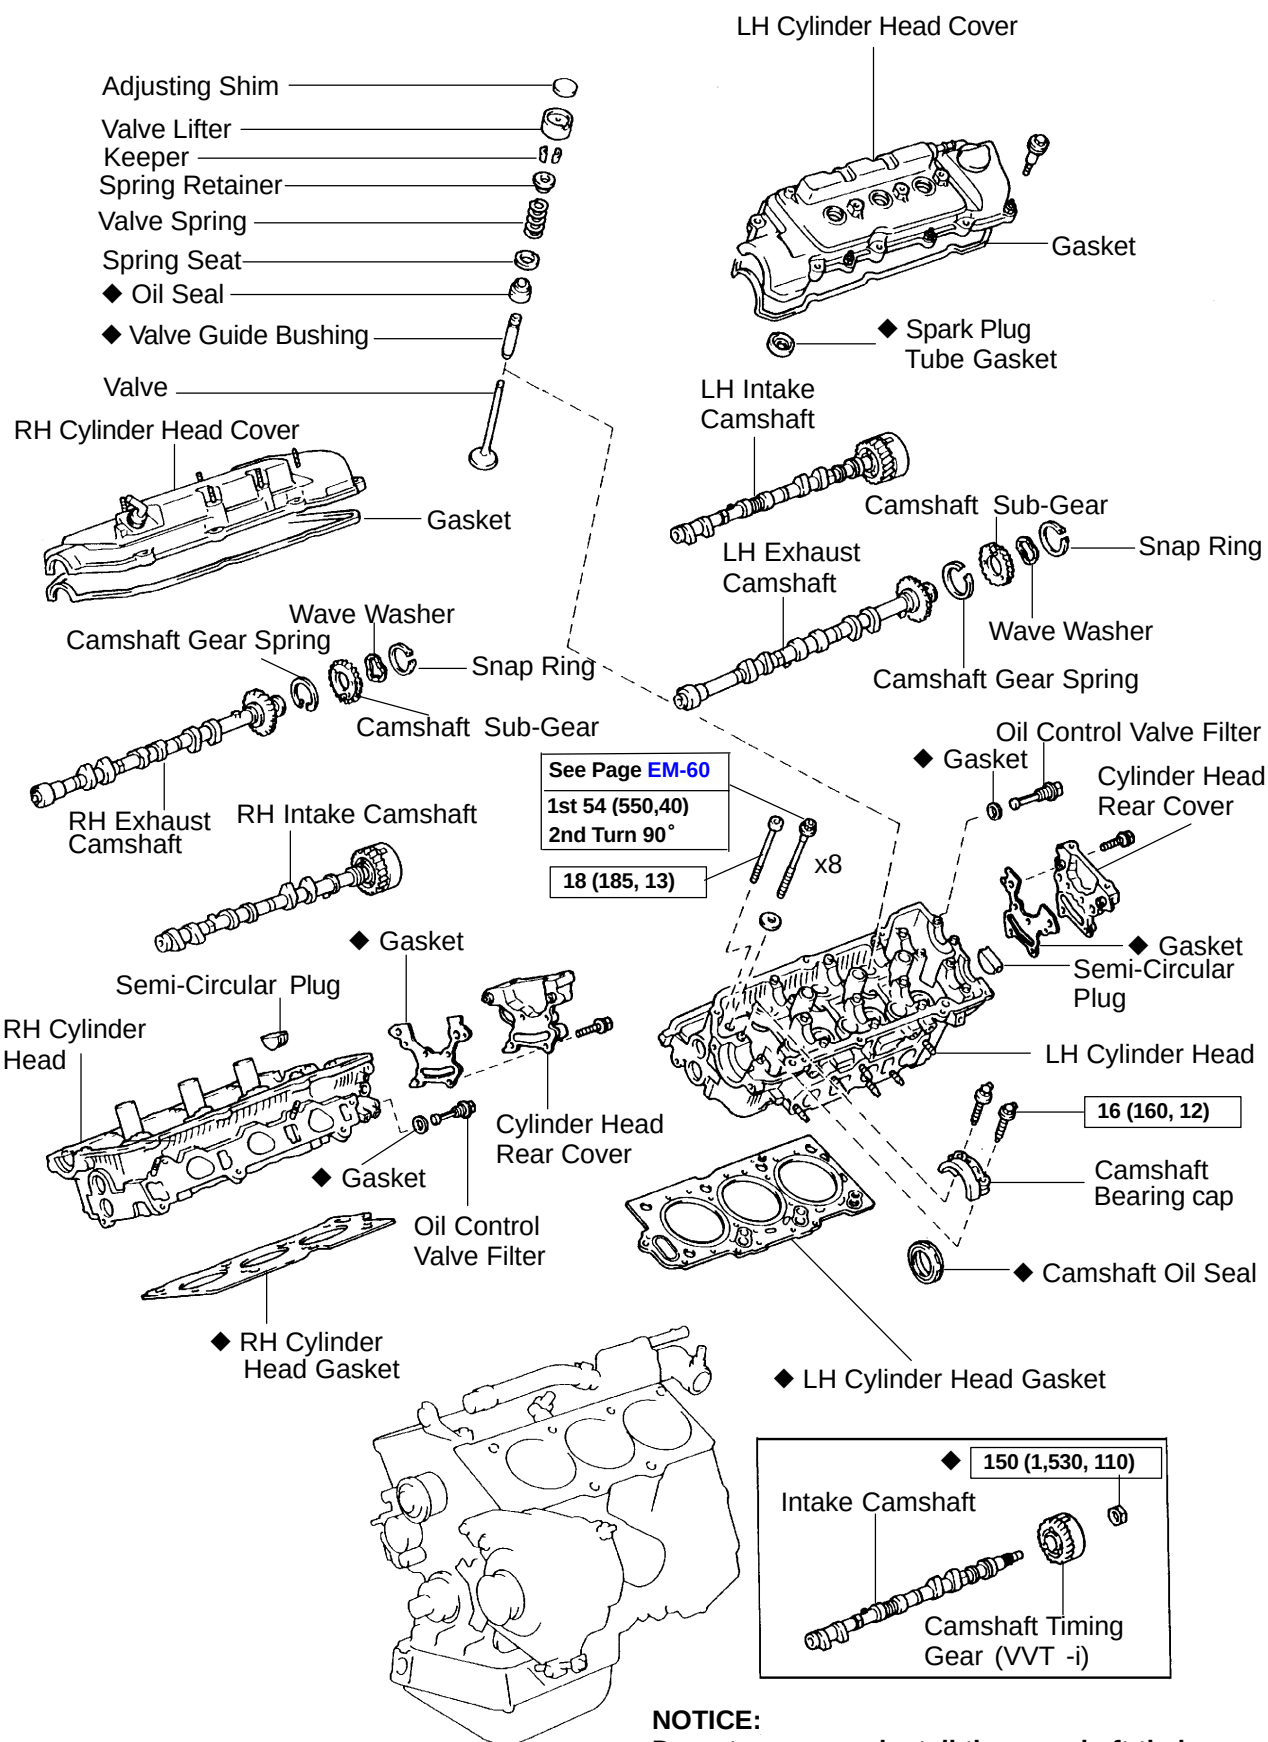

N·m (kgf·cm, ft·lbf) : Specified torque
 ◆ Non-reusable part

NOTICE:
 Do not remove or install the camshaft timing gear (VVT -i) beside changing VVT -i or the camshaft

A05703