



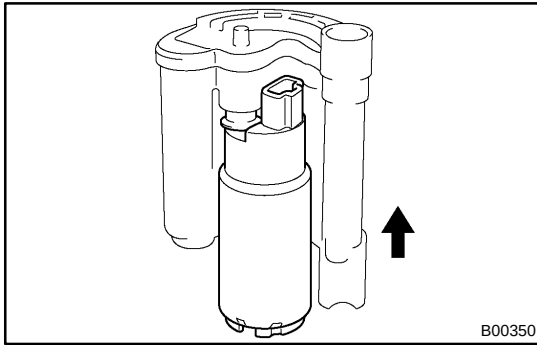

REASSEMBLY


1. INSTALL FUEL PUMP

Connect the fuel pump to the fuel filter.

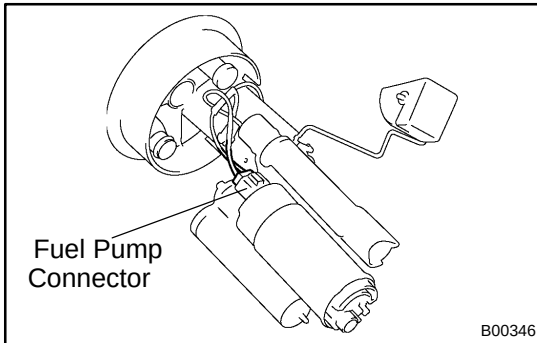


2. INSTALL FUEL FILTER AND FUEL PUMP

(a) Connect the fuel pump connector to the fuel pump.

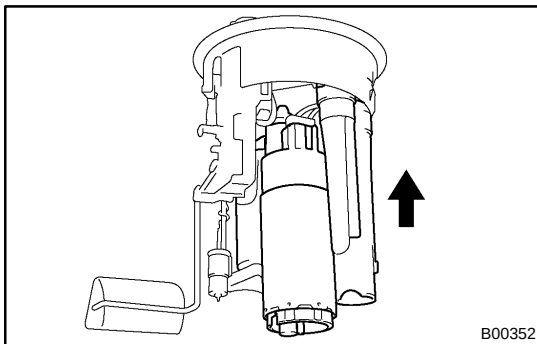


(b) Install the fuel filter and fuel pump to the fuel suction plate.

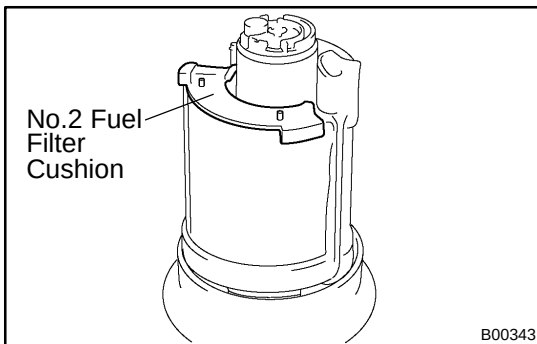

3. INSTALL NO.1 FUEL SUCTION SUPPORT

(a) Install the No.2 fuel filter cushion to the fuel filter.

(b) Install the No.1 fuel suction support to the fuel suction plate.

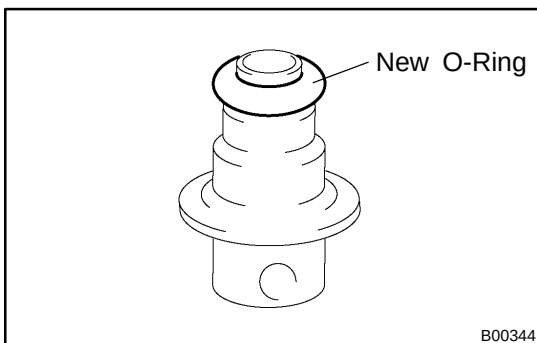


4. INSTALL FUEL PRESSURE REGULATOR

(a) Install the O-ring to the pressure regulator.


HINT:

Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.

(b) Connect the pressure regulator from the fuel filter.

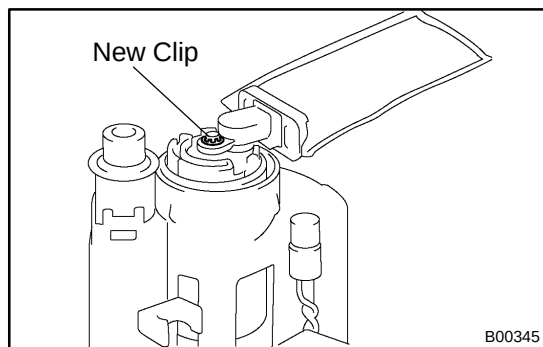**5. INSTALL FUEL PUMP FILTER**

- (a) Connect the fuel pump filter to the fuel pump.
- (b) Install the new clip.
- (c) Install the rubber cushion.

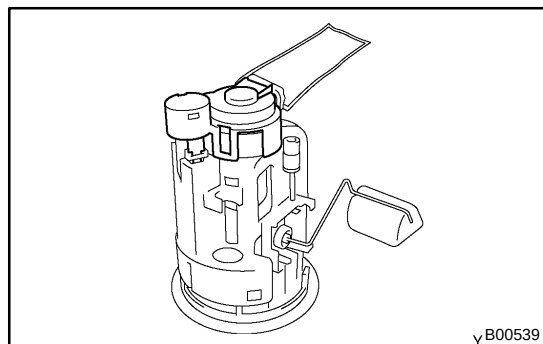**6. INSTALL NO.2 FUEL SUCTION SUPPORT**

Install the No.2 fuel suction support to the No.1 fuel suction support.

7. INSTALL VAPOR PRESSURE SENSOR

Install the vapor pressure sensor and connect the joint clip to the No.1 fuel suction support.