


REMOVAL

1. **REMOVE RIGHT AND LEFT REAR WHEELS**
Torque: 104 N·m (1,050 kgf·cm, 77 ft·lbf)
2. **REMOVE RIGHT AND LEFT BRAKE DRUMS**

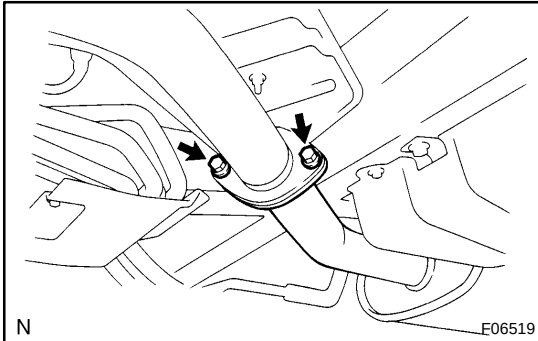

3. **DISCONNECT EXHAUST TAILPIPE**


Remove the 2 bolts, nuts and gasket, and disconnect the exhaust tailpipe.

Torque: 56 N·m (550 kgf·cm, 41 ft·lbf)

4. **REMOVE PARKING BRAKE CABLE CLAMP**

Remove the 3 bolts and parking brake cable clamps.

Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)

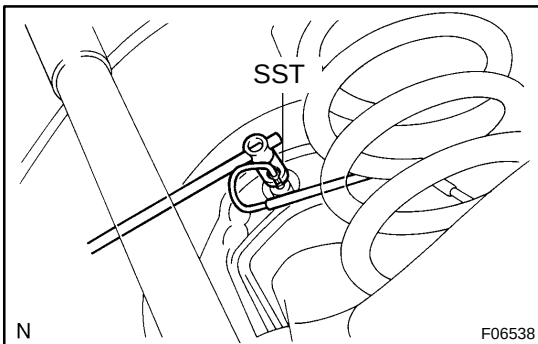


5. **REMOVE RIGHT AND LEFT BRAKE LINES**

- (a) Using SST, disconnect the right and left brake lines from the brake wheel cylinders.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

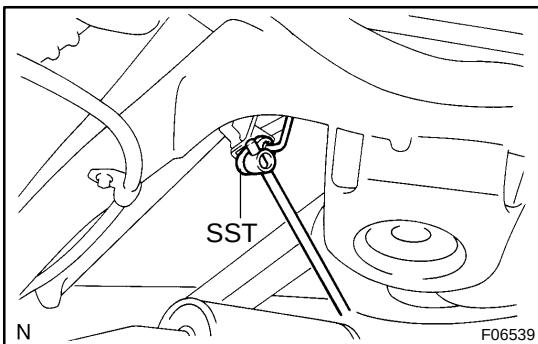

- (b) Using SST, disconnect the right and left brake lines from the flexible hoses, and remove the clips and brake lines.
SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

6. **DISCONNECT RIGHT AND LEFT ABS SPEED SENSOR WIRE HARNESSES**

- (a) Disconnect the right and left ABS speed sensor connectors.

- (b) Remove the 2 bolts and right and left ABS speed sensor wire harness clamps from the axle beam.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

- (c) Remove the 6 clips, and disconnect the right and left ABS speed sensor wire harness from the axle beam.


7. **REMOVE RIGHT AND LEFT REAR AXLE HUBS**

(See page [SA-44](#))

8. **REMOVE RIGHT AND LEFT REAR BRAKE DRUM ASSEMBLIES AND AXLE BEARING RETAINERS**

9. **DISCONNECT RIGHT AND LEFT SHOCK ABSORBERS AND COIL SPRINGS FROM AXLE BEAM**

(See page [SA-48](#))

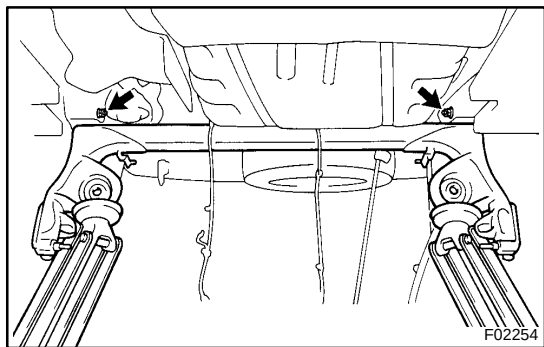**10. REMOVE AXLE BEAM**

Remove the 2 nuts, bolts and axle beam.

Torque: 88 N·m (900 kgf·cm, 65 ft·lbf)

HINT:

At the time of tightening the nuts, adjust the vehicle height by pushing down or lifting up the body (See page [SA-7](#)).