


INSTALLATION

1. INSTALL STEERING COLUMN ASSEMBLY

- Install the steering column assembly with the 4 nuts.
Torque: 25 N·m (260 kgf·cm, 19 ft·lbf)
- Install the return spring.
- Connect the connectors.

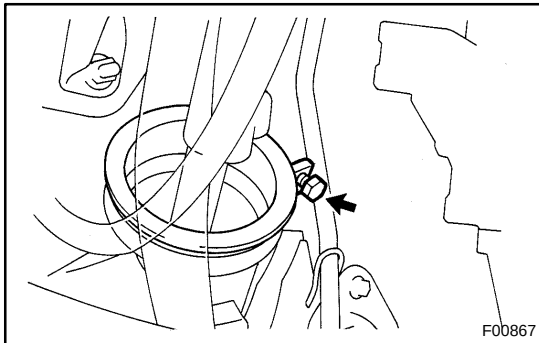

- Tighten the clamp bolt.


2. INSTALL INTERMEDIATE SHAFT ASSEMBLY

Install the intermediate shaft assembly with the bolt.

Torque: 35 N·m (360 kgf·cm, 26 ft·lbf)

3. CONNECT TRANSMISSION CONTROL CABLE ASSEMBLY

Connect the transmission control cable assembly to the shift lever assembly.

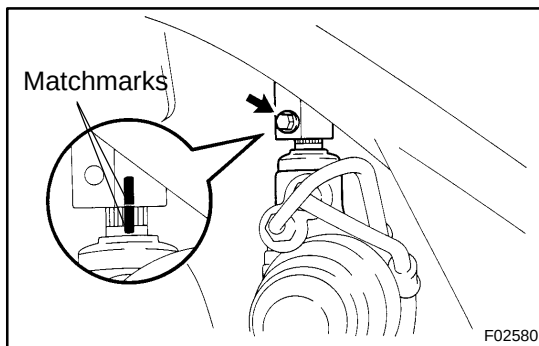

4. CONNECT INTERMEDIATE SHAFT ASSEMBLY

- Align the matchmarks on the intermediate shaft assembly and control valve shaft.

- Install the bolt.

Torque: 35 N·m (360 kgf·cm, 26 ft·lbf)

5. INSTALL SPIRAL CABLE (See page [BE-17](#))

6. INSTALL COMBINATION SWITCH WITH SPIRAL CABLE

- Install the combination switch with spiral cable with the 3 screws.

- Connect the airbag connector.

- Connect the 5 connectors.

7. INSTALL UPPER AND LOWER COLUMN COVERS

- Install the column upper and lower covers with the 3 screws

- Install the lower No. 2 cover to the lower cover.

8. INSTALL LOWER INSTRUMENT FINISH PANEL

- Install the LH lower instrument finish panel with the 2 bolts.

- Connect the connector.

9. INSTALL LOWER LH FINISH PANEL

- Connect the connector.


- Install the lower LH finish panel with the 2 screws.

- Connect the hood lock control lever with the 2 screws.

10. INSTALL COWL SIDE TRIM

Install the cowl side trim with the clip.

11. INSTALL FRONT DOOR INSIDE SCUFF PLATE

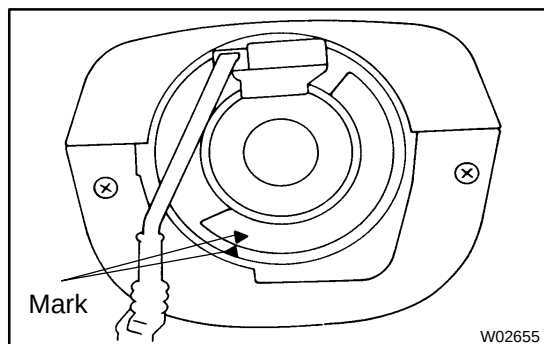**12. CENTER SPIRAL CABLE**

- (a) Check that the front wheels are facing straight ahead.
- (b) Turn the cable counterclockwise by hand until it becomes harder to turn.
- (c) Then rotate the cable clockwise about 3 turns to align the mark.

HINT:

The cable will rotate about 3 turns to either left or right of the center.


13. INSTALL STEERING WHEEL

- (a) Align the matchmarks on the steering wheel and main shaft.
- (b) Install the steering wheel set nut.
Torque: 50 N·m (510 kgf·cm, 37 ft·lbf)
- (c) Connect the connector.

14. INSTALL STEERING WHEEL PAD**NOTICE:**

- Never use airbag parts from another vehicle. When replacing parts, replace with new ones.
- Make sure the wheel pad is installed to the specified torque.
- If the wheel pad has been dropped, or there are cracks, dents or other defects on the case or connector, replace the wheel pad with a new one.
- When installing the wheel pad, take care that the wirings do not interfere with other parts and are not pinched between other parts.

- (a) Connect the airbag connector.

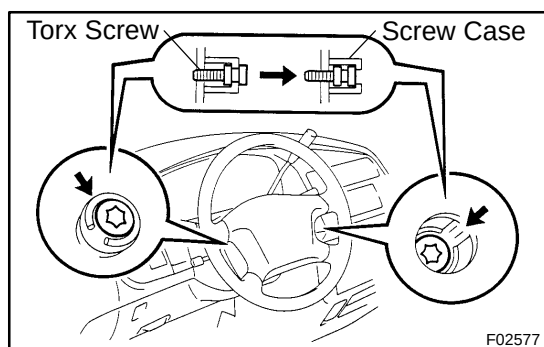

- (b) Install the steering wheel pad after confirming that the circumference groove of the torx screws is caught on the screw case.
- (c) Using a torx socket wrench, torque the 2 screws.

Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)

15. INSTALL STEREO COMPONENT CONTROLLER ASSEMBLY

Install the stereo component controller assembly.

16. CHECK STEERING WHEEL CENTER POINT