

INSTALLATION


NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Install the No. 1 and No. 2 safety pad retainer with the 2 bolts.

Torque: 5.0 N·m (51 kgf·cm, 42 in·lbf)

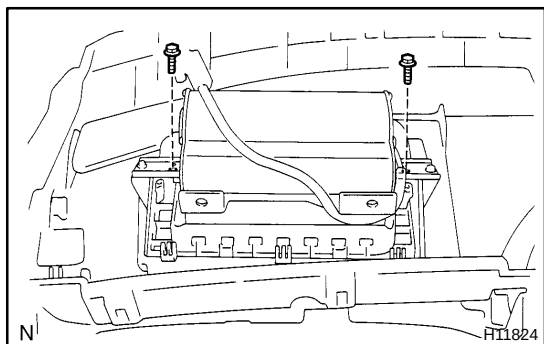

- (b) Install the front passenger airbag assembly with the 5 clips, then install the 2 bolts.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

NOTICE:


If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.

2. INSTALL NO. 2 HEATER TO REGISTER DUCT

- (a) Install the No. 2 heater to register duct to the instrument panel.
(b) Install and torque the 4 screws.

3. INSTALL INSTRUMENT PANEL

(See page [BO-106](#))

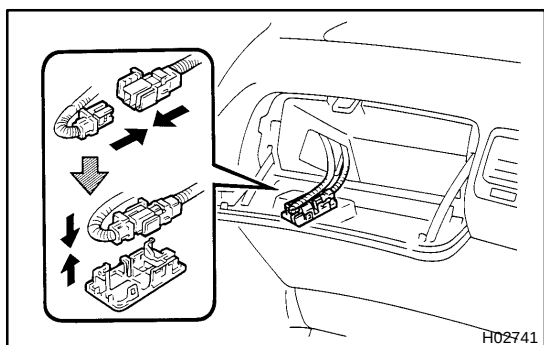

4. CONNECT FRONT PASSENGER AIRBAG ASSEMBLY CONNECTOR

- (a) Connect the front passenger airbag assembly connector.
(b) Install the connector to the glove compartment door finish plate.
(c) Install the glove compartment door finish plate with the connector to the glove compartment.