


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is at ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace with new parts.

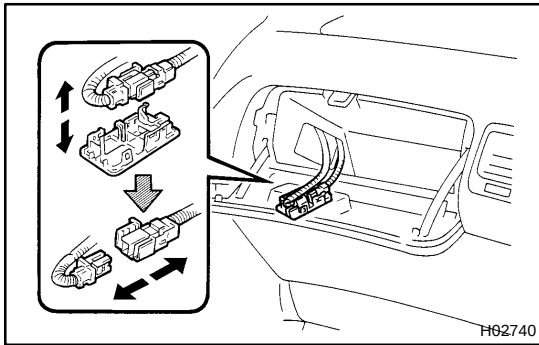

1. DISCONNECT FRONT PASSENGER AIRBAG ASSEMBLY CONNECTOR

- Open the glove compartment door.
- Using a screwdriver, remove the glove compartment door finish plate.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.


- Pull up the connector from the glove compartment door finish plate.
- Disconnect the front passenger airbag assembly connector.

2. REMOVE INSTRUMENT PANEL

(See page [BO-101](#))


3. REMOVE NO. 2 HEATER TO REGISTER DUCT

Remove the 4 screws and No. 2 heater to register duct from the instrument panel.

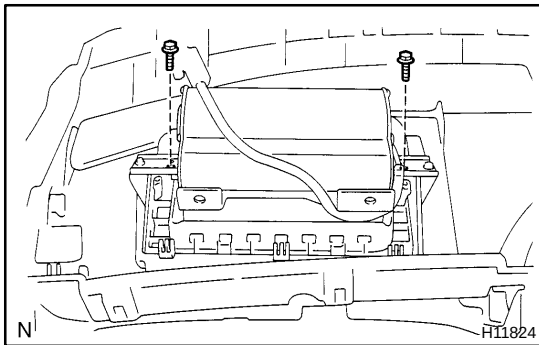

4. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- Remove the 2 bolts.

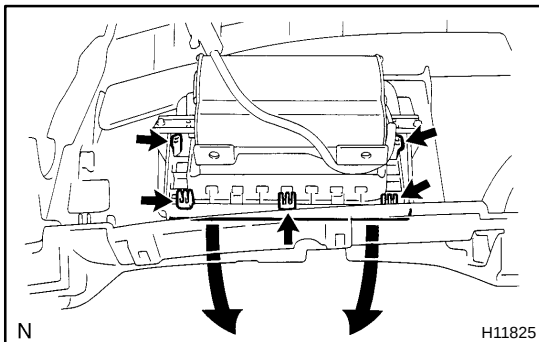

- Pry off the 5 clips and remove the front passenger airbag assembly as shown in the illustration.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing downward.
 - Never disassemble the front passenger airbag assembly.
- Remove the No. 1 and No. 2 safety pad retainer with the 2 bolts.