


INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

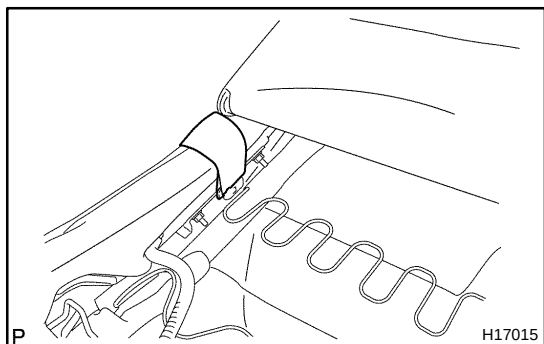

1. INSTALL SEATBACK FRAME

- (a) Install the seatback frame to the seatback cover with pad.
- (b) Engage the hook to the seatback frame.


2. INSTALL SEATBACK ASSEMBLY

Install the seatback assembly to the seat adjuster with the 4 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)


3. INSTALL ARMREST

4. INSTALL ASSIST GRIP

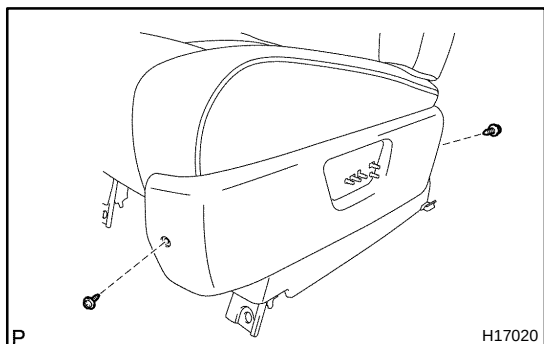

5. INSTALL FRONT SEAT CUSHION SHIELD

- (a) Install the front seat cushion shield with the 2 screws.
- (b) Employ the same manner described above to the other side.

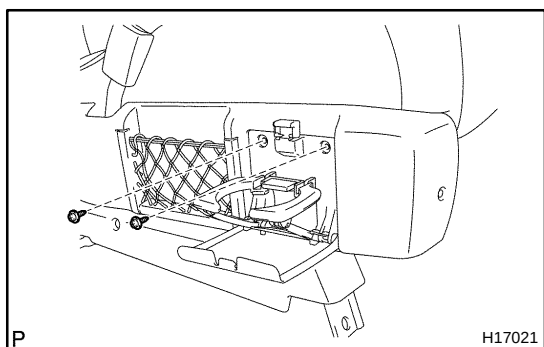

6. INSTALL CUP HOLDER

Slide the cup holder downward, and install it with 2 screws.

7. w/ Manual adjuster:


INSTALL RECLINING ADJUSTER KNOB

8. w/Manual adjuster:

INSTALL RECLINING ADJUSTER RELEASE HANDLE

9. w/ Power adjuster:

INSTALL POWER SEAT SWITCHES

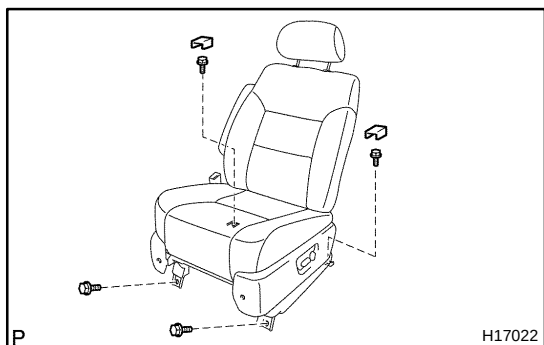

10. INSTALL FRONT SEAT

NOTICE:

When mounting the seat to the vehicle, take care not to damage the airbag wire harness.

- (a) Connect the side airbag connector.
- (b) Slide the front seat to the most front position.

NOTICE:

Make sure that seat adjuster locks.

- (c) Without holding the seat track handle, mount the seat to the vehicle.

HINT:

If holding the seat track handle, the adjusted rearmost position slip off.

- (d) Tighten the bolts on the front side temporarily, from the bolt on the inner side tighten them completely.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

- (e) Slide the seat to the most front position to install the bolts on the rear side.

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

- (f) Install the 2 seat track covers.