



CIRCUIT

w/o Tachometer:

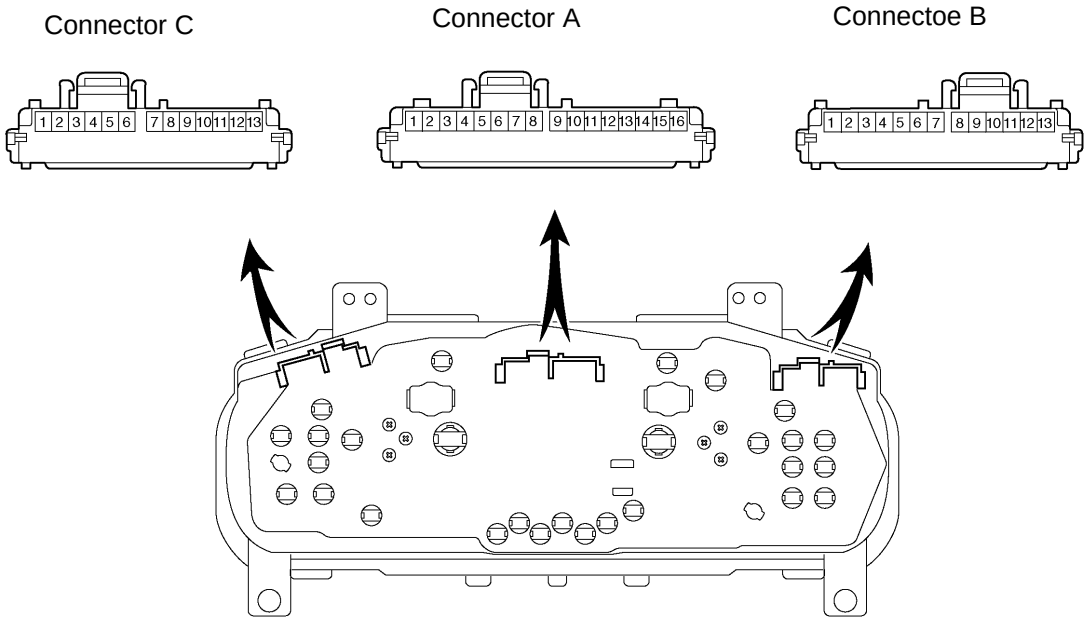


w/ Tachometer:

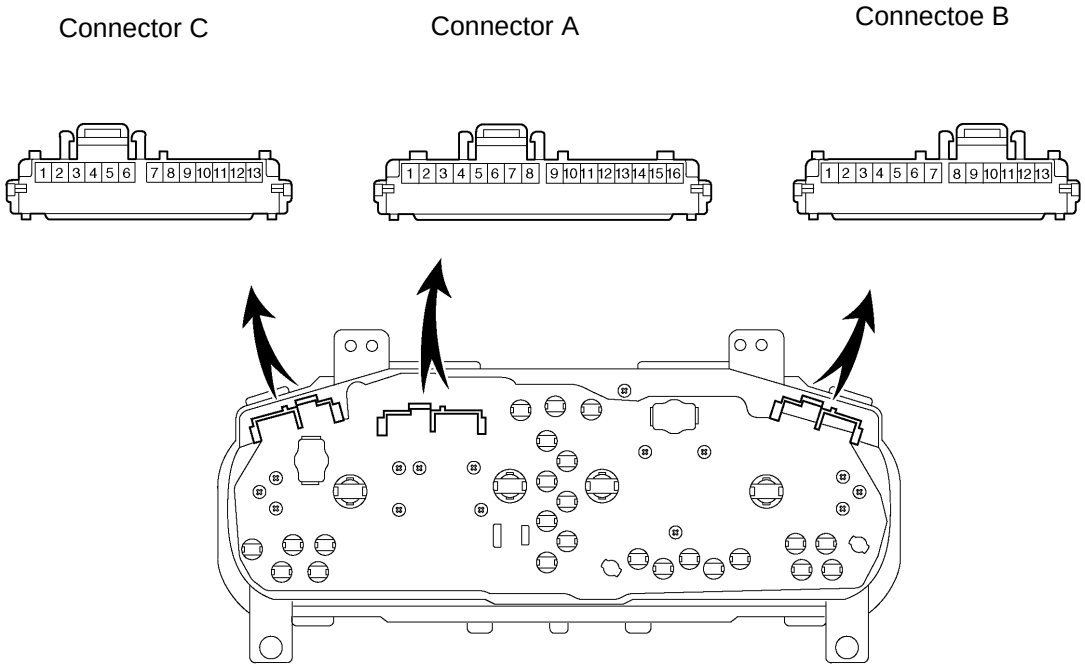

Y

I17265


w/o Tachometer

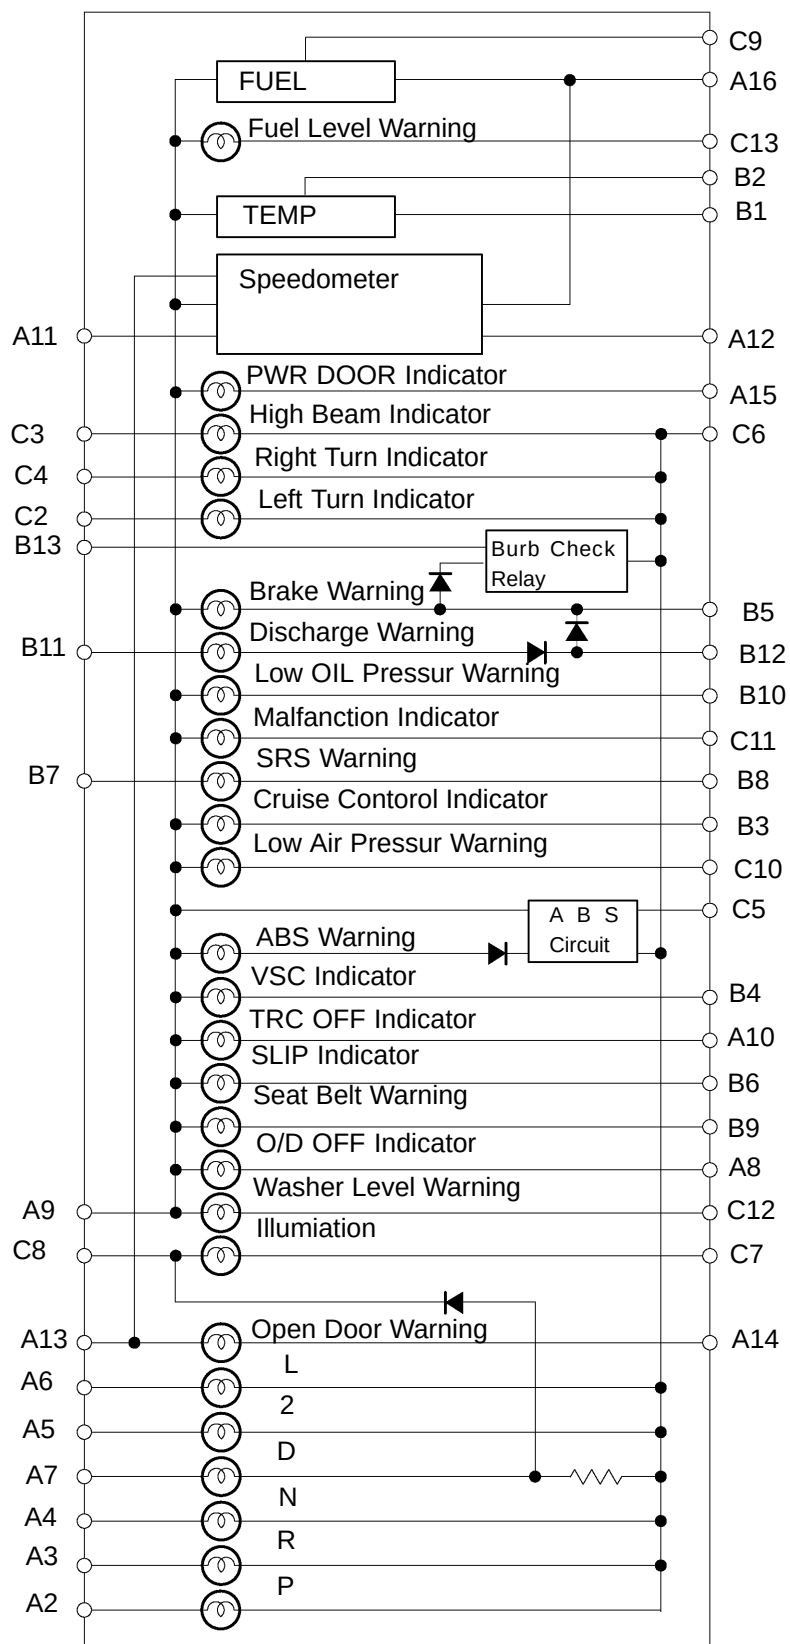

w/o Tachometer

| No. | Wiring connector side                                |
|-----|------------------------------------------------------|
| A   | 2 PNP Switch (P)                                     |
|     | 3 PNP Switch (R)                                     |
|     | 4 PNP Switch (N)                                     |
|     | 5 PNP Switch (2)                                     |
|     | 6 PNP Switch (L)                                     |
|     | 7 PNP Switch (D)                                     |
|     | 8 O/D OFF Switch                                     |
|     | 9 GAUGE Fuse                                         |
|     | 11 Speed Control Unit                                |
|     | 12 ABS Speed Sensor                                  |
|     | 13 DOME Fuse                                         |
|     | 14 Door Control Switch                               |
|     | 15 Power Slide Door Control ECU                      |
|     | 16 Ground                                            |
| B   | 1 Engine Coolant Temperature Sender Gauge            |
|     | 2 Ground                                             |
|     | 3 Cruise Control ECU                                 |
|     | 5 Brake Fluid Level Warning Switch and P.K.B. Switch |
|     | 7 ECU-B Fuse                                         |
|     | 8 Airbag Sensor Assembly                             |
|     | 9 Retractor Switch                                   |
|     | 10 Low Oil Pressure Warning Switch                   |
|     | 11 IGN Fuse                                          |
|     | 12 Generator L Terminal                              |
|     | 13 ST Fuse                                           |
| C   | 2 Turn Signal Switch (Left)                          |
|     | 3 Headlight Dimmer Switch                            |
|     | 4 Turn Signal Switch (Right)                         |
|     | 5 ABS ECU                                            |
|     | 6 Ground                                             |
|     | 7 Light Control Rheostat                             |
|     | 8 TAIL Fuse                                          |
|     | 9 Fuel Sender Gauge                                  |
|     | 10 ABS ECU                                           |
|     | 11 ECM                                               |
|     | 12 Washer Level Warning Switch                       |
|     | 13 Fuse Level Warning Switch                         |

w/ Tachometer

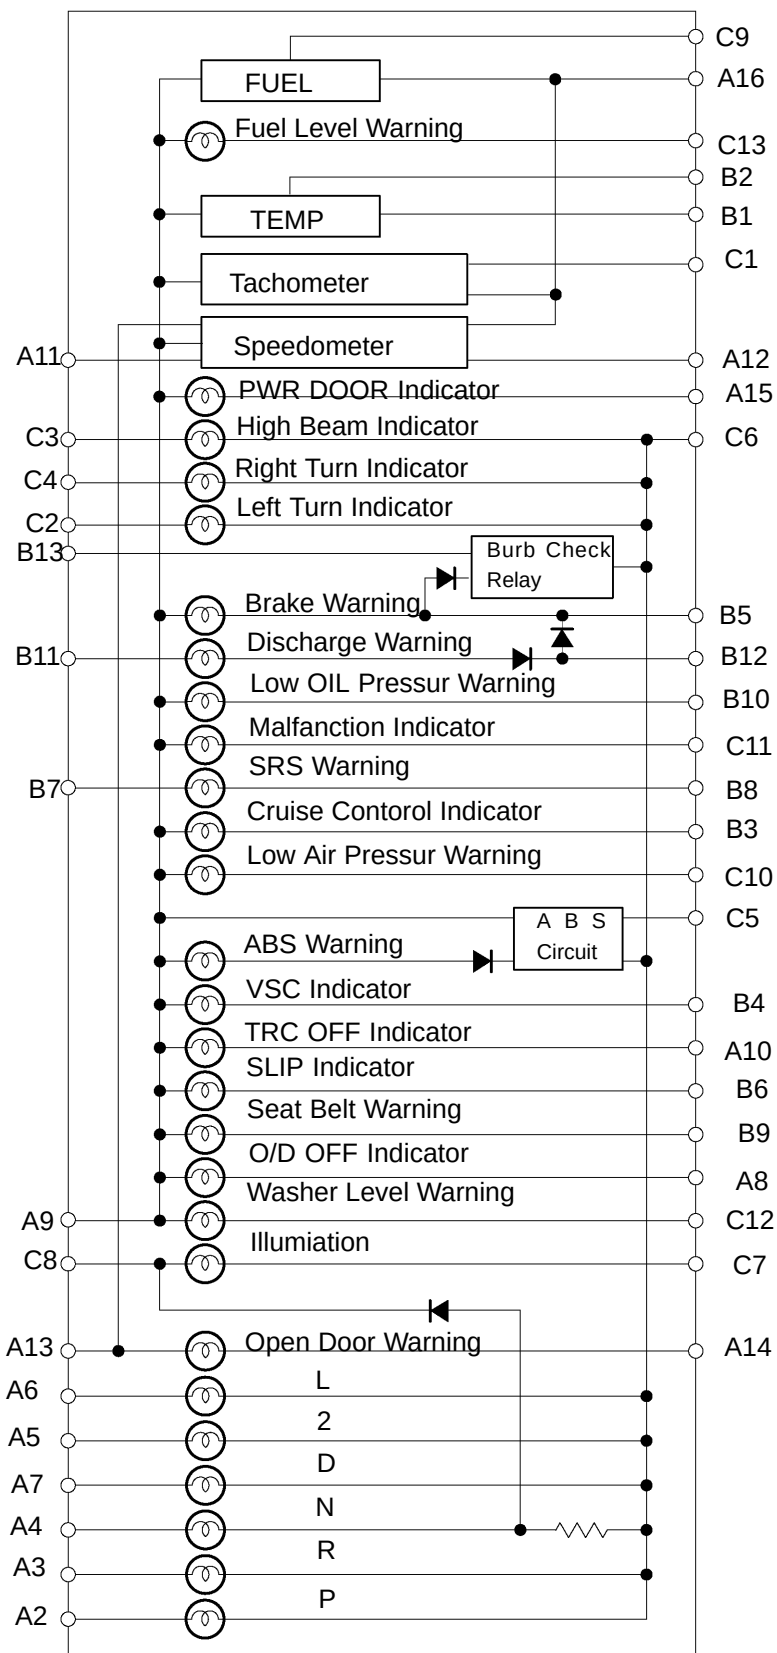

Y

A3

R

I17264

w/ Tachometer

| No. |    | Wiring connector side                              |
|-----|----|----------------------------------------------------|
| A   | 2  | PNP Switch (P)                                     |
|     | 3  | PNP Switch (R)                                     |
|     | 4  | PNP Switch (N)                                     |
|     | 5  | PNP Switch (2)                                     |
|     | 6  | PNP Switch (L)                                     |
|     | 7  | PNP Switch (D)                                     |
|     | 8  | O/D OFF Switch                                     |
|     | 9  | GAUGE Fuse                                         |
|     | 11 | Speed Control Unit                                 |
|     | 12 | ABS Speed Sensor                                   |
|     | 13 | DOME Fuse                                          |
|     | 14 | Door Control Switch                                |
|     | 15 | Power Slide Door Control ECU                       |
|     | 16 | Ground                                             |
| B   | 1  | Engine Coolant Temperature Sender Gauge            |
|     | 2  | Ground                                             |
|     | 3  | Cruise Control ECU                                 |
|     | 5  | Brake Fluid Level Warning Switch and P.K.B. Switch |
|     | 7  | ECU-B Fuse                                         |
|     | 8  | Airbag Sensor Assembly                             |
|     | 9  | Retractor Switch                                   |
|     | 10 | Low Oil Pressure Warning Switch                    |
|     | 11 | IGN Fuse                                           |
|     | 12 | Generator L Terminal                               |
|     | 13 | ST Fuse                                            |
| C   | 2  | Turn Signal Switch (Left)                          |
|     | 3  | Headlight Dimmer Switch                            |
|     | 4  | Turn Signal Switch (Right)                         |
|     | 5  | ABS ECU                                            |
|     | 6  | Ground                                             |
|     | 7  | Light Control Rheostat                             |
|     | 8  | TAIL Fuse                                          |
|     | 9  | Fuel Sender Gauge                                  |
|     | 10 | ABS ECU                                            |
|     | 11 | ECM                                                |
|     | 12 | Washer Level Warning Switch                        |
|     | 13 | Fuse Level Warning Switch                          |