


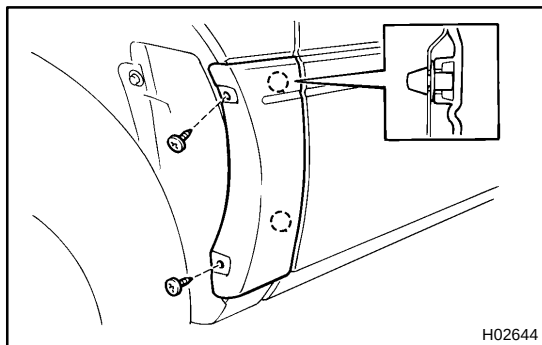


REMOVAL

1. REMOVE FRONT FENDER OUTSIDE MOULDING

- (a) Remove the 2 screws.
- (b) Using a screwdriver, remove the moulding.


HINT:

Tape the screwdriver tip before use.

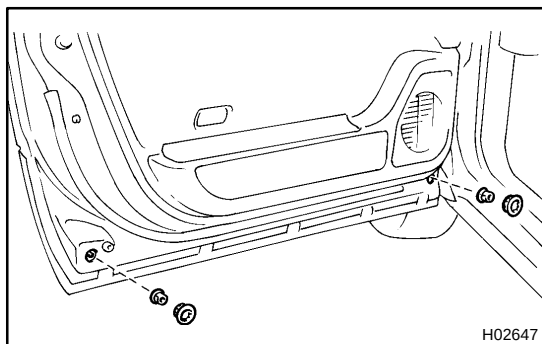

2. REMOVE FRONT DOOR OUTSIDE MOULDING

- (a) Remove the 2 hole plugs and 2 nuts.

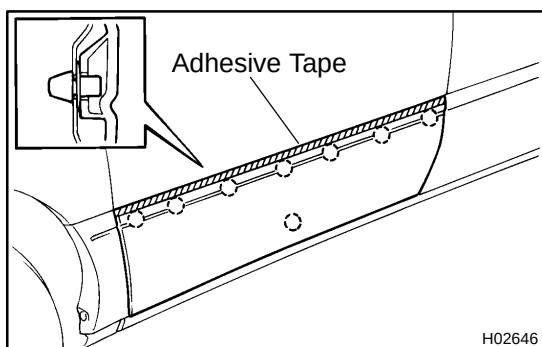

- (b) Using a heat light, heat the moulding to 40 - 60 °C (104 - 140 °F).

NOTICE:

Do not heat moulding excessively.

- (c) Cut the adhesive tape with a knife.


NOTICE:

- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.

- (d) Using a screwdriver, remove the moulding.


HINT:

Tape the screwdriver tip before use.

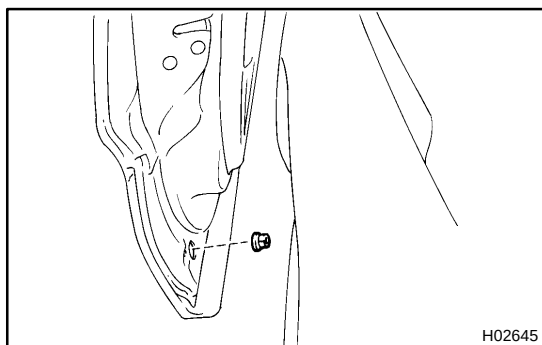

3. REMOVE SLIDE DOOR OUTSIDE MOULDING

- (a) Remove the nut.

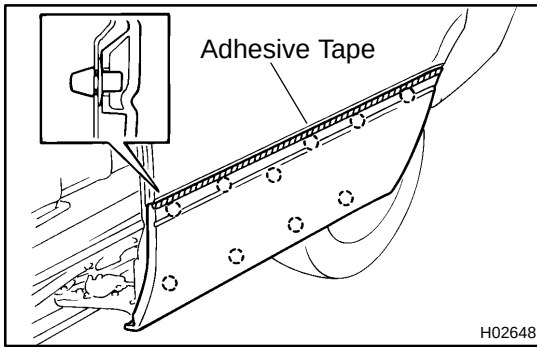

- (b) Using a heat light, heat the moulding to 40 - 60 °C (104 - 140 °F).

NOTICE:

Do not heat moulding excessively.

- (c) Cut the adhesive tape with a knife.



NOTICE:

- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.

- (d) Remove the moulding.

4. REMOVE OUTSIDE QUARTER MOULDING

Remove the 3 screws and moulding.

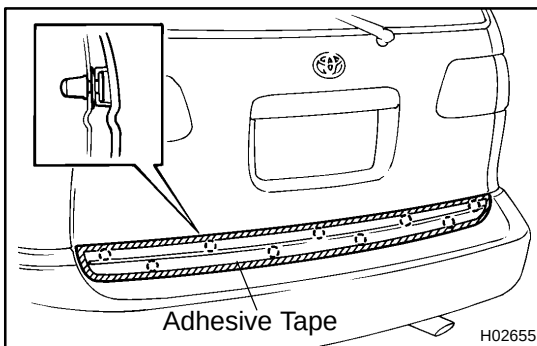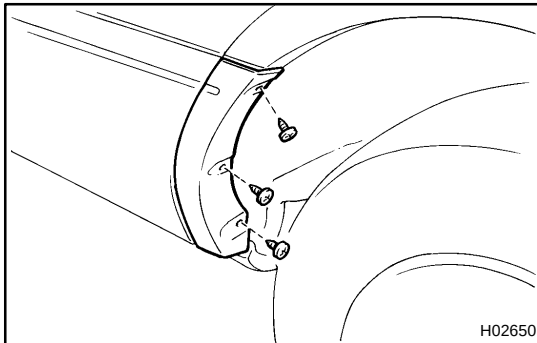**5. REMOVE BACK DOOR LOWER OUTSIDE MOULDING**

- (a) Using a heat light, heat the moulding to 40 - 60 °C (104 - 140 °F).

NOTICE:

Do not heat moulding excessively.

- (b) Cut the adhesive tape with a knife.

NOTICE:

- If reusing the moulding, take care not to damage the moulding.
- Do not damage the body.

- (c) Using a screwdriver, remove the moulding.

HINT:

Tape the screwdriver tip before use.