

DISASSEMBLY

1. **REMOVE CUP HOLDER**
2. **REMOVE RECLINING ADJUSTER RELEASE HANDLE**
3. **Driver's seat:**
REMOVE VERTICAL SEAT ADJUSTER KNOB
4. **REMOVE SEAT CUSHION SHIELDS**
5. **REMOVE SEAT TRACK UPPER RAIL COVERS**
6. **REMOVE FRONT SEAT INNER BELT**
 - (a) Disconnect the connector.
 - (b) Remove the bolt, washer and front seat inner belt.
7. **REMOVE CENTER ARMREST**

Remove the bolt, bushings and center armrest.
8. **REMOVE SEATBACK ASSEMBLY**

Remove the 4 bolts, 2 bushings and seatback assembly.
9. **REMOVE SEATBACK COVER**
 - (a) w/ Assist grip:
Open the 2 assist grip plugs, then remove the 2 screws and assist grip.
 - (b) Remove the headrest.
 - (c) Remove the 2 headrest supports.
 - (d) Remove the 2 seat hinge covers.
 - (e) Remove the seatback frame.
 - (f) Remove the seatback cover.
10. **w/ Seat heater:**
IF NECESSARY, REPLACE SEATBACK HEATER (See page [BO-128](#))
11. **REMOVE SEAT CUSHION ASSEMBLY**

Remove the 4 bolts and seat cushion assembly.
12. **REMOVE SEAT CUSHION COVER**
 - (a) Remove the seat cushion frame.
 - (b) Remove the seat cushion cover.
13. **w/ Seat heater:**
IF NECESSARY, REPLACE SEAT CUSHION HEATER (See page [BO-128](#))
14. **REMOVE SEAT TRACK ADJUSTING HANDLE**
15. **REMOVE NO.1 SEAT UNDER TRAY RAIL**