

REASSEMBLY

1. **INSTALL NO. 1 SEAT UNDER TRAY RAIL**
2. **INSTALL SEAT TRACK ADJUSTING HANDLE**
3. **INSTALL SEAT CUSHION COVER**

- (a) Install the seat cushion cover to the seat cushion pad.
- (b) Install the seat cushion frame.

4. **INSTALL SEAT CUSHION ASSEMBLY**

Install the seat cushion assembly with the 4 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

5. **INSTALL SEATBACK COVER**

- (a) Install the seatback cover to the seatback pad.
- (b) Install the seatback frame.
- (c) Install the 2 seat hinge covers.
- (d) Install the 2 headrest supports.
- (e) Install the headrest.

- (f) w/ Assist grip:
Install the assist grip with the 2 screws.

- (g) w/ Assist grip:
Install the 2 assist grip plugs.

6. **INSTALL SEATBACK ASSEMBLY**

Install the 2 bushings and seatback assembly with the 4 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

7. **INSTALL CENTER ARMREST**


Install the bushings and center armrest with the bolt.

Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)


8. **INSTALL FRONT SEAT INNER BELT**

- (a) Install the front seat inner belt and washer with the bolt.


Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

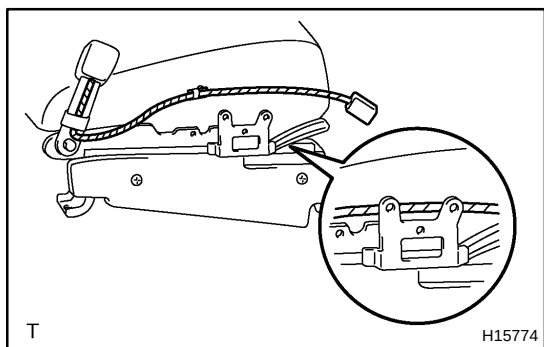

- (b) Pass the wire harness between the seat cushion side and cup holder bracket as shown in the illustration.

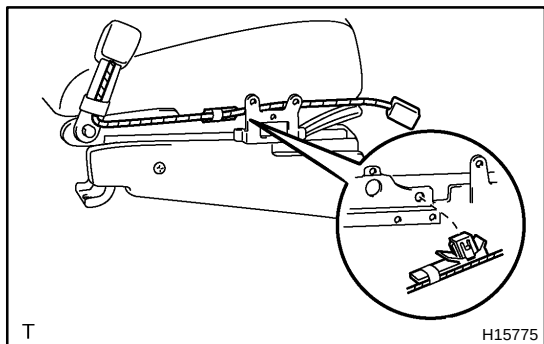

- (c) Clamp the wire harness to the adjuster hole.

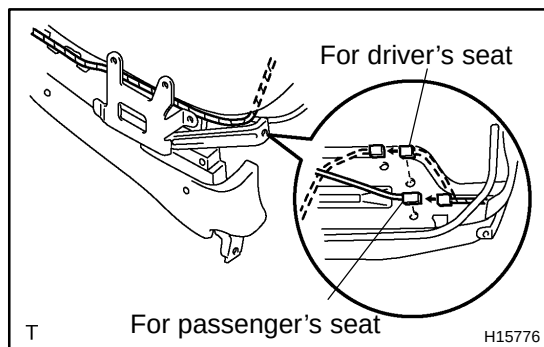

- (d) Pass the wire harness between the seat cushion and loop handle.
 - (e) Connect the connector and clamp the wire harness as shown in the illustration.
9. **INSTALL SEAT TRACK UPPER RAIL COVERS**
 10. **INSTALL SEAT CUSHION SHIELDS**
 11. **Driver's seat:**
INSTALL VERTICAL SEAT ADJUSTER KNOB
 12. **INSTALL RECLINING ADJUSTER RELEASE HANDLE**
 13. **INSTALL CUP HOLDER**