

REASSEMBLY

1. INSTALL SEAT CUSHION COVER

- Install the seat cushion cover to the seat cushion pad.
- Install the wire harness to the seat cushion frame.
- Install the seat cushion frame.

2. INSTALL SEAT CUSHION ASSEMBLY

Install the seat cushion assembly with the 4 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

3. INSTALL SEATBACK COVER

- Install the seatback cover to the seatback pad.
- Install the seatback frame.
- Install the 2 seat hinge covers.
- Install the 2 headrest supports.
- Install the headrest.
- Install the assist grip with the 2 screws.
- Install the 2 assist grip plugs.

4. INSTALL SEATBACK ASSEMBLY

Install the seatback assembly with the 4 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

5. INSTALL CENTER ARMREST


Install the center armrest with the bolt.

Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)


6. INSTALL FRONT SEAT INNER BELT

- Install the front seat inner belt and washer with the bolt.


Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

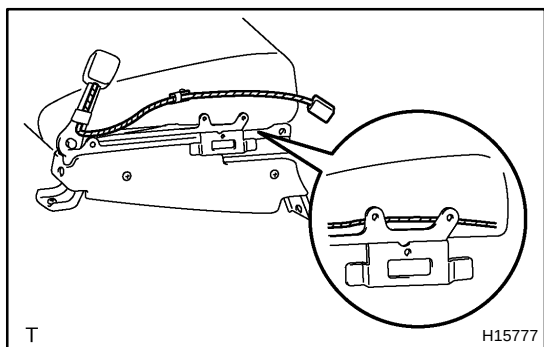

- Pass the wire harness between the seat cushion side and cup holder bracket as shown in the illustration.

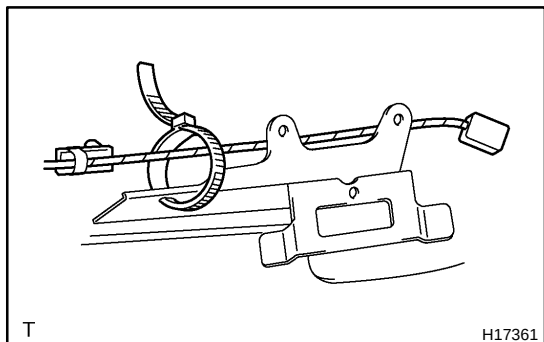

- Bind the wire harness with a band clamp as shown in the illustration.

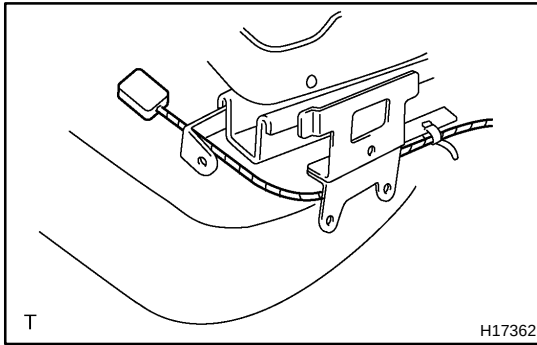

- (d) Pass the wire harness between the seat cushion and bracket of the adjuster.
- (e) Connect the connector.
- 7. INSTALL POWER SEAT SWITCH**
- 8. INSTALL SEAT TRACK UPPER RAIL COVERS**
- 9. INSTALL SEAT CUSHION SHIELDS**
- 10. INSTALL POWER SEAT SWITCH KNOBS**
- 11. INSTALL CUP HOLDER**