

DISASSEMBLY

1. REMOVE RELEASE HANDLE

- (a) Using a screwdriver, remove the reclining handle cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the screw and release handle.

2. REMOVE ARMREST

3. REMOVE CUP HOLDERS

4. REMOVE REAR SEAT CUSHION UNDER COVERS

5. REMOVE REAR SEAT RECLINING COVERS

6. REMOVE REAR NO.1 SEAT INNER BELT

7. REMOVE REAR SEAT RECLINING ADJUSTERS

- (a) Remove the 4 bolts from the seat cushion assembly.
- (b) Remove the 4 bolts and reclining adjusters from the seatback assembly.

8. REMOVE SEATBACK COVER

- (a) Pull of the reclining connecting pipe from the seatback assembly.
- (b) Remove the 2 headrests.
- (c) Remove the 3 clips and seatback board.
- (d) w/ CRS:
Remove the child restraint seat cover.
- (e) w/ CRS:
Remove the child restraint seat.
- (f) Remove the 4 headrest supports.
- (g) Remove the seatback frame.
- (h) Remove the seatback cover from the seatback pad.

9. REMOVE SEAT CUSHION ASSEMBLY

- (a) w/o CRS:
Remove the 2 bolts.
- (b) Remove the 4 nuts and seat cushion assembly.

10. REMOVE SEAT CUSHION COVER

- (a) Remove the seat cushion frame.
- (b) Remove the seat cushion cover from the seat cushion pad.

11. REMOVE REAR NO.1 SEAT CENTER BELT

12. REMOVE REAR SEAT LOCKS