



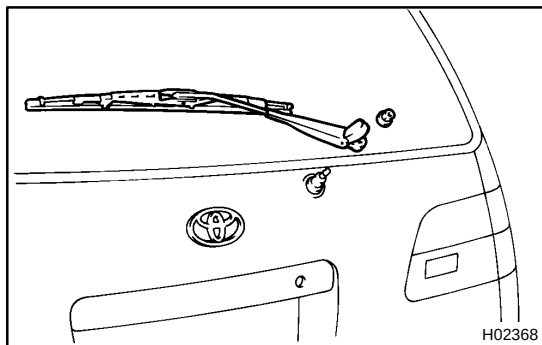

REMOVAL

1. REMOVE WIPER ARM

Remove the nut, wiper arm and grommet.

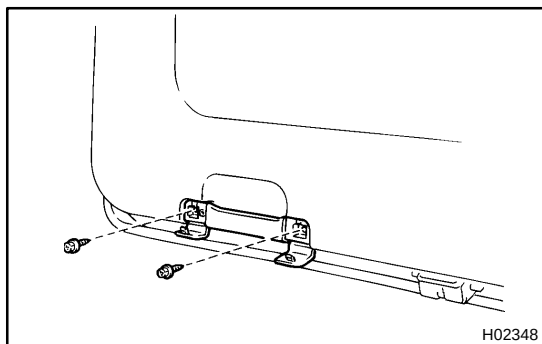


2. REMOVE BACK DOOR ASSIST GRIP

(a) Using a screwdriver, open the covers.

HINT:

Tape the screwdriver tip before use.

(b) Remove the 2 screws and assist grip.

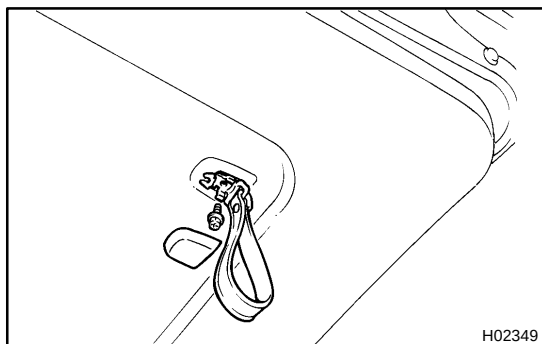


3. REMOVE BACK DOOR PULL STRAP

(a) Using a screwdriver, remove the strap cover.

HINT:

Tape the screwdriver tip before use.

(b) Remove the screw and back door pull strap.

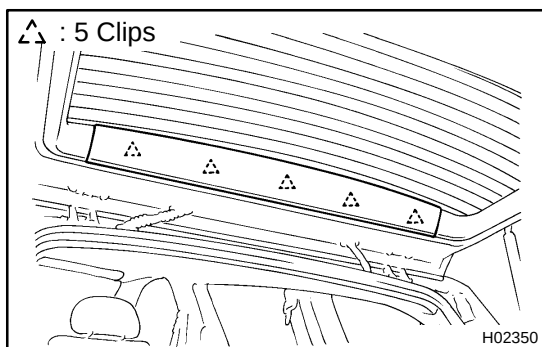


4. REMOVE CENTER GARNISH

Using a screwdriver, remove the center garnish.

HINT:

Tape the screwdriver tip before use.

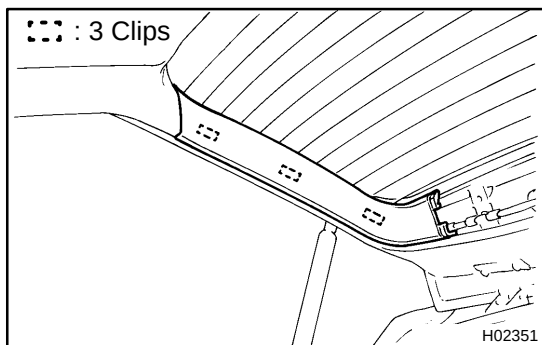


5. REMOVE SIDE GARNISH

(a) Using a screwdriver, remove the side garnish.

HINT:

Tape the screwdriver tip before use.

(b) Employ the same manner described above to the other side.

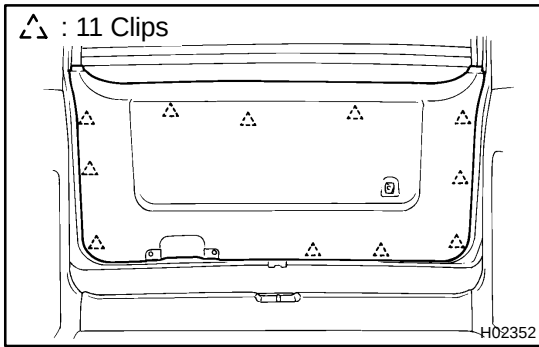**6. REMOVE BACK DOOR TRIM BOARD**

- (a) Insert a screwdriver between the door and door trim board to pry the door trim board out.


NOTICE:

Be careful not to damage the door and door trim board.

HINT:

Tape the screwdriver tip before use.

- (b) Pull the door trim board to remove it.

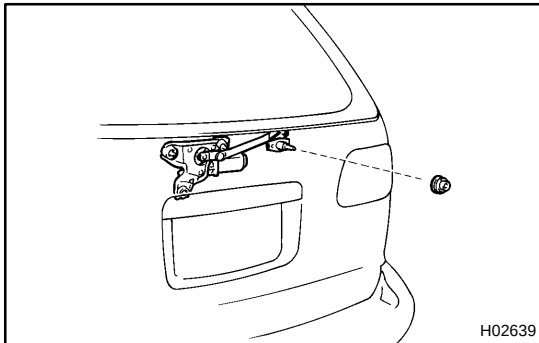**7. REMOVE WIPER MOTOR AND LINK ASSEMBLY**

- (a) Remove the grommet.
(b) Disconnect the connector.
(c) Remove the 3 bolts from the wiper motor.
(d) Remove the 2 bolts and wiper motor and link assembly.