

INSTALLATION

NOTICE:

- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.
- Make sure that the front seat outer belt is installed to the specified torque.
- If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.
- When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.

1. INSTALL RETRACTOR OF FRONT SEAT OUTER BELT

- (a) Install the retractor of front seat outer belt with the 2 bolts.


Torque:

Upper bolt: 21 N·m (210 kgf·cm, 15 ft·lbf)


Lower bolt: 43 N·m (440 kgf·cm, 32 ft·lbf)

- (b) w/ Seat belt warning:

Connect the retractor switch connector.

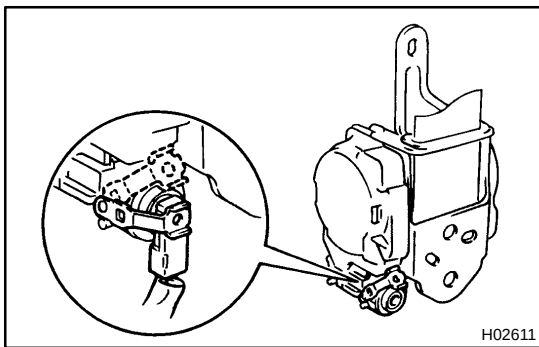

- (c) Connect the pretensioner connector as shown in the illustration.

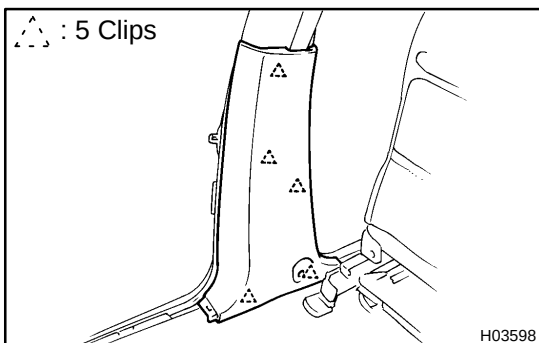

2. INSTALL LOWER CENTER PILLAR GARNISH

- (a) Install the lower center pillar garnish.
 (b) Install the front seat outer belt floor anchor with bolt.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

3. INSTALL SLIDE DOOR SCUFF PLATE

4. **INSTALL REAR NO.1 SEAT OUTER BELT SHOULDER ANCHOR**
 - (a) Install the rear No.1 seat outer belt shoulder anchor with the bolt.
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
 - (b) Install the anchor cap.
5. **INSTALL FRONT DOOR SCUFF PLATE**