

SEAT BELT PRETENSIONER REMOVAL

B03YD-01

NOTICE:

- If the wiring connector of the supplemental restraint system is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.

1. REMOVE FRONT DOOR SCUFF PLATE
2. REMOVE REAR NO.1 SEAT OUTER BELT SHOULDER ANCHOR


(a) Using a screwdriver, then remove the anchor cap.

HINT:

Tape the screwdriver tip before use.

(b) Remove the bolt and rear No.1 seat outer belt shoulder anchor.

3. REMOVE SLIDE DOOR SCUFF PLATE

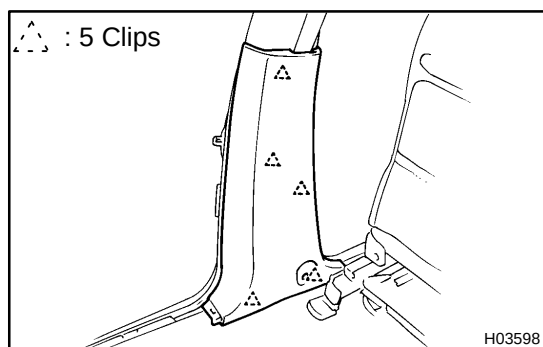

4. REMOVE LOWER CENTER PILLAR GARNISH

- (a) Remove the bolt and front seat outer belt floor anchor.
- (b) Remove the lower center pillar garnish.

5. REMOVE RETRACTOR OF FRONT SEAT OUTER BELT

CAUTION:

Never disassemble the front seat outer belt.

NOTICE:

When removing the retractor of front seat outer belt, take care not to pull the seat belt pretensioner wire harness.

- (a) Disconnect the pretensioner connector as shown in the illustration.

CAUTION:

When removing the seat belt pretensioner, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from battery.

- (b) w/ Seat belt warning:
Disconnect the retractor switch connector.
- (c) Remove the 2 bolts and front seat outer belt.

