



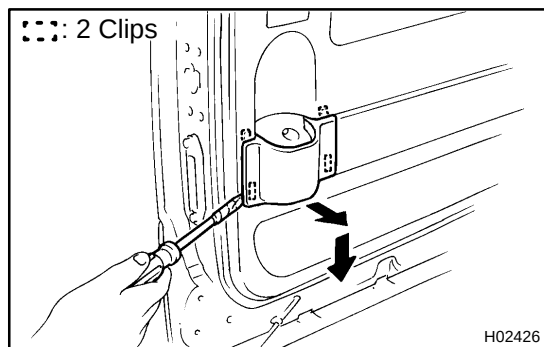

REMOVAL

1. REMOVE CUP HOLDER

Using a screwdriver, remove the cup holder as shown in the illustration.

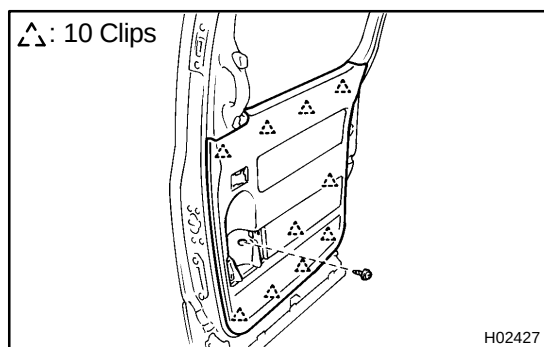

2. REMOVE DOOR TRIM

- Remove the screw.
- Insert a screwdriver between the door and door trim to pry the trim out.


NOTICE:

Be careful not to damage the door and door trim.

HINT:

Tape the screwdriver tip before use.

- Pull the trim to remove it.

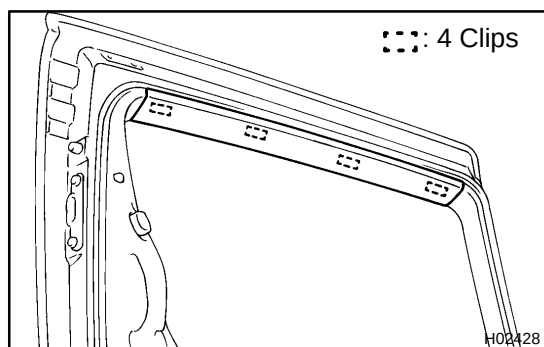


3. REMOVE UPPER NO.1 TRIM COVER

Using a screwdriver, remove the upper No.1 trim cover.

HINT:

Tape the screwdriver tip before use.

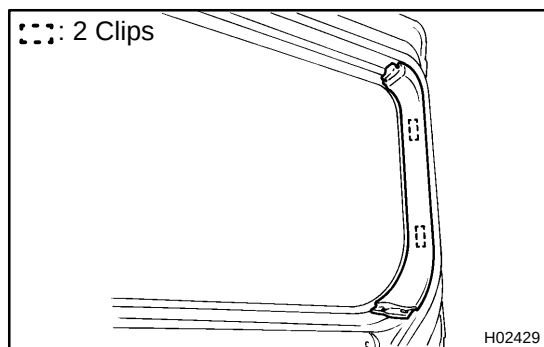


4. REMOVE UPPER NO.2 TRIM COVER

Using a screwdriver, remove the upper No.2 trim cover.

HINT:

Tape the screwdriver tip before use.

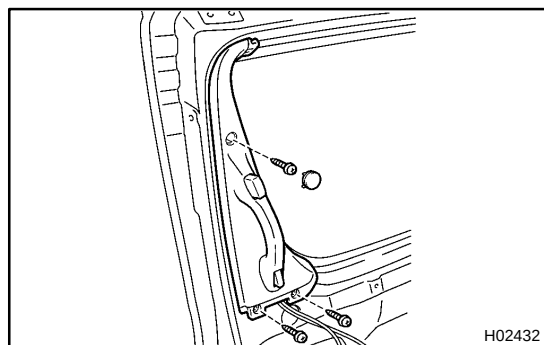


5. REMOVE WINDOW GARNISH

- Using a screwdriver, remove the trim board cover.

HINT:

Tape the screwdriver tip before use.

- Remove the 3 screws and window garnish.

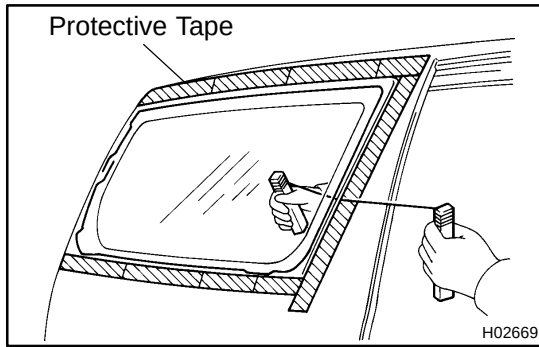

6. REMOVE SLIDE DOOR GLASS


- (a) Push a piano wire through from the interior.
- (b) Tie both wire ends to wooden blocks or similar object.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

NOTICE:


When separating the glass, take care not to damage the paint and exterior.

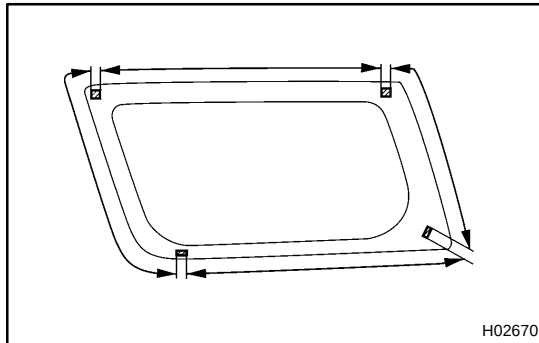

- (c) Cut the adhesive by pulling the piano wire around it.

HINT:

Cut the adhesive areas as shown in the illustration, leaving the adhesive where the clips are.

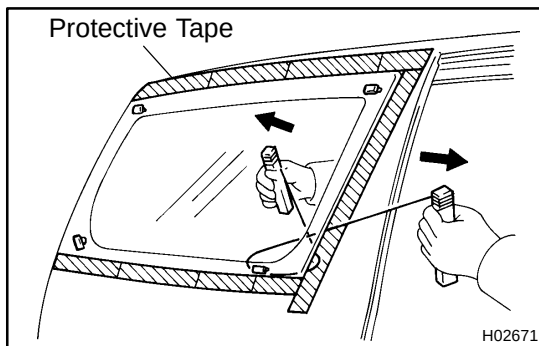

- (d) Push the piano wire through as shown in the illustration, cut off the adhered part to the clips.

- (e) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.