


REMOVAL

1. REMOVE FRONT DOOR SCUFF PLATES
2. REMOVE COWL SIDE BOARDS
3. REMOVE FRONT DOOR OPENING TRIM COVERS

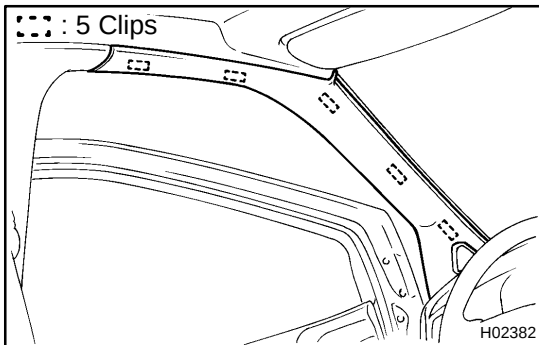

4. REMOVE FRONT PILLAR GARNISH

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (b) w/ Tweeter speaker:
Disconnect the connector.
- (c) Employ the same manner described above to the other side.


5. REMOVE SUN VISORS AND HOLDERS

6. REMOVE ASSIST GRIP

7. w/ Sliding roof:

REMOVE SLIDING ROOF OPENING TRIM MOULDING

8. REMOVE ROOF DRIP SIDE CHANNELS

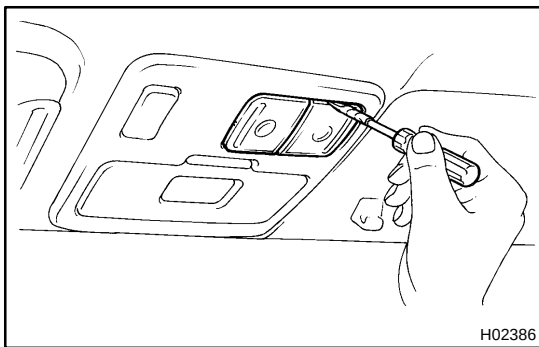


9. REMOVE ROOF CONSOLE BOX

- (a) XLE, LE Grade:
Using a screwdriver, remove the 2 lenses.

HINT:

Tape the screwdriver tip before use.

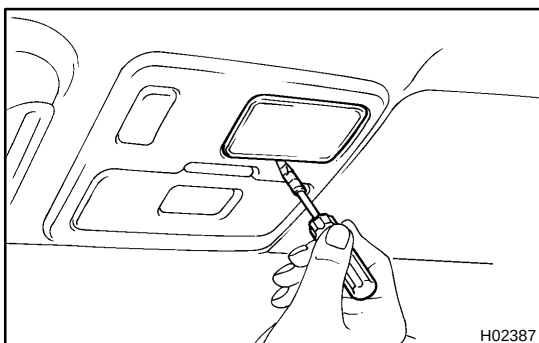


- (b) CE Grade:

Using a screwdriver, remove the lens.

HINT:

Tape the screwdriver tip before use.

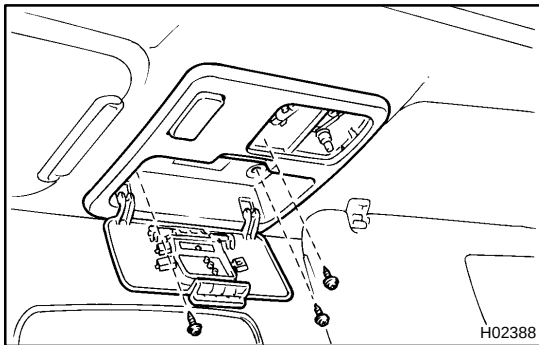

- (c) Remove the 3 screws and roof console box, then disconnect the connector.


10. REMOVE GLASSES BOX

Remove the 2 screws and glasses box.

11. REMOVE FRONT SIDE OF ROOF HEADLINING (See page [BO-108](#))


12. REMOVE WIPER ARMS

13. REMOVE HOOD TO COWL TOP SEAL

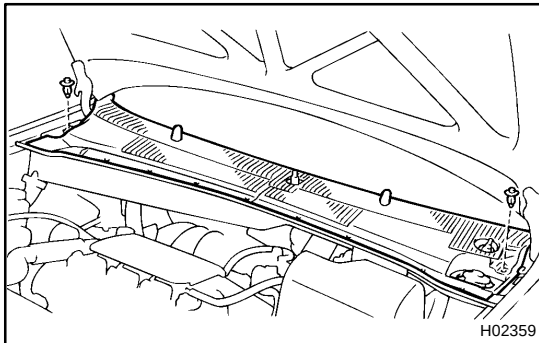

14. REMOVE COWL TOP VENTILATOR LOUVERS

- (a) Remove the clip and RH cowl top ventilator louver, then disconnect the washer hose.
(b) Remove the clip and LH cowl top ventilator louver, then disconnect the washer hose.

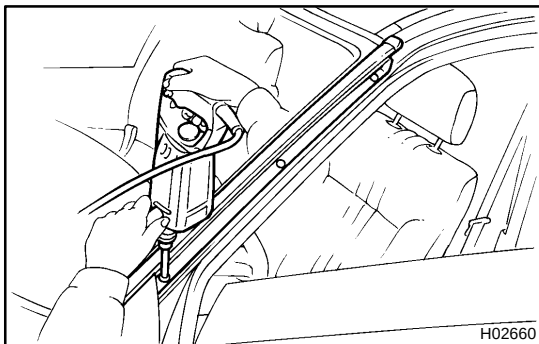


15. REMOVE OUTSIDE MOULDING

- (a) Attach the rivet cutter to the drill.
(b) Gently and vertically put the drill to the rivet, and cut the rivet flanges.

NOTICE:

- Prizing the hole with a drill can lead to damage to the rivet hole or breaking the rivet cutter.
 - Take care as the cut rivet is hot.
- (c) Even if flange is taken off, continue drilling and push out remaining fragments with the drill.
(d) Remove the outside moulding.
(e) Employ the same manner described above to the other side.

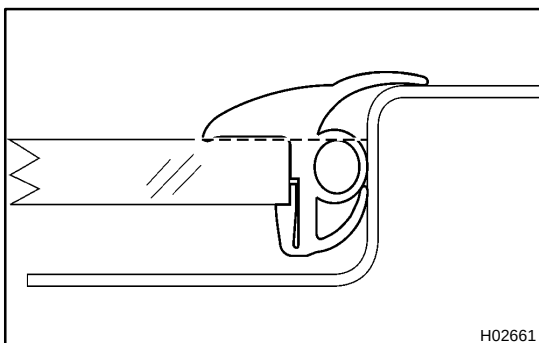


16. REMOVE UPPER OUTSIDE MOULDING

Using a knife, cut off the moulding as shown.

NOTICE:


Do not damage the body with the knife.

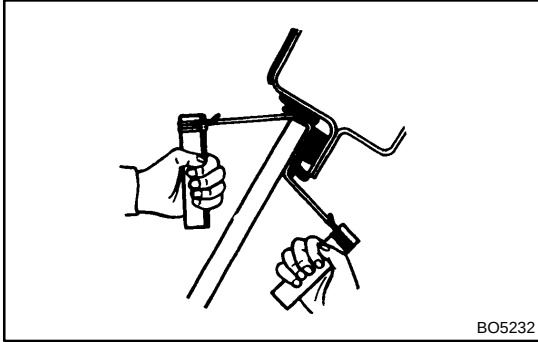**17. REMOVE WINDSHIELD GLASS**

- (a) Push piano wire through between the body and glass from the interior.
- (b) Tie both wire ends to wooden block or a similar object.

HINT:

Apply adhesive tape to the outer surface to keep the surface from being scratched.

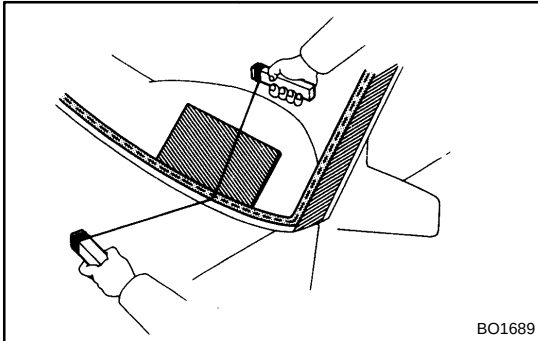**NOTICE:**

When separating the glass, take care not to damage the paint and interior and exterior ornaments. To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

- (c) Cut the adhesive by pulling the piano wire around it.
- (d) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.