


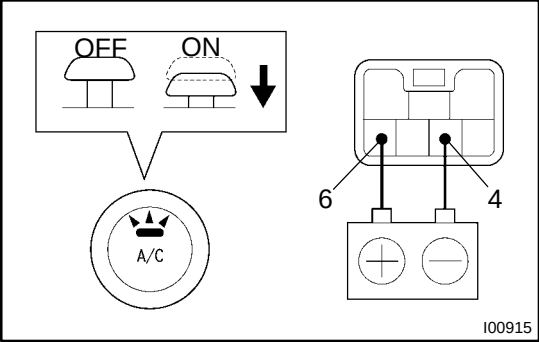


INSPECTION

1. A/C Switch:

INSPECT A/C INDICATOR OPERATION


- (a) Connect the positive (+) lead from the battery to terminal 6 and negative (-) lead to terminal 4.
- (b) Push the button in and check that the A/C indicator lights up.

If operation is not as specified, replace the A/C switch.

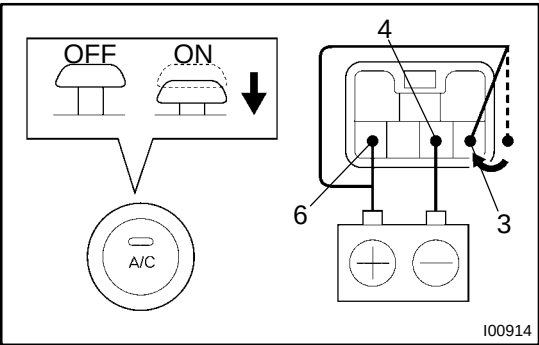

- (c) Connect the positive (+) lead from the battery to terminal 3 and check that the indicator dims.


If operation is not as specified, replace the A/C switch.

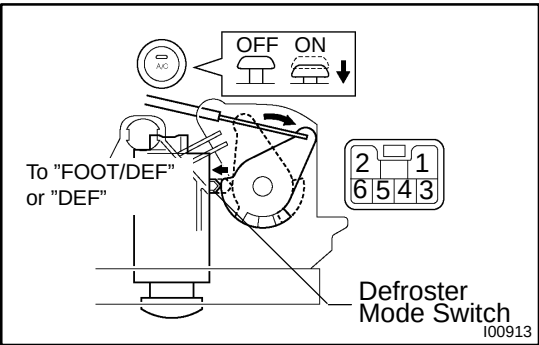

2. INSPECT A/C SWITCH CONTINUITY

Condition / Circuit	Tester connection	Specified condition
A/C switch OFF	-	No continuity
A/C switch ON	6 - 5	Continuity
Air flow selector: "FOOT/DEF" or "DEF"	-	No continuity
Air flow selector: Except "FOOT/DEF" or "DEF"	6 - 5	Continuity
Illumination circuit	3 - 1	Continuity

If continuity is not as specified, replace the A/C switch

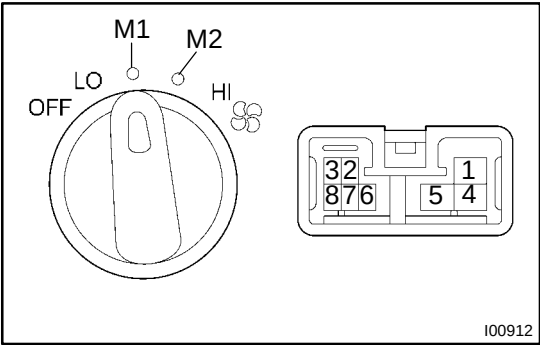

3. INSPECT BLOWER SPEED CONTROL SWITCH CONTINUITY


Position / Circuit	Tester connection	Specified condition
OFF	-	No continuity
LO	1 - 3	continuity
M1	1 - 3 - 4	continuity
M2	1 - 3 - 8	continuity
HI	1 - 3 - 5	continuity
Illumination circuit	6 - 7	continuity

Switch continuity:

If continuity is not as specified, replace the blower speed control switch.

Illumination circuit:


If continuity is not as specified, replace the bulb.

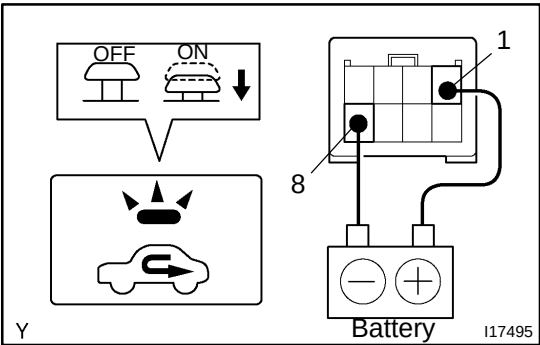

4. INSPECT FRESH/RECIRC SWITCH INDICATOR OPERATION

- Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 8.
- Push the fresh/recirc switch in and check that the indicator lights up.



If operation is not as specified, replace the switch.

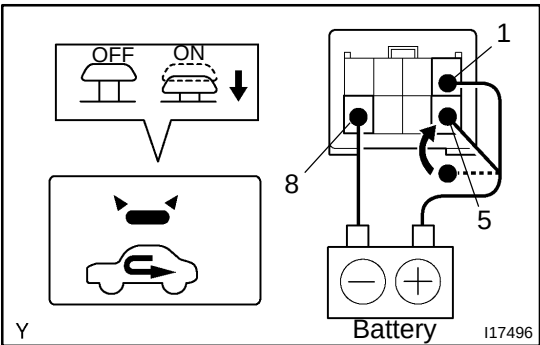

5. INSPECT DIMMING OPERATION

- Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 8.
- Push the fresh/ recirc switch, then the indicator lights up.
- Connect the positive (+) lead from the battery to terminal 5 and then check that the indicator dims.

If operation is not as specified, replace the switch.

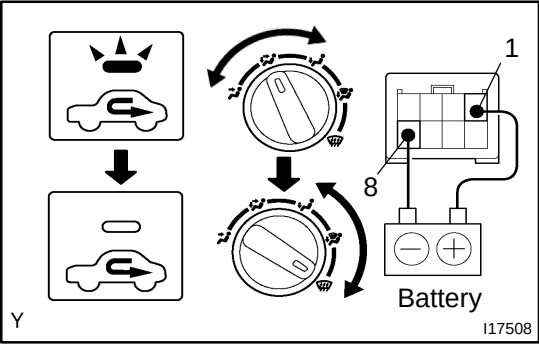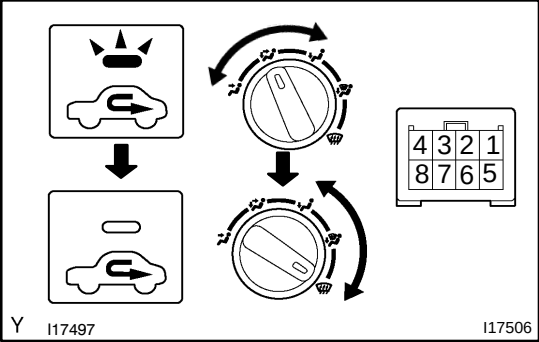

6. INSPECT RECIRCULATE SWITCH CONTINUITY

Condition / Circuit	Tester connection	Specified condition
OFF (Air intake mode: FRESH)	-	No continuity
ON (Air intake mode: RE- CIRCULATE	1 - 8	Continuity
Defroster, Def-Foot and Foot mode switch OFF	-	No continuity
Illumination circuit	5 - 7	Continuity

If continuity is not as specified, replace the fresh/recirc switch.

7. Air flow selector:
INSPECT RECIRCULATE SWITCH INDICATOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 8.
- (b) Turn the air flow selector to the "DEF", "FOOT/DEF" and "FOOT" position and check that the recirculate switch indicator lights off.

If operation is not as specified, replace the switch.