


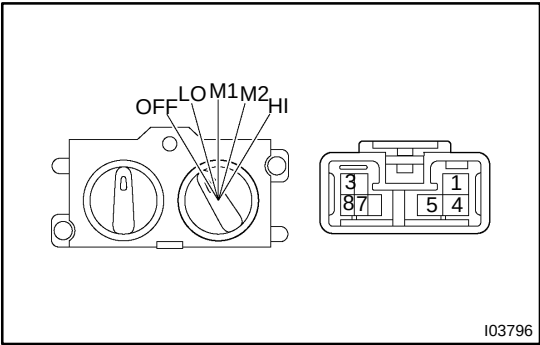

INSPECTION

1. INSPECT HEATER BLOWER SWITCH CONTINUITY


Position / Circuit	Tester connection	Specified condition
OFF	-	No continuity
LO	1 - 3	Continuity
M1	1 - 4	Continuity
M2	1 - 8	Continuity
HI	1 - 5	Continuity
Illumination circuit	7 - 8	Continuity

Switch continuity:

If continuity is not as specified, replace the switch.

Illumination circuit:

If continuity is not as specified, check the bulb.

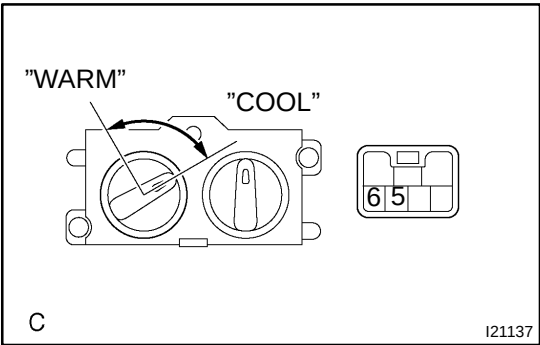


2. Manual A/C:

INSPECT SELECT SWITCH OPERATION

- (a) Gradually turn the select switch from the "WARM" to "COOL" side, then check that the resistance between terminals 5 and 6 increases from 0 to 3.0 kΩ.

If operation is not as specified, replace the heater control base.

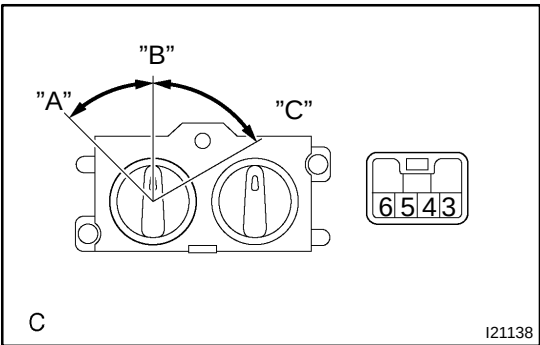

- (b) Check the continuity between terminals at each control knob position, as shown in the chart.

Position	Tester connection	Specified condition
"A"	3 - 4	Continuity
Between "B" and "C"	5 - 6	Continuity

If continuity is not as specified replace the heater control base.

3. Auto A/C:

INSPECT BLOWER SWITCH OPERATION (See page [DI-784](#))

4. Auto A/C:

INSPECT TEMP. OPERATION (See page [DI-787](#))