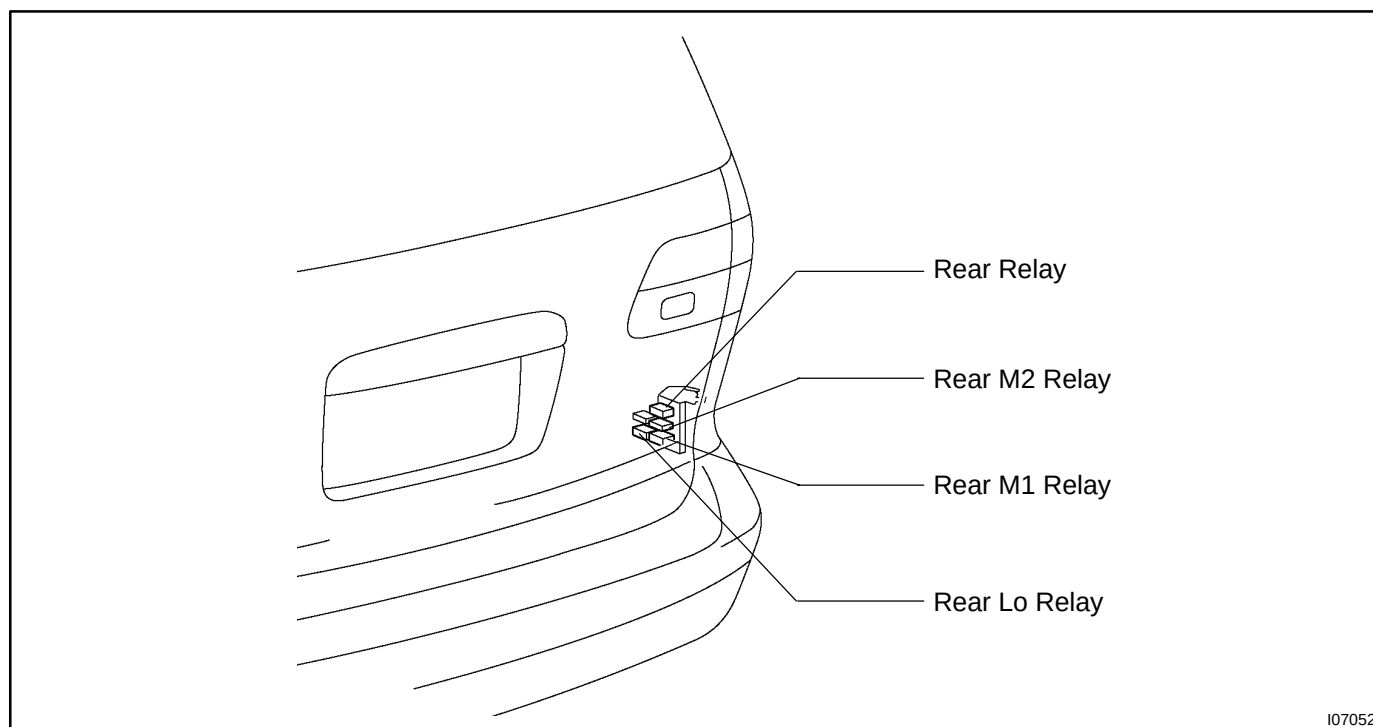


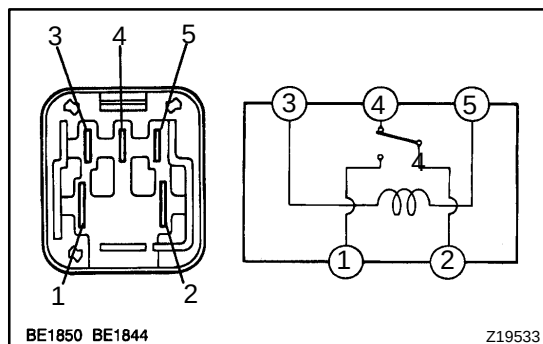
REAR RELAY INSPECTION

1. REMOVE REAR NO. 2 SEAT
2. REMOVE SLIDE DOOR SCUFF PLATE
(See page [BO-108](#))
3. REMOVE BACK DOOR SCUFF PLATE
(See page [BO-108](#))
4. REMOVE REAR LH QUARTER TRIM PANEL
(See page [BO-108](#))



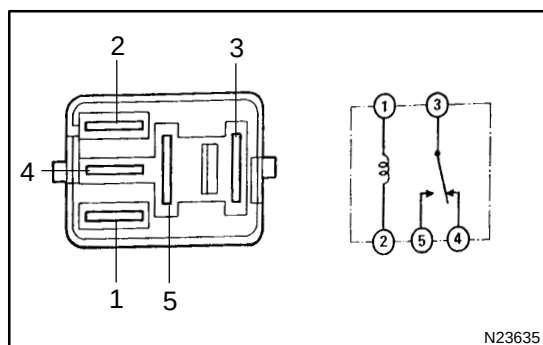
I07052

5. REMOVE REAR RELAY
6. REMOVE REAR LO RELAY
7. REMOVE REAR M1 RELAY
8. REMOVE REAR M2 RELAY

**9. INSPECT REAR RELAY CONTINUITY**

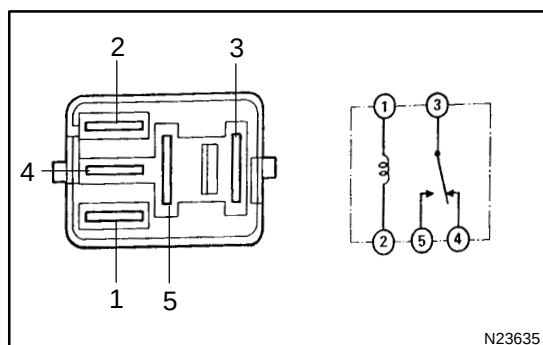
Condition	Tester connection	Specified condition
Constant	2 - 4 3 - 5	Continuity
Apply B+ between terminals 3 and 5.	1 - 2	Continuity

If continuity is not as specified, replace the relay.

**10. INSPECT REAR LO RELAY CONTINUITY**

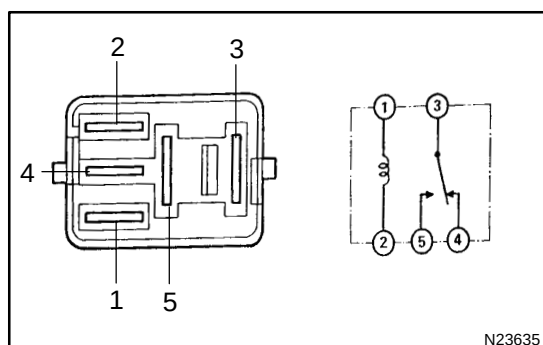
Condition	Tester connection	Specified condition
Constant	1 - 2 3 - 4	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

**11. INSPECT REAR M1 RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	1 - 2 3 - 4	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

**12. INSPECT REAR M2 RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	1 - 2 3 - 4	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.