


ABS Warning Light Circuit

CIRCUIT DESCRIPTION

If the ECU detects trouble, it lights the ABS warning light while at the same time prohibiting ABS control. At this time, the ECU records a DTC in memory.

Connect terminals Tc and E₁ of the DLC1 or Tc and CG of the DLC3 to make the ABS warning light blink and output the DTC.

WIRING DIAGRAM

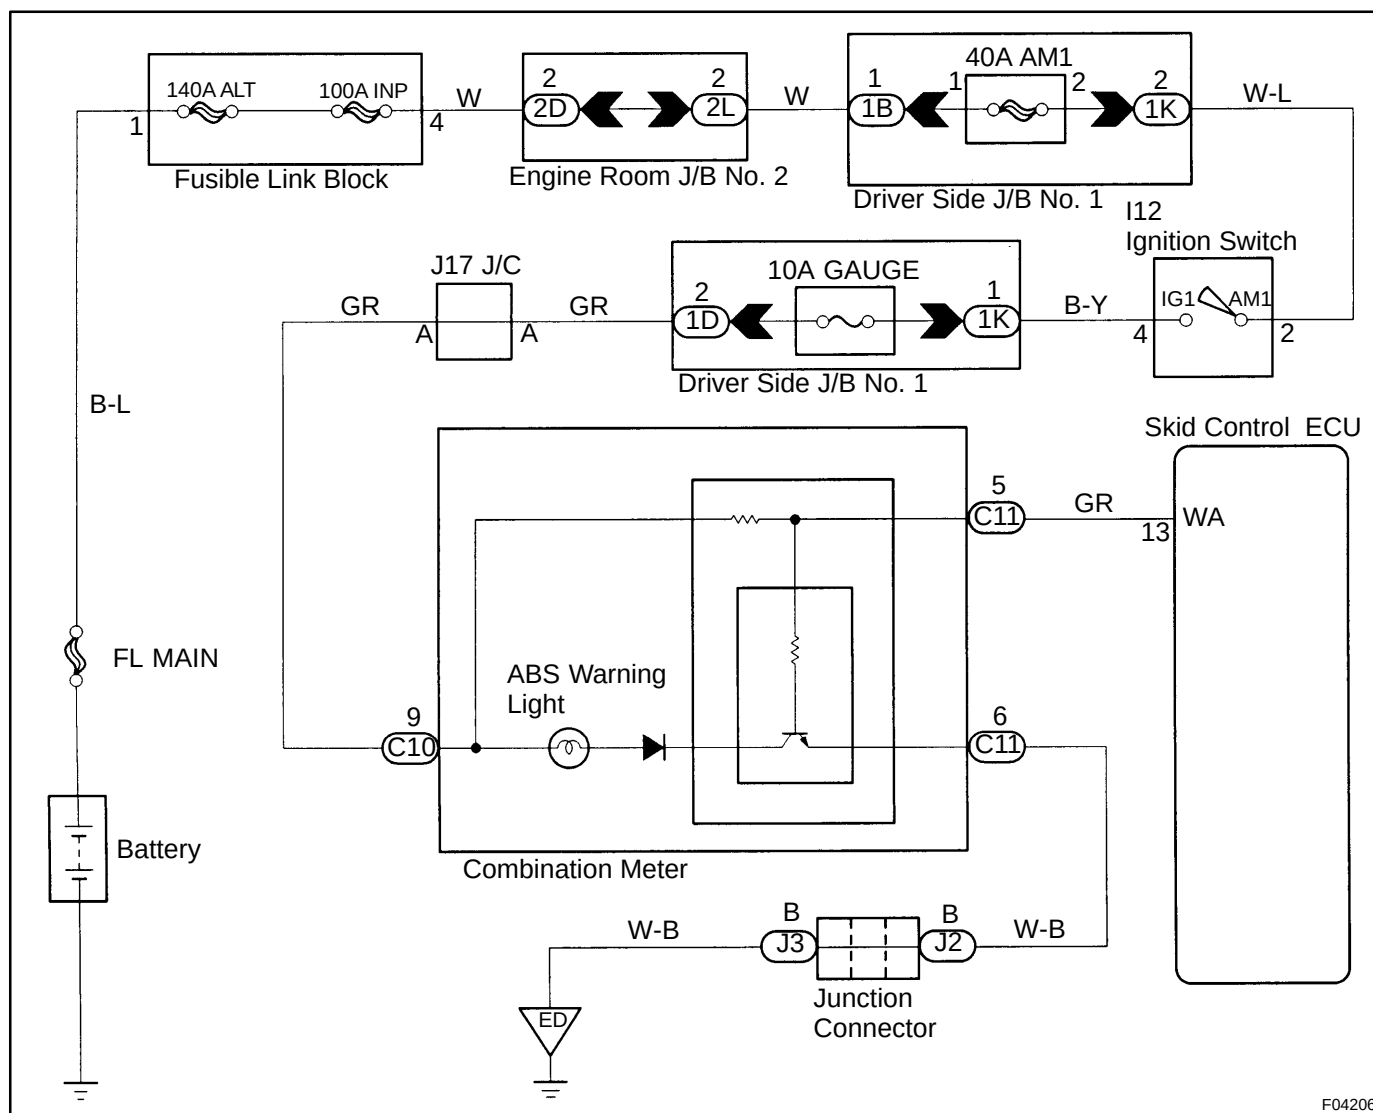

INSPECTION PROCEDURE

Troubleshoot in accordance with the table below for each trouble symptom.


ABS warning light does not light up	See below
ABS warning light remains on	See page DI-247
1	Check operation of the ABS warning light.

PREPARATION:


- (a) Turn the ignition switch OFF.
- (b) Disconnect the connector from the ABS actuator.
- (c) Turn the ignition switch ON.

CHECK:

 Check the ABS warning light goes on.



2	Check for short circuit in harness and connector between combination meter and ABS actuator (See page IN-31).
----------	---

 

Replace or repair bulb or combination meter.