


ABS Warning Light Circuit

WIRING DIAGRAM

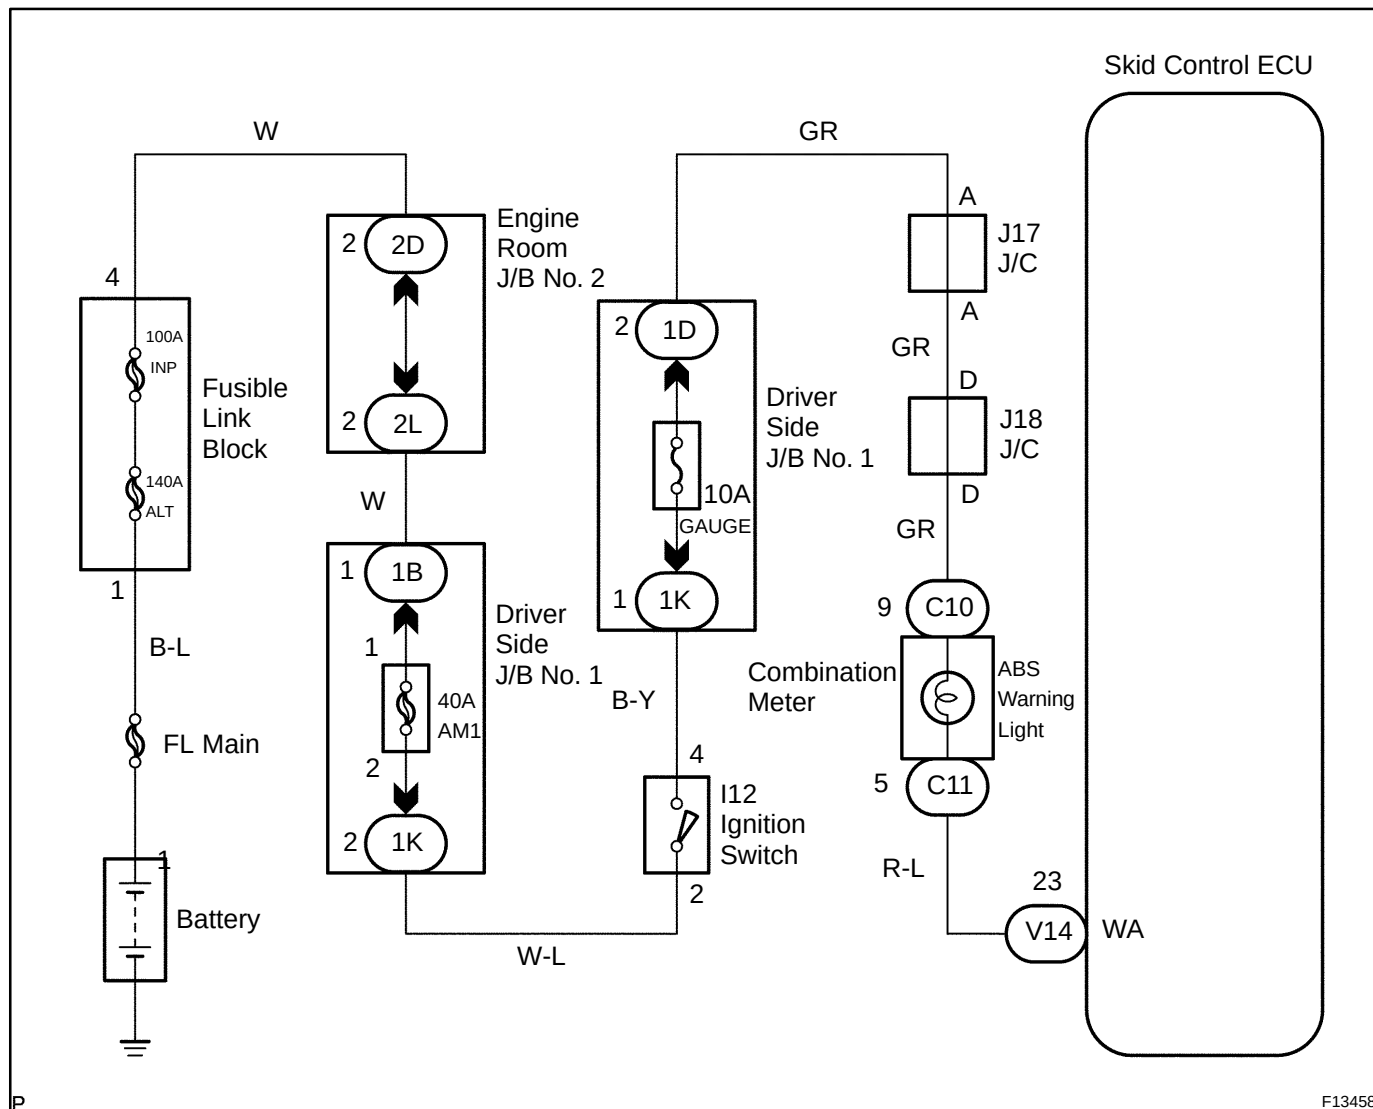

INSPECTION PROCEDURE

HINT:

Troubleshoot in accordance with the chart below for each trouble symptom.

ABS warning light does not light up	See below
ABS warning light remains on	See page DI-334



1	Check operation of the ABS warning light.
----------	--

PREPARATION:


- (a) Turn the ignition switch OFF.
- (b) Disconnect the connector from the skid control ECU.
- (c) Turn the ignition switch ON.

CHECK:

  Check the ABS warning light goes on.



2	Check for short circuit in harness and connector between combination meter and skid control ECU (See page IN-31).
----------	--

 

Replace or repair bulb or combination meter.
