

DTC	C1202 / 44	Brake Fluid Level Warning Switch Circuit
------------	-------------------	---

CIRCUIT DESCRIPTION


The brake fluid level warning switch sends appropriate signals to the ECU when the brake fluid level is low.

HINT:

Depressing the parking brake pedal turns on the brake warning light, but this DTC No. C1202/44 is not output.

DTC No.	DTC Detecting Condition	Trouble Area
C1202 / 44	Fluid level in the brake master cylinder reservoir tank remains low for 60 sec. or more. This means brake fluid warning switch likes on.	• Brake fluid level • Brake fluid level warning switch • Brake fluid level warning switch circuit

WIRING DIAGRAM

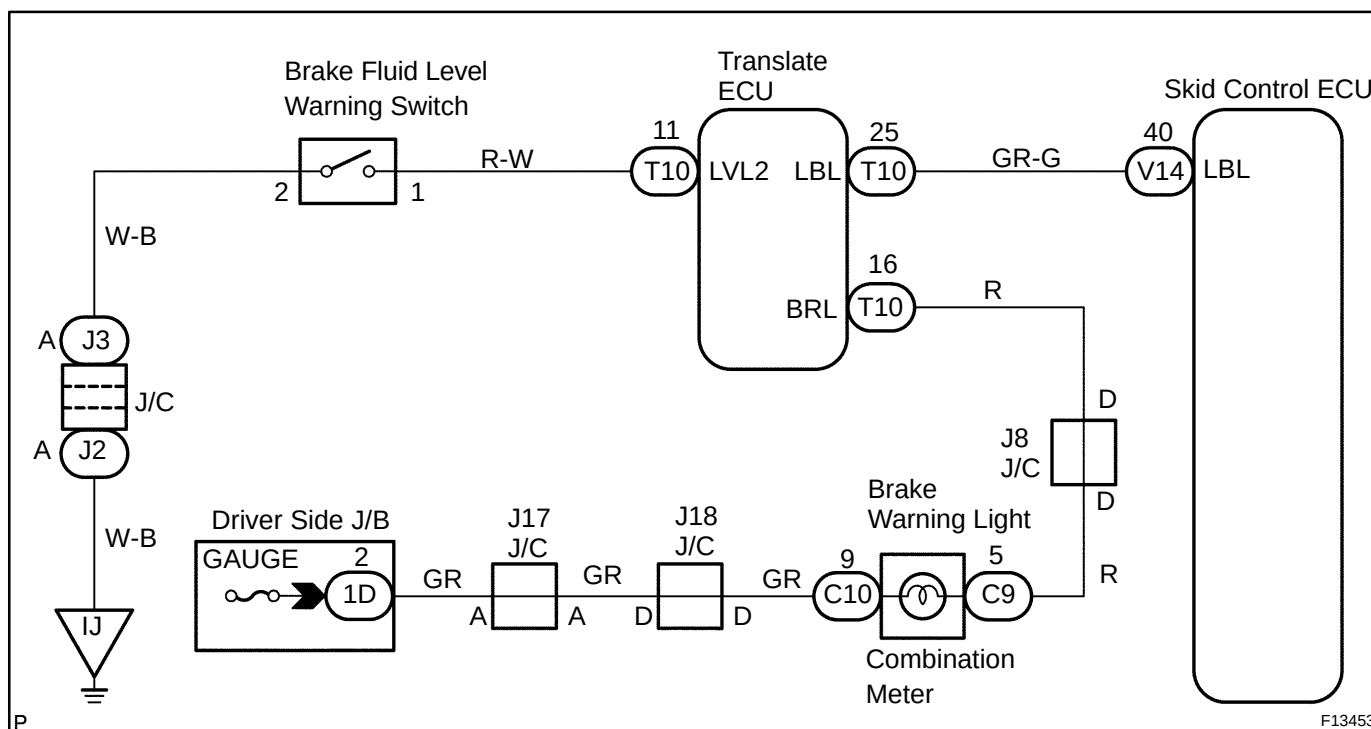

INSPECTION PROCEDURE

1	Check brake fluid level.
----------	---------------------------------

CHECK:

Check the amount of brake fluid in the reservoir.

NG

Check for fluid leakage, repair brake line and add fluid.

OK

2	Check brake fluid level warning switch (See page BE-48).
----------	--

NG

Replace brake fluid level warning switch.

OK

3	Check for open circuit in all the harness and components connected to brake warning light (See page IN-31).
----------	---

NG

Repair or replace harness or connector.

OK

Check and replace translate ECU.