


Ts Terminal Circuit

CIRCUIT DESCRIPTION


The sensor check circuit detects abnormality in the speed sensor signal which cannot be detected with the DTC check.

Connecting terminals Ts and E₁ of the DLC1 or Ts and CG of DLC3 starts the check.

WIRING DIAGRAM

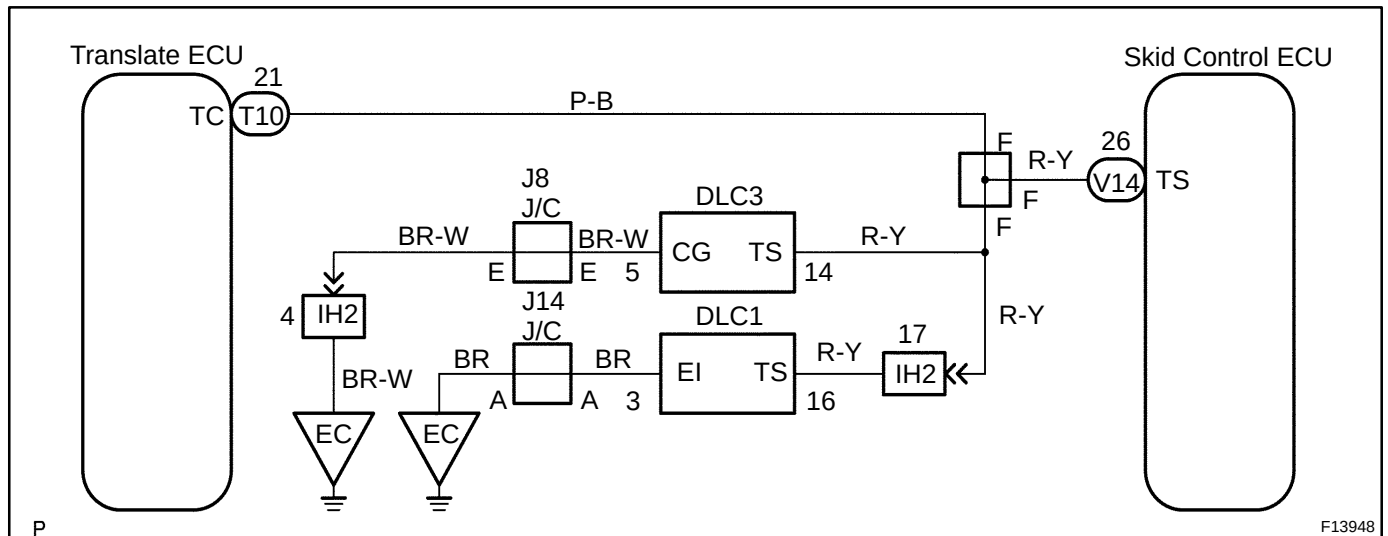

INSPECTION PROCEDURE

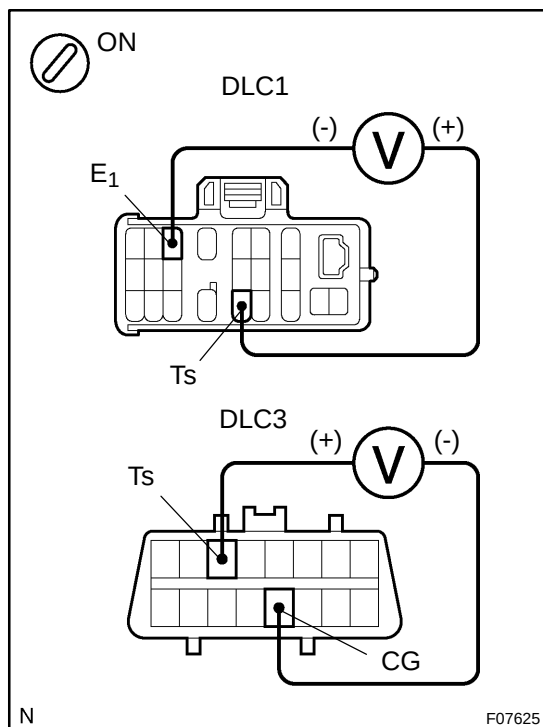1 Check voltage between terminals Ts and E₁ of DLC1.**CHECK:**

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Ts and E₁ of DLC1 or Ts and CG of DLC3.

OK:

Voltage: 10 - 14 V

OK

If ABS warning light does not blink even after Ts and E₁ or Ts and CG are connected, the ECU may be defective.

NG

2 Check for open and short circuit in harness and connector between skid control ECU and DLC1 or DLC3, DLC1 or DLC3 and body ground (See page [IN-31](#)).

NG

Repair or replace harness or connector.

OK

Check and replace skid control ECU.