


Back Up Power Source Circuit

CIRCUIT DESCRIPTION


This is the back up power source for the A/C control assembly. Power is supplied even when the ignition switch is off and is used for diagnostic trouble code memory, etc.

WIRING DIAGRAM

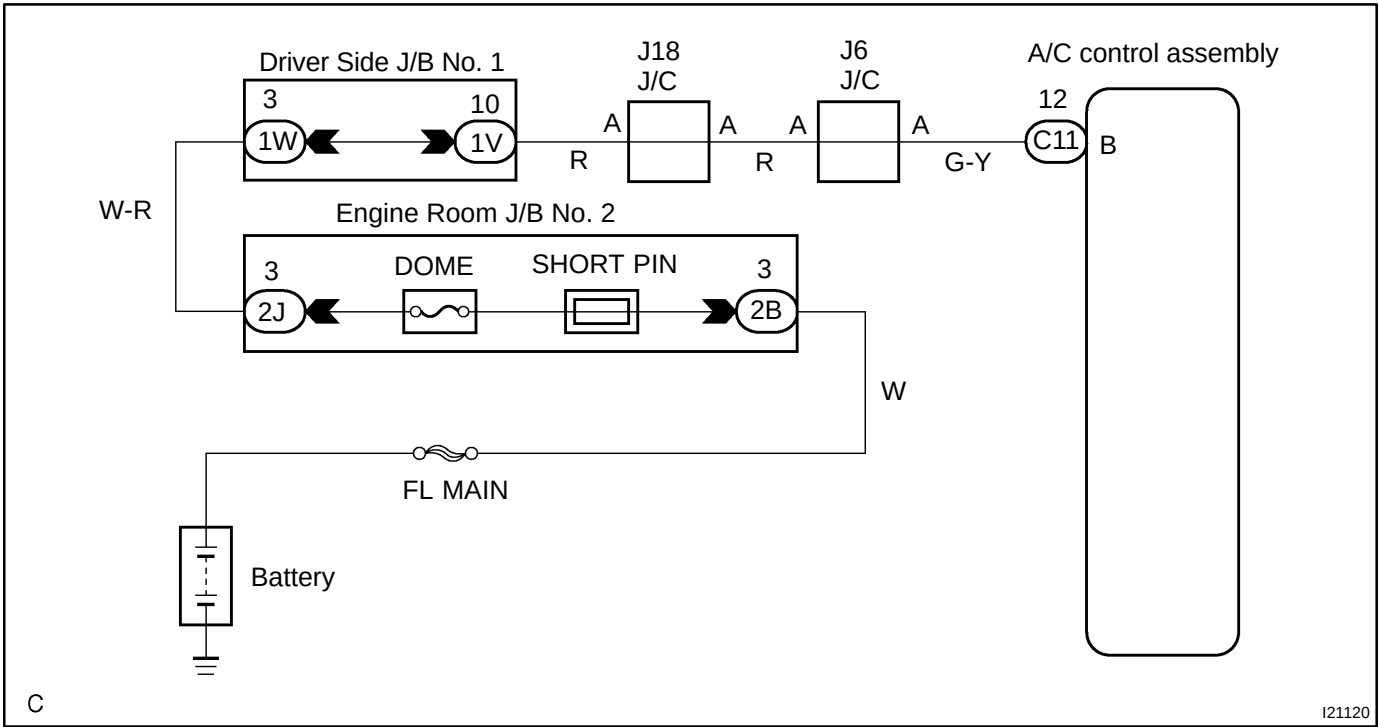

INSPECTION PROCEDURE

1	Check DOME fuse.
---	------------------

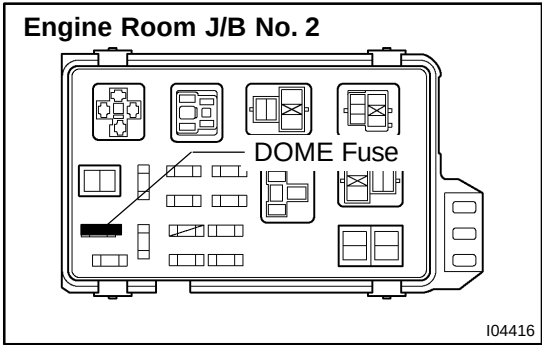

PREPARATION:

Remove DOME fuse from engine room J/B No.2.

CHECK:

Check continuity of DOME fuse.


OK:

Continuity

NG

Check for short in all the harness and components connected to the DOME fuse (See attached wiring diagram).

OK

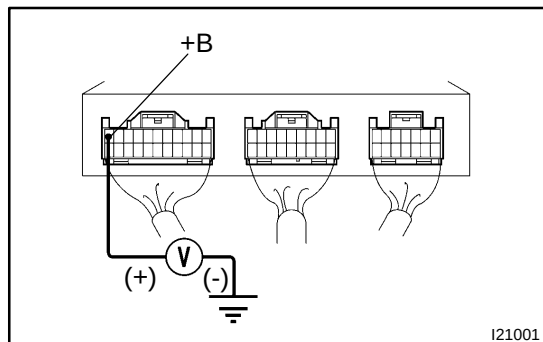2 Check voltage between terminal +B of A/C control assembly connector and body ground.**PREPARATION:**

Remove the A/C control assembly with connector still connected.

CHECK:

Measure voltage between terminal +B of A/C control assembly-connector and body ground.

OK:

Voltage : 10 - 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-697](#)).

NG

Check and repair harness and connector between A/C control assembly.