


DTC	31, 41	Front Air Mix Damper Position Sensor Circuit
------------	---------------	---


CIRCUIT DESCRIPTION

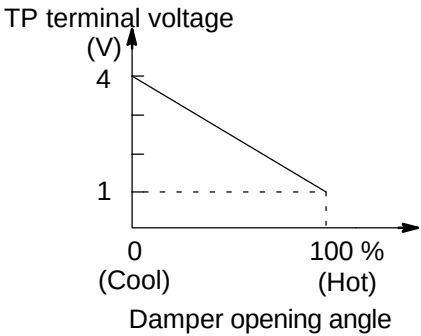

This sensor detects the position of the air mix damper and sends the appropriate signals to the A/C control assembly. The position sensor is built into the air mix damper control servomotor assembly.

DTC No.	Detection Item	Trouble Area
31	Short to ground or power source circuit in front air mix damper position sensor circuit.	- Front air mix damper position sensor. - Harness or connector between front air mix damper control servomotor assembly and A/C control assembly. - A/C control assembly.
41	Front air mix damper position sensor value does not change even if A/C control assembly operates front air mix damper control servomotor.	


WIRING DIAGRAM

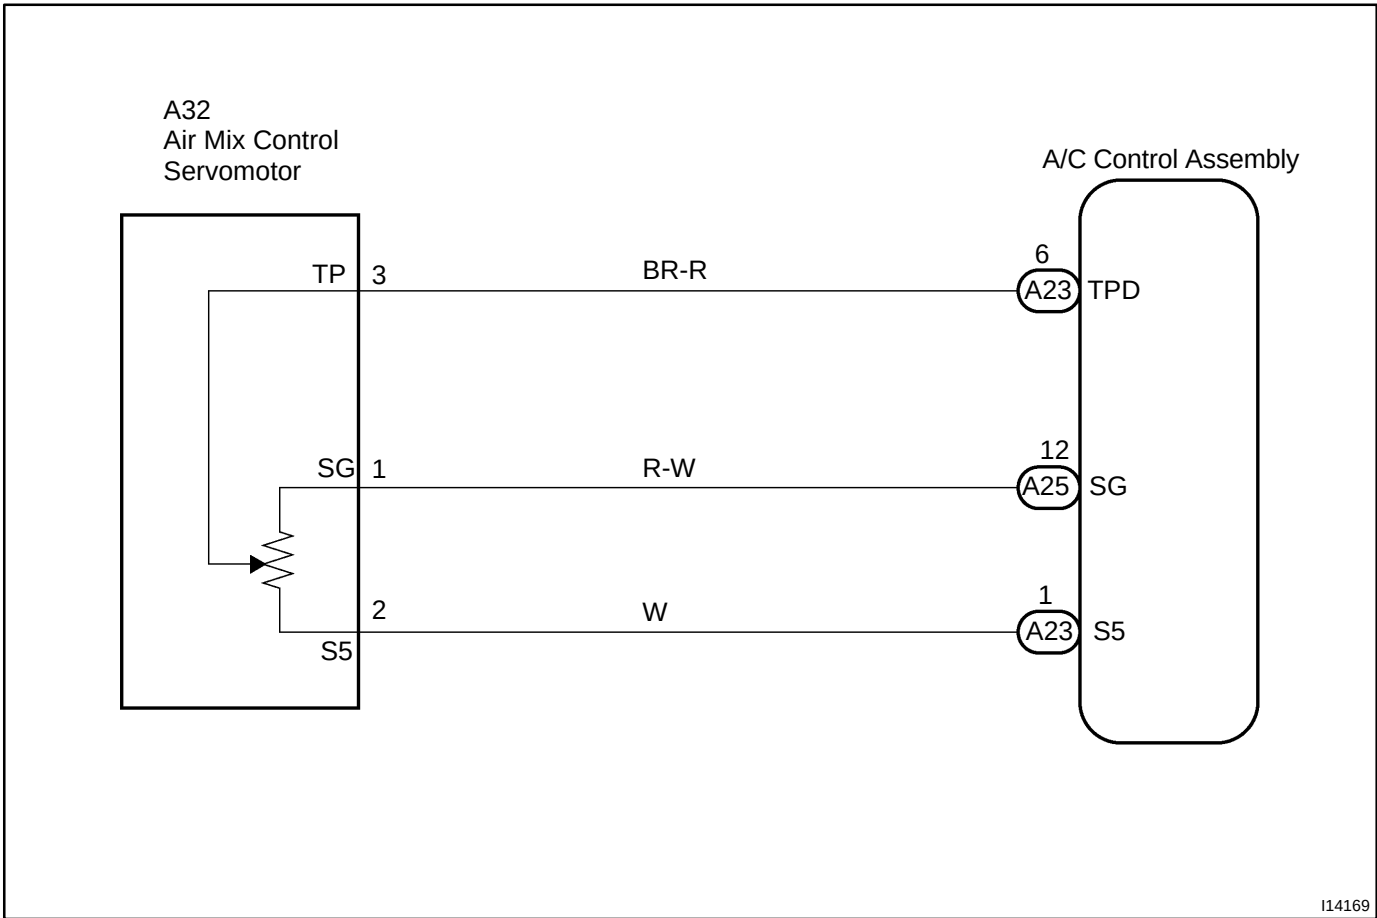

INSPECTION PROCEDURE

1

Check voltage between terminals TPD and SG of A/C control assembly connector.

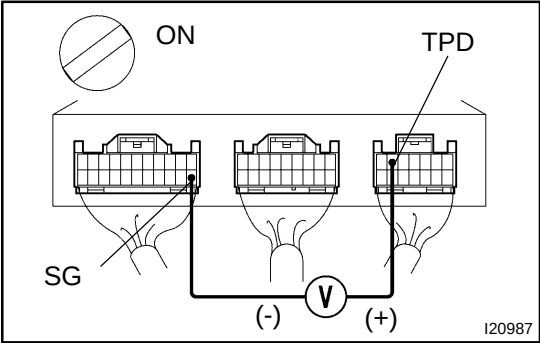

PREPARATION:
Remove A/C control assembly with connectors still connected.

- CHECK:**
- (a) Turn ignition switch to ON.
 - (b) Change the set temperature to activate the front air mix damper control servomotor, and measure the voltage between terminals TPD and SG of A/C control assembly connector each time when the set temperature is changed.

OK:

Set Temperature	Voltage
Max. cool	3.5 - 4.5 V
Max. hot	0.5 - 1.5 V

HINT:
As the set temperature increases, the voltage decreases.


NG

Go to step 2.

Ok

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-697](#)). However, if DTC 31 or 41 is displayed, check and replace A/C control assembly.

2 Check front air mix damper position sensor.

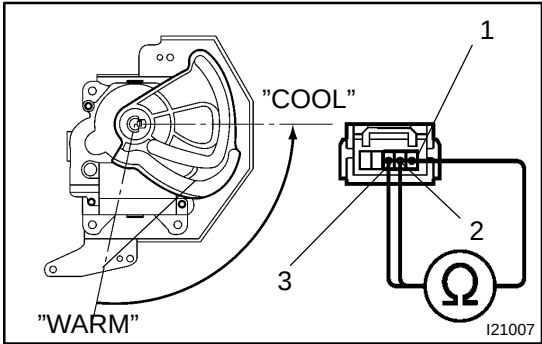

PREPARATION:

Remove air mix servomotor (See page [AC-90](#)).

CHECK:

Measure resistance between terminals 1 and 2 of front air mix damper control servomotor assembly connector.

OK:

Resistance : 4.2 - 7.8 kΩ

CHECK:

While operating front air mix damper control servomotor, following the procedure, measure resistance between terminals 1 and 3 of front air mix damper control servomotor assembly connector.

OK:

Position	Resistance
Max. cool	3.6 - 6.8 kΩ
Max. warm	0.5 - 1.1 kΩ

HINT:

As the front air mix damper control servomotor moves from cool side to warm side, the resistance decreases.

NG

Replace front air mix damper control servomotor assembly.

OK

3 Check harness and connector between A/C control assembly and front air mix damper control servomotor assembly (See page [IN-31](#)).

NG

Repair or replace harness or connector.

OK

Check and replace A/C control assembly.