


Passenger buckle switch and seat belt warning occupant detection sensor

CIRCUIT DESCRIPTION

This circuit detects the conditions of the passenger buckle switch and the seat belt warning occupant detection sensor, and makes the passenger seat belt warning flash.

WIRING DIAGRAM

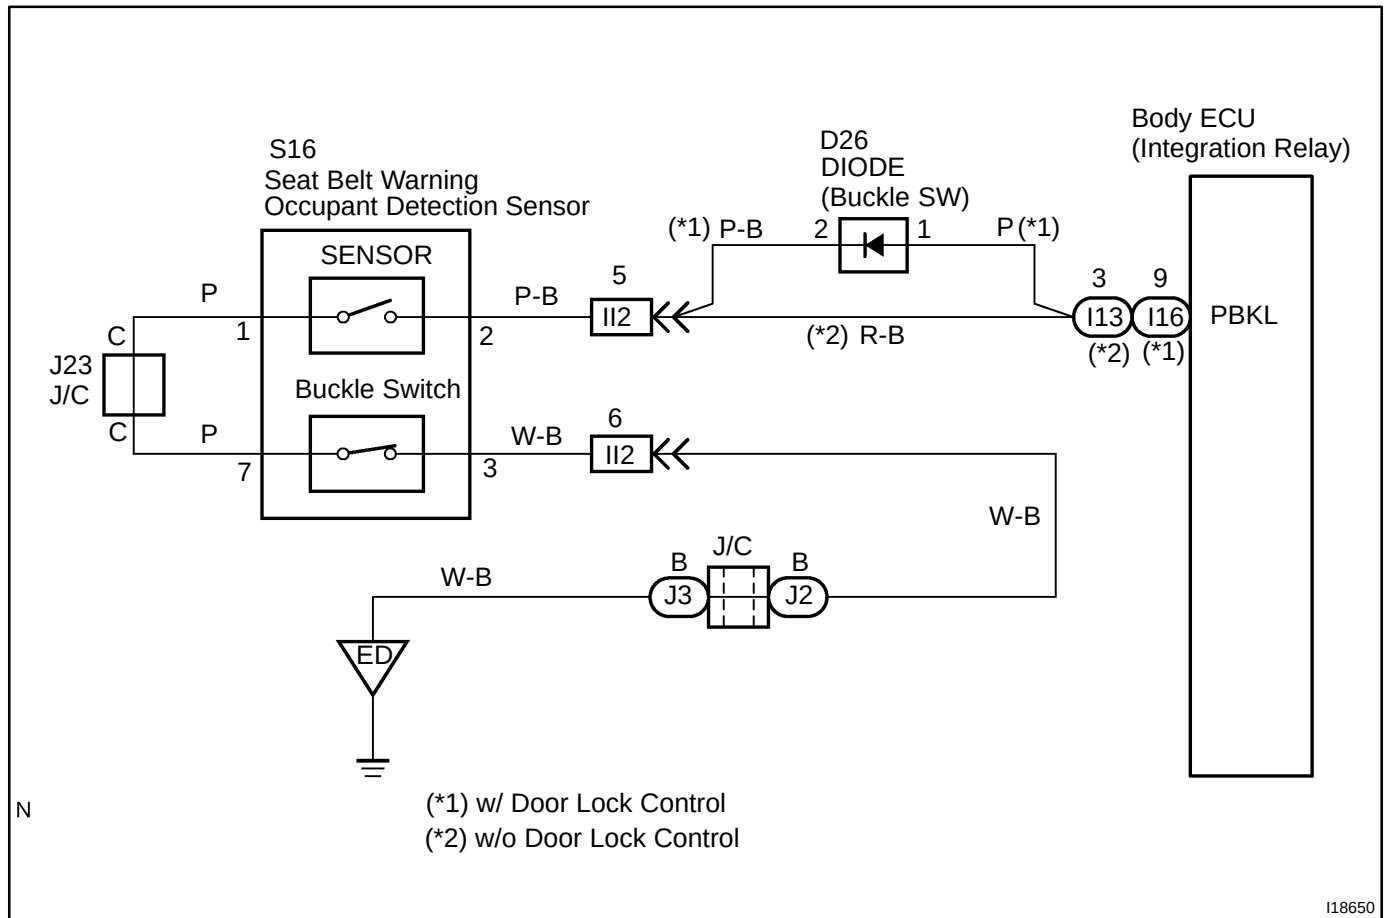

INSPECTION PROCEDURE

1 Check passenger buckle switch. (See page [BE-43](#))

NG

Replace the passenger buckle switch.

OK

2 Check seat belt warning occupant Detection sensor. (See page [BE-43](#))

NG

Replace the seat belt warning occupant Detection sensor.

OK

3 Check wireharness and connector between seat belt warning occupant Detection sensor and body ECU, passenger buckle switch and seat belt warning occupant Detection sensor, passenger buckle switch and body ground.

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-636](#))