


CIRCUIT DESCRIPTION

In this condition, if any of the following operations is done, the Tr in the ECU goes OFF and the headlight control relay switches OFF, thus stopping the headlights flashing:

- ## WIRING DIAGRAM

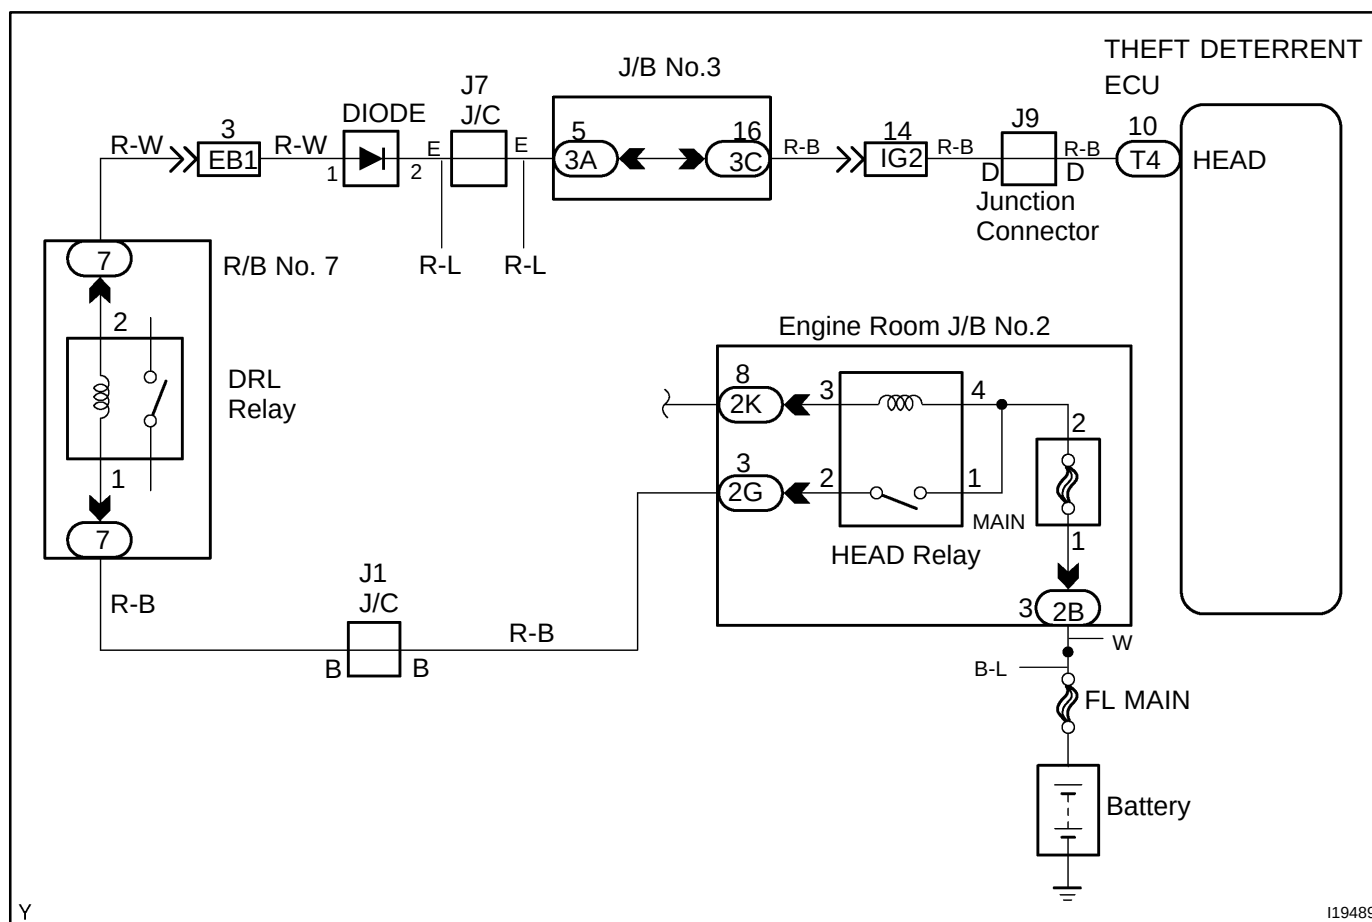


INSPECTION PROCEDURE

HINT:

The flow chart below is based on the premise that the headlights light up normally whenever the light control switch is operated. If headlight operation is not normal when the light control switch is operated, proceed to troubleshooting on page [BE-2](#).

- | | |
|----------|--|
| 1 | Check voltage between terminal HEAD of theft deterrent ECU connector and body ground. |
|----------|--|

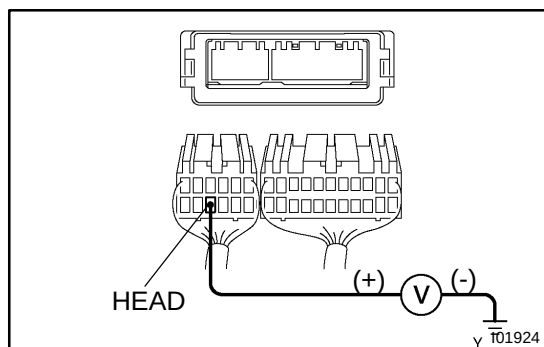

PREPARATION:

Disconnect the theft deterrent ECU connector.

CHECK:

Measure voltage between terminal HEAD of theft deterrent ECU connector and body ground.

OK:

Voltage: 10-14V

NG

Check and repair harness and connector between theft deterrent ECU and headlight control relay (See page [IN-31](#)).

OK

Check and replace theft deterrent ECU.