


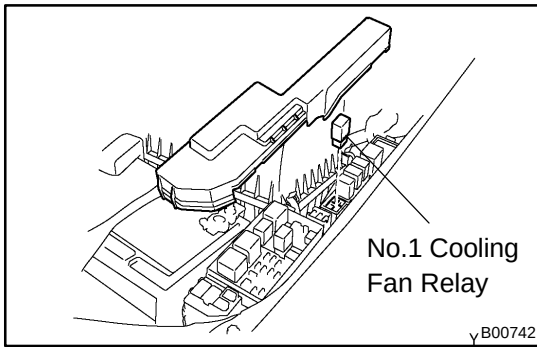


COOLING FAN RELAY INSPECTION

CO08H-01

1. INSPECT NO.1 COOLING FAN RELAY

- (a) Remove the No.1 cooling fan relay. (Marking: FAN NO.1)

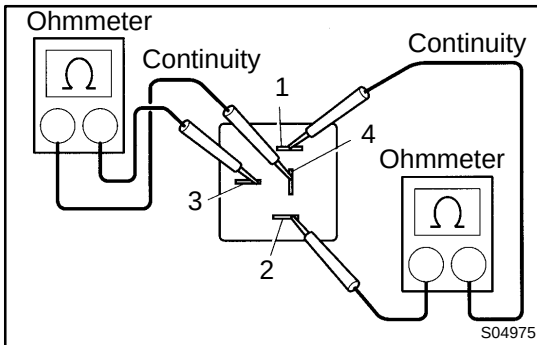


- (b) Inspect the No.1 cooling fan relay continuity.

- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (2) Check that there is continuity between terminals 3 and 4.

If there is no continuity, replace the relay.

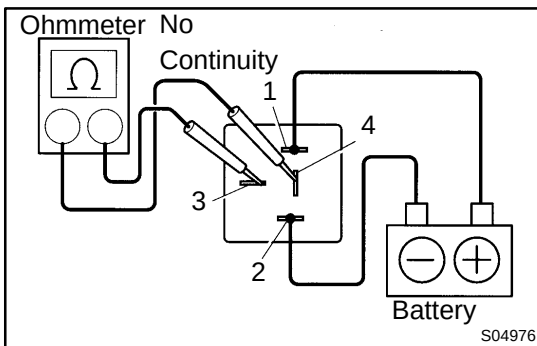


- (c) Inspect the No.1 cooling fan relay operation.

- (1) Apply battery voltage across terminals 1 and 2.

- (2) Using an ohmmeter, check that there is no continuity between terminals 3 and 4.


If there is continuity, replace the relay.

- (d) Install the No.1 cooling fan relay.

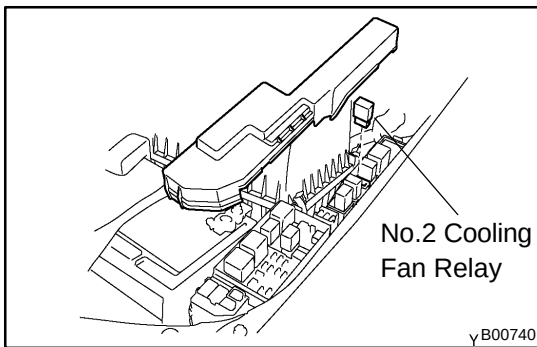

2. INSPECT NO.2 COOLING FAN RELAY

- (a) Remove the No.2 cooling fan relay. (Marking: FAN NO.2)

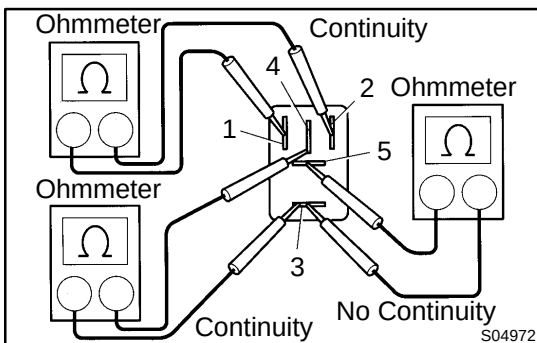

- (b) Inspect the No.2 cooling fan relay continuity.

- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.


If there is no continuity, replace the relay.

- (2) Check that there is continuity between terminals 3 and 4.


If there is no continuity, replace the relay.

- (3) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

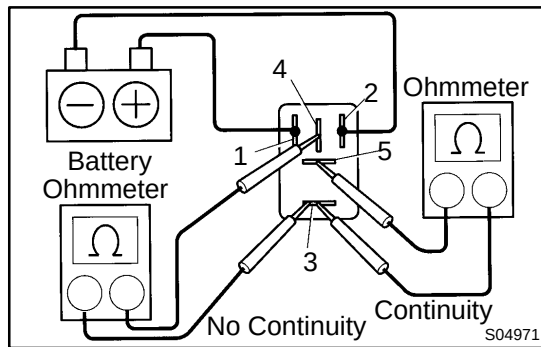


- (c) Inspect the No.2 cooling fan relay operation.
- (1) Apply battery voltage across terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is no continuity between terminals 3 and 4.
- If there is continuity, replace the relay.
- (3) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
- If there is no continuity, replace the relay.
- (d) Install the No.2 cooling fan relay.

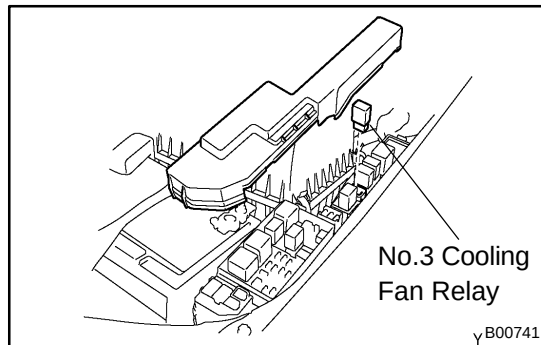


3. INSPECT NO.3 COOLING FAN RELAY

- (a) Remove the No.3 cooling fan relay. (Marking: FAN NO.3)

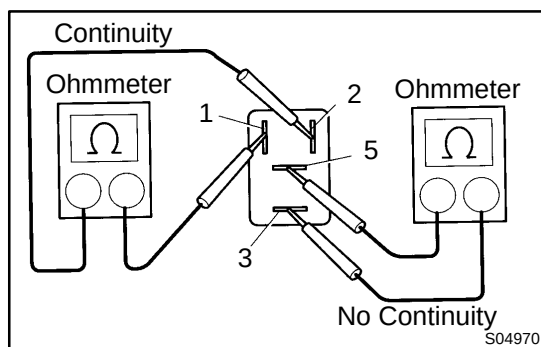

- (b) Inspect the No.3 cooling fan relay continuity.
- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
- If there is no continuity, replace the relay.
- (2) Check that there is no continuity between terminals 3 and 5.
- If there is continuity, replace the relay.

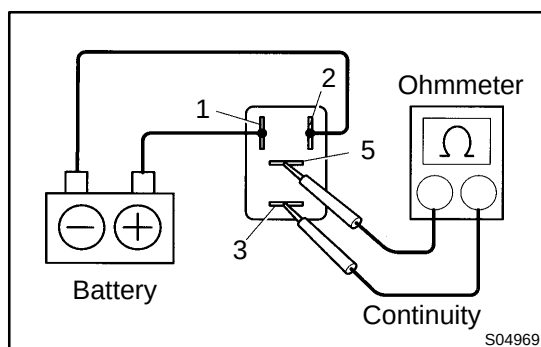

- (c) Inspect the No.3 cooling fan relay operation.
- (1) Apply battery voltage across terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
- If there is no continuity, replace the relay.
- (d) Install the No.3 cooling fan relay.