



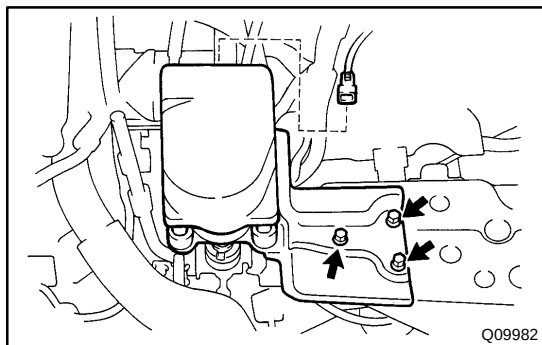


THROTTLE CABLE ON-VEHICLE REPAIR

AX0CK-02


1. **w/ Cruise control system:**
REMOVE CRUISE CONTROL ACTUATOR
 - (a) Remove the battery.
 - (b) Disconnect the connector, remove the 3 bolts and cruise control actuator.

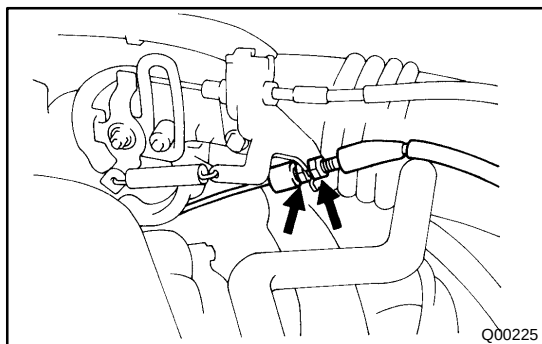

2. **DISCONNECT THROTTLE CABLE**
Loosen the adjusting nut and disconnect the cable from the throttle linkage.
3. **REMOVE PARK/NEUTRAL POSITION SWITCH**
(See page [AX-5](#))
4. **REMOVE VALVE BODY** (See page [AX-6](#))

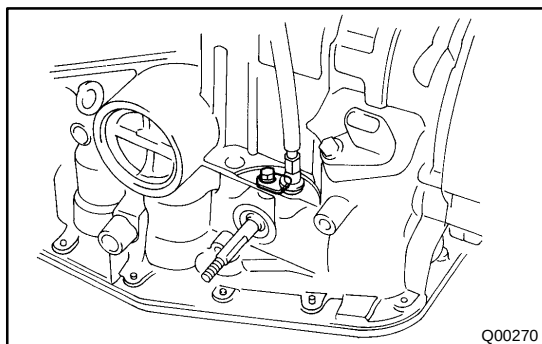


5. **REMOVE THROTTLE CABLE**
 - (a) Remove the bolt and retaining plate.
 - (b) Pull out the cable from the transaxle case.

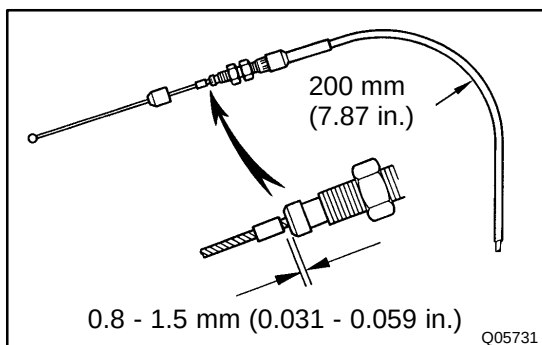

6. **INSTALL THROTTLE CABLE**
If the throttle cable is new, perform the following operations (a) - (c).
 - (a) Bend the cable so that there is radius of about 200 mm (7.87 in.).
 - (b) Pull the inner cable lightly until the resistance is slightly felt, and hold it there.
 - (c) Stake the stopper, 0.8 - 1.5 mm (0.031 - 0.059 in.) from the end of the outer cable.
 - (d) Install a new O-ring to the throttle cable.
 - (e) Pull in the throttle cable and install the retaining bolt.
Torque: 5.5 N·m (55 kgf·cm, 49 in.·lbf)
7. **INSTALL VALVE BODY** (See page [AX-6](#))
8. **INSTALL PARK/NEUTRAL POSITION SWITCH**
(See page [AX-5](#))

9. w/ Cruise control system:**INSTALL CRUISE CONTROL ACTUATOR**

- (a) Install the cruise control actuator with the 3 bolts and connect the connector.
- (b) Install the battery.

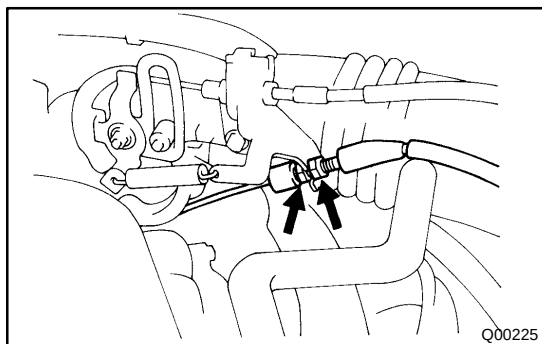**10. CONNECT THROTTLE CABLE TO ENGINE**

Connect the cable to the throttle linkage.

Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)

11. FILL ATF AND CHECK FLUID LEVEL

(See page [DI-157](#))

12. ADJUST THROTTLE CABLE (See page [DI-157](#))