


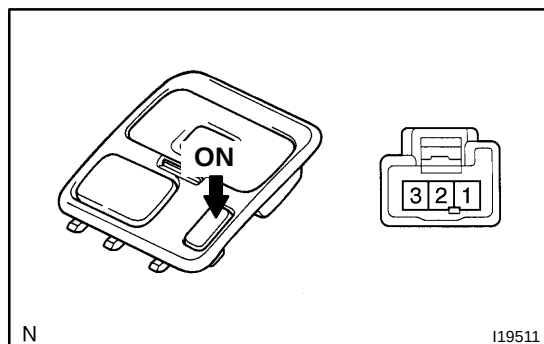


## INSPECTION

### 1. w/o Vanity

#### INSPECT FRONT PERSONAL LIGHT SWITCH CONTINUITY

- Disconnect the connector from the personal light.
- Turn the dome lamp switch ON, check that continuity exists between terminal 1 and 3.
- Turn the interior light switch to DOOR, check that continuity exists between terminal 2 and 3.

If operation is not as specified, replace the switch.

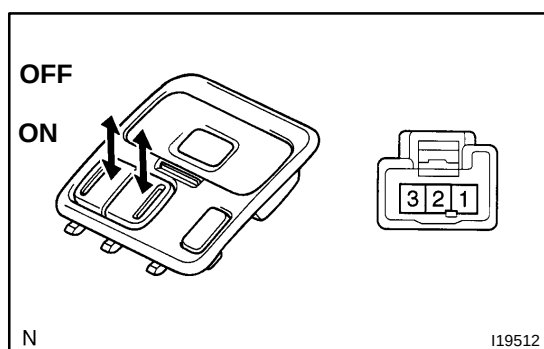


### 2. w/ Vanity:

#### INSPECT FRONT PERSONAL LIGHT SWITCH CONTINUITY

- Disconnect the connector from the personal light.
- Push the personal light switch ON, check that continuity exists between terminal 1 and 3.
- Turn the interior light switch to DOOR, check that continuity exists between terminal 2 and 3.


If operation is not as specified, replace the switch.

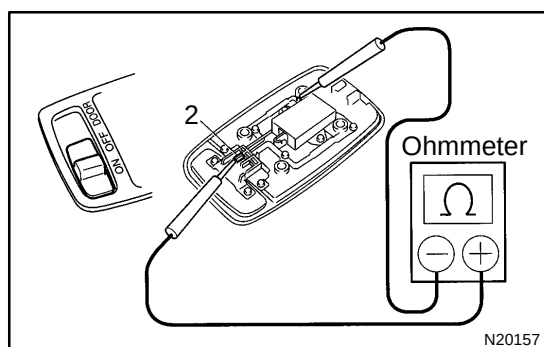

### 3. CE grade:


#### INSPECT REAR NO.1 INTERIOR LIGHT SWITCH CONTINUITY

- Disconnect the connector from the interior light.
- Turn the interior light switch ON, check that continuity exists between terminal 2 and body ground.

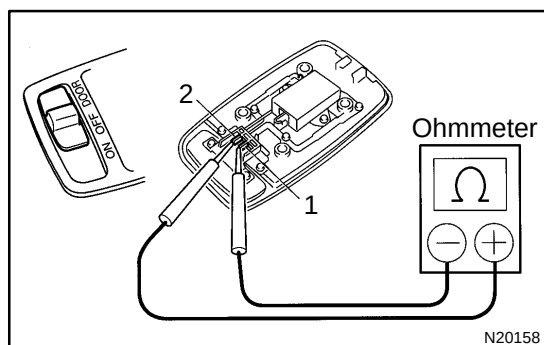


- Turn the interior light switch to DOOR, check that continuity exists between terminal 1 and 2.

If operation is not as specified, replace the switch.

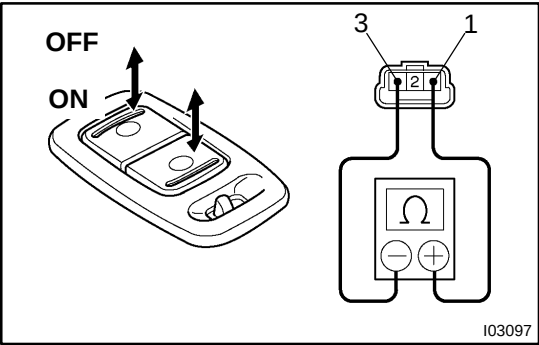


4. LE grade:  
**INSPECT REAR NO.1 INTERIOR LIGHT SWITCH CONTINUITY**

- (a) Disconnect the connector from the personal light.
- (b) Push the personal light switch ON, check that continuity exists between terminal 1 and 3.

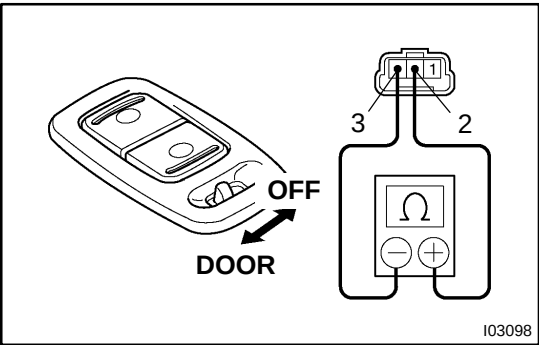


- (c) Turn the interior light switch to DOOR, check that continuity exists between terminal 2 and 3.
- If operation is not as specified, replace the switch.

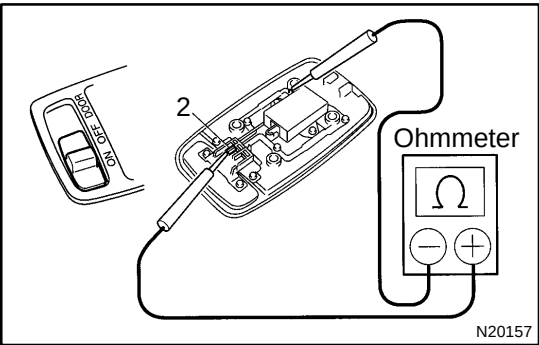


5. **INSPECT REAR NO.2 INTERIOR LIGHT SWITCH CONTINUITY**

- (a) Disconnect the connector from the interior light.
- (b) Turn the interior light switch ON, check that continuity exists between terminal 2 and body ground.

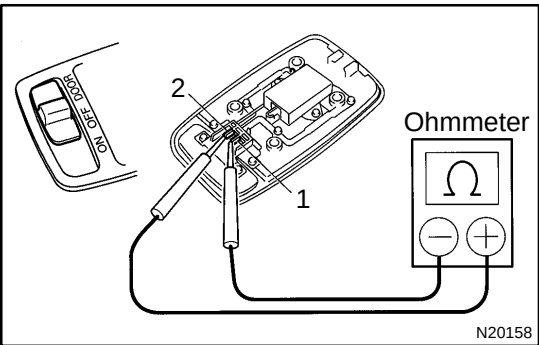


- (c) Turn the interior light switch DOOR, check that continuity exists between terminal 1 and 2.
- If operation is not as specified, replace the switch.

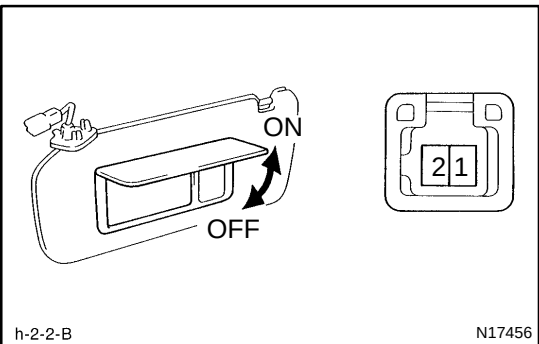

6. **INSPECT VANITY LIGHT CONTINUITY**

| Switch position | Tester connection | Specified condition |
|-----------------|-------------------|---------------------|
| OFF (Closed)    | -                 | No continuity       |
| ON (Opened)     | 1 - 2             | Continuity          |


If continuity is not as specified, replace the bulb or vanity light.

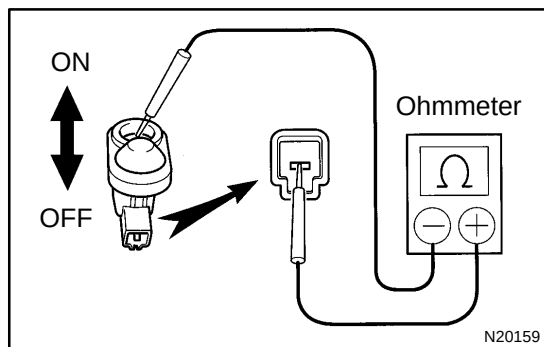

## 7. INSPECT FRONT AND SLIDE DOOR COURTESY SWITCH CONTINUITY

- (a) Check that continuity exists between terminals and the switch body with the switch ON (switch pin released: door opened).
- (b) Check that no continuity exists between terminals and the switch body with the switch OFF (switch pin pushed in: door closed).

If operation is not as specified, replace the switch.

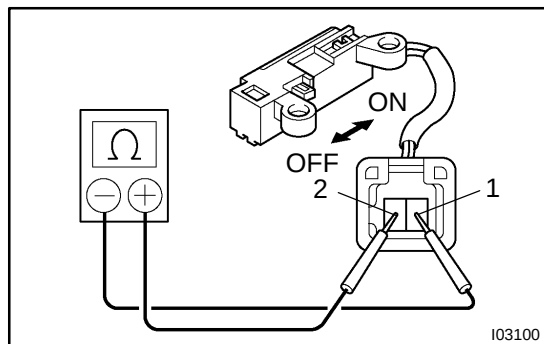

## 8. INSPECT BACK DOOR COURTESY SWITCH CONTINUITY

- (a) Check that continuity exists between terminals and the switch body with the switch ON (switch pin released: door opened).
- (b) Check that no continuity exists between terminals and the switch body with the switch OFF (switch pin pushed in: door closed).

If operation is not as specified, replace the switch.