

DISASSEMBLY

1. **REMOVE RELEASE HANDLE**
2. **REMOVE REAR SEAT CUSHION UNDER COVER**
3. **REMOVE SEAT RECLINING COVERS**
4. **REMOVE SEAT RECLINING ADJUSTERS**
 - (a) Remove the 4 bolts from the seat cushion assembly.
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
 - (b) Remove the 4 bolts and reclining adjusters from the seatback assembly.
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
5. **REMOVE SEATBACK COVER**
 - (a) Pull off the reclining connecting pipe from the seatback assembly.
 - (b) Remove the headrest.
 - (c) Remove the 2 clips and seatback board.
 - (d) Remove the headrest supports.
 - (e) Remove the seatback frame.
 - (f) Remove the seatback cover from the seatback pad.
6. **REMOVE SEAT LEG COVERS**
 - (a) Remove the 4 screws and seat leg cover.
 - (b) Employ the same manner described above to the other side.
7. **REMOVE SEAT ADJUSTER ASSEMBLY**

Remove the 4 bolts and seat adjuster assembly.
Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)
8. **REMOVE SEAT CUSHION COVER**
 - (a) Remove the seat cushion frame.
 - (b) Remove the seat cushion cover from the seat cushion pad.
9. **REMOVE REAR NO. 2 INNER BELT**
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
10. **REMOVE REMOVE LEVER**
11. **REMOVE SEAT TRACK LOWER RAIL PROTECTOR**
12. **REMOVE SEAT TRACK HANDLE**