


REMOVAL

1. REMOVE REAR NO.1 SEAT
2. REMOVE REAR NO.2 SEAT

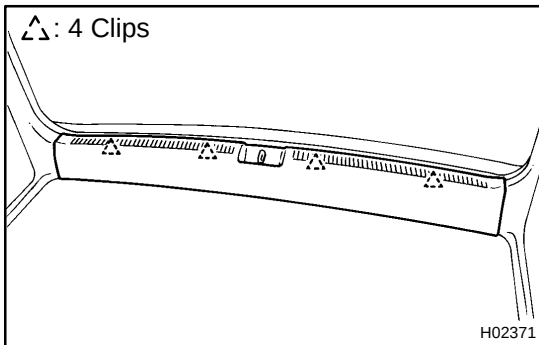


3. REMOVE BACK DOOR SCUFF PLATE

Using a screwdriver, remove the back door scuff plate.

HINT:

Tape the screwdriver tip before use.

4. REMOVE SLIDE DOOR SCUFF PLATE

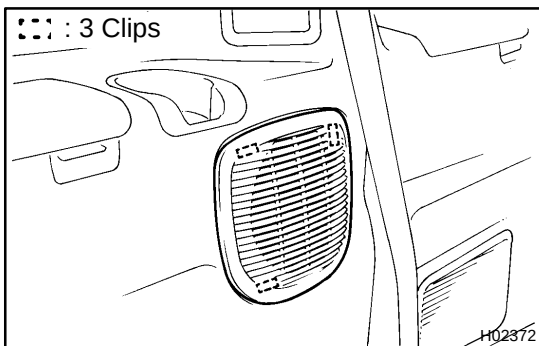


5. REMOVE REAR LH QUARTER TRIM PANEL

(a) Using a screwdriver, remove the speaker grille.

HINT:

Tape the screwdriver tip before use.

(b) Remove the quarter trim cover.

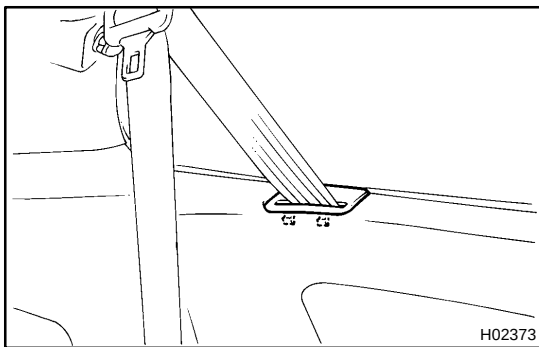


(c) Using a screwdriver, remove the rear side trim board cover.

HINT:

Tape the screwdriver tip before use.

(d) Remove the luggage room light, then disconnect the connector.

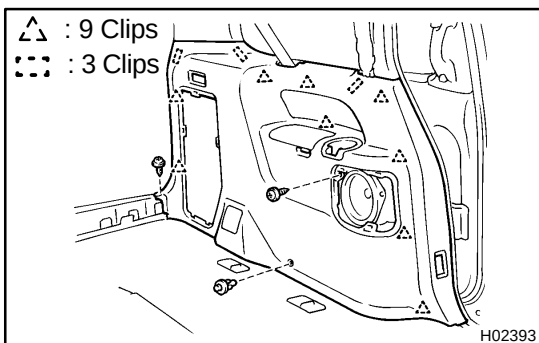


(e) Remove the slide door courtesy light, then disconnect the connector.

(f) Remove the 2 screws, clip and rear LH quarter trim panel.

(g) w/ LH side power slide door:

Remove the 3 screws and cup holder sub-assembly from the trim panel.

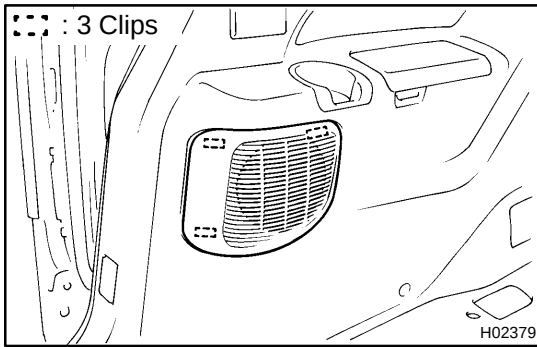**6. REMOVE RH QUARTER TRIM PANEL**

(a) Using a screwdriver, remove the speaker grille.


HINT:

Tape the screwdriver tip before use.

(b) Using a screwdriver, remove the air inlet grille.

HINT:

Tape the screwdriver tip before use.

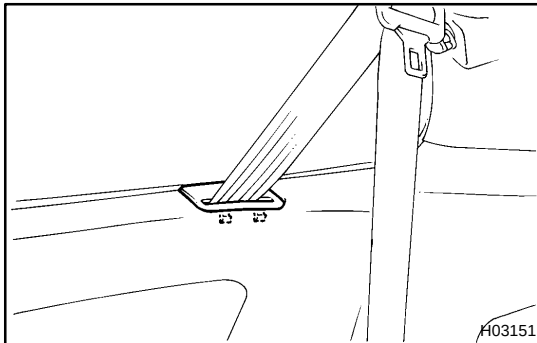


(c) Using a screwdriver, remove the rear side trim board cover.


HINT:

Tape the screwdriver tip before use.

(d) Remove the slide door courtesy light, then disconnect the connector.

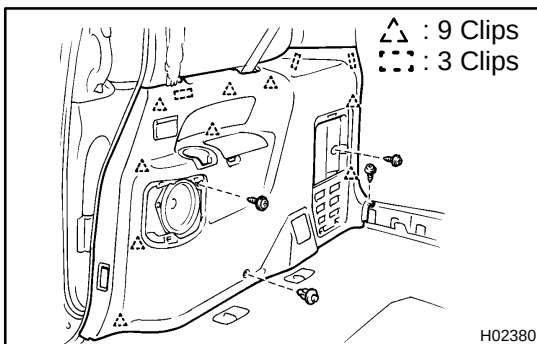

(e) Remove the 2 screws, clip and RH quarter trim panel.

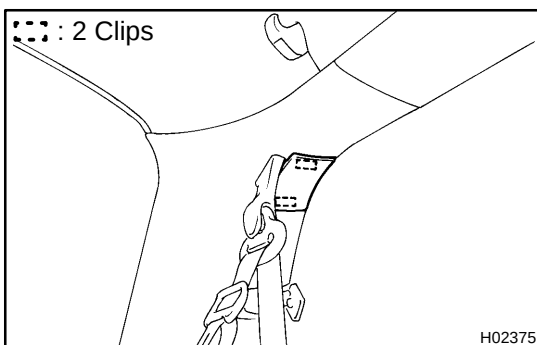
**7. REMOVE NO.2 REAR WINDOW SIDE GARNISH**

(a) Using a screwdriver, remove the quarter pillar cover.

HINT:

Tape the screwdriver tip before use.

(b) Employ the same manner described above to the other side.

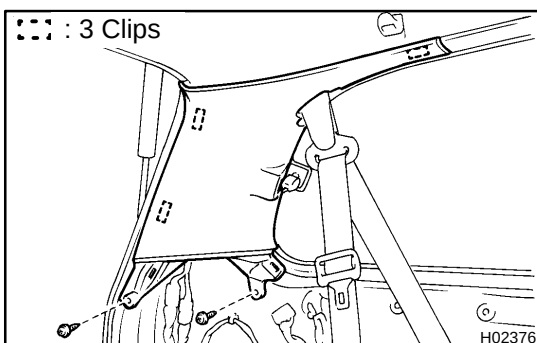


(c) Remove the 2 screws and No.2 rear window side garnish.


8. REMOVE REAR WINDOW SIDE GARNISH

(a) Remove the No.1 rear seat outer belt shoulder anchor.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

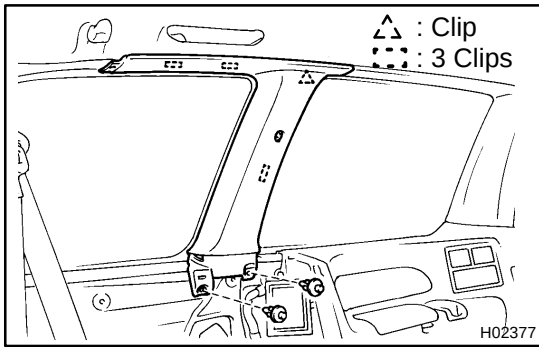

- (b) Remove the 2 clips and rear window side garnish.
- (c) Employ the same manner described above to the other side.

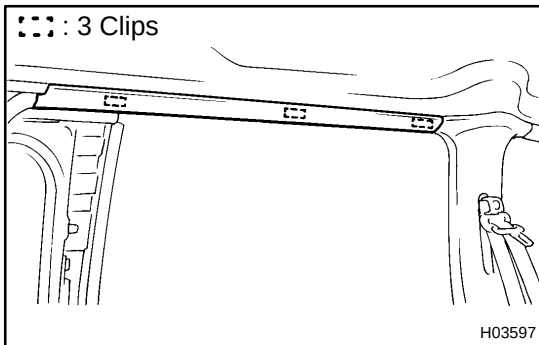


9. REMOVE ROOF SIDE RAIL GARNISH

- (a) Using a screwdriver, remove the roof side rail garnishes.
- (b) Employ the same manner described above to the other side.

10. REMOVE FRONT DOOR SCUFF PLATES

11. REMOVE COWL SIDE BOARDS

12. REMOVE FRONT DOOR OPENING TRIM COVERS

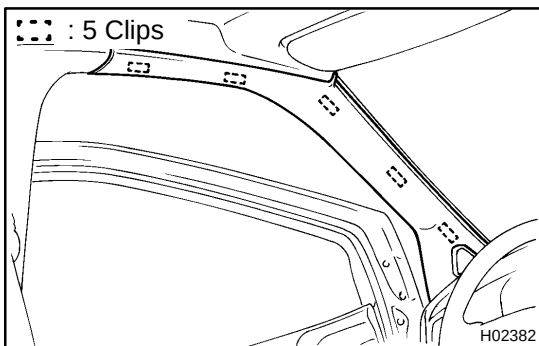


13. REMOVE FRONT PILLAR GARNISH

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.


- (b) w/ Tweeter speaker:
Disconnect the connector.
- (c) Employ the same manner described above to the other side.

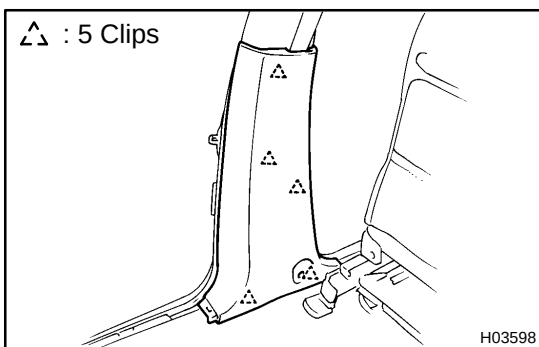

14. w/o Power slide door:

REMOVE LOWER CENTER PILLAR GARNISH


- (a) Remove the front seat outer floor anchor.
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
- (b) Remove the lower center pillar garnish.
- (c) Employ the same manner described above to the other side.

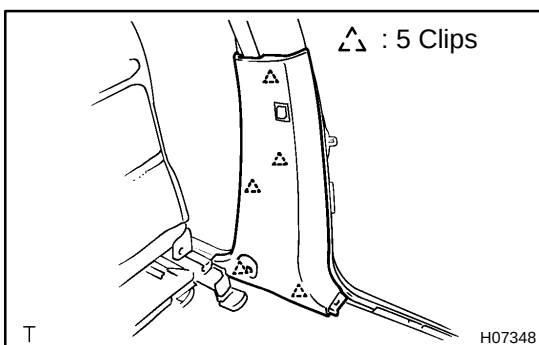


15. w/ Power slide door:

REMOVE LOWER CENTER PILLAR GARNISH

- (a) Remove the front seat outer belt floor anchor.
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
- (b) Remove the lower center pillar garnish.
- (c) Disconnect the connector.
- (d) Employ the same manner described above to the other side.

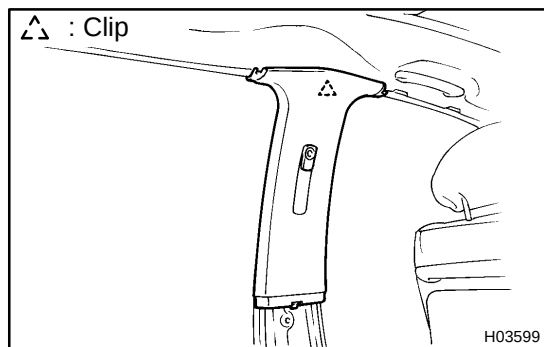**16. REMOVE UPPER CENTER PILLAR GARNISH**


- (a) Remove the front seat outer belt shoulder anchor.
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
- (b) Remove the clip and upper center pillar garnish as shown in the illustration.
- (c) Employ the same manner described above to the other side.

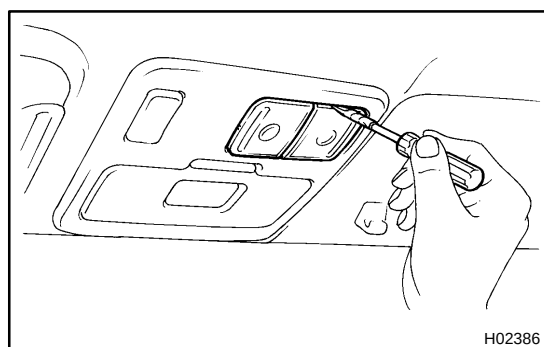17. REMOVE COAT HOOKS**18. REMOVE ASSIST GRIPS****19. REMOVE SUN VISORS AND HOLDERS****20. w/ Sliding roof:****REMOVE SLIDING ROOF OPENING TRIM MOULDING****21. REMOVE ROOF CONSOLE BOX**

- (a) XLE, LE grade:
Using a screwdriver, remove the 2 lenses.

HINT:


Tape the screwdriver tip before use.

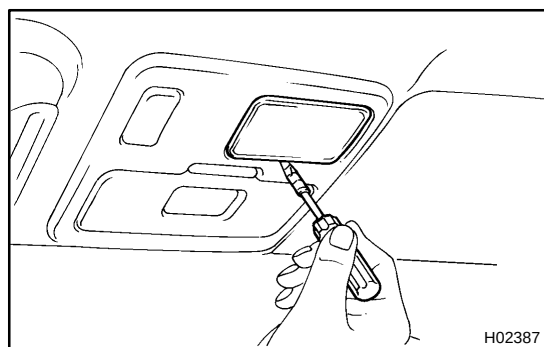

- (b) CE grade:
Using a screwdriver, remove the lens.

HINT:


Tape the screwdriver tip before use.

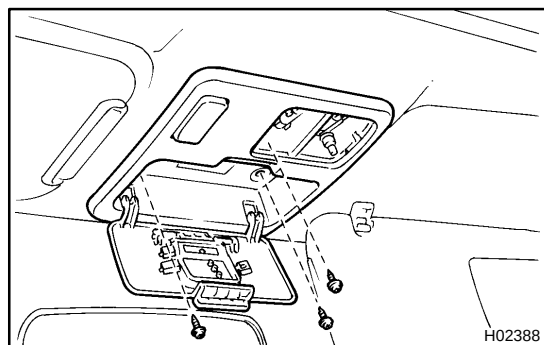

- (c) Remove the 3 screws and roof console box, then disconnect the connectors.

22. REMOVE GLASSES BOX


Remove the 2 screws and glasses box.

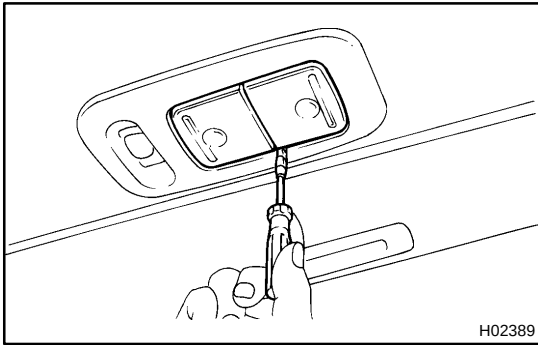**23. REMOVE REAR NO.1 ROOM LIGHT**

- (a) XLE, LE grade:
Using a screwdriver, remove the 2 lenses.

HINT:


Tape the screwdriver tip before use.

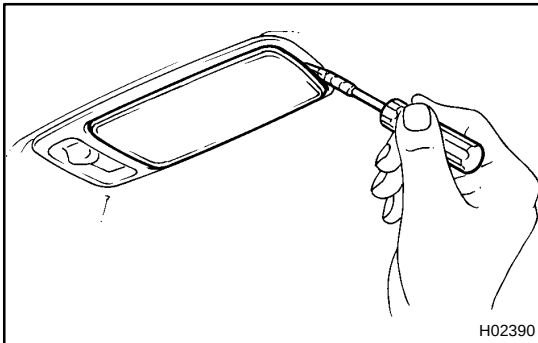

- (b) CE grade:
Using a screwdriver, remove the lens.

HINT:

Tape the screwdriver tip before use.

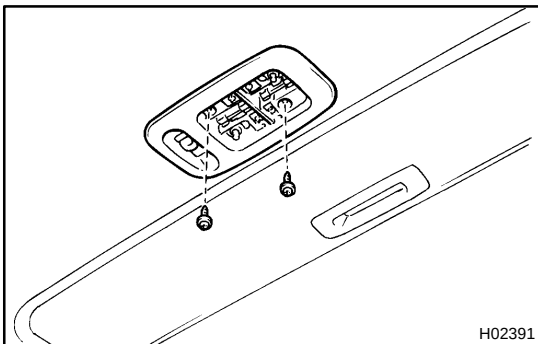

- (c) Remove the 2 screws and rear No.1 room light, then disconnect the connector.


24. REMOVE REAR NO.2 ROOM LIGHT

- (a) Using a screwdriver, remove the lens.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and rear No.2 room light, then disconnect the connector.

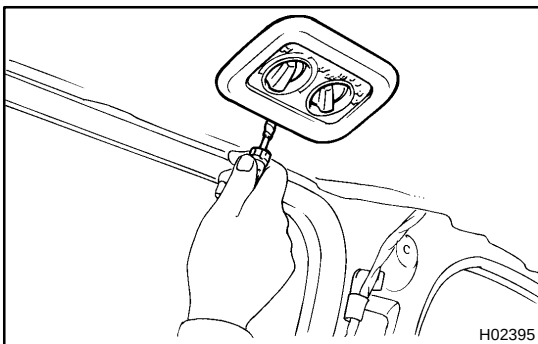**25. REMOVE ROOF HEADLINING**

- (a) Using a screwdriver, remove the heater control panel.

HINT:

Tape the screwdriver tip before use.

- (b) Using a clip remover, remove the 4 clips and roof headlining.

26. REMOVE FRONT PILLAR NO. 2 SPACER

- (a) Remove the 2 screws and front pillar No. 2 spacer.

- (b) Employ the same manner described above to the other side.

27. REMOVE ROOF HEADLINING SPACER

- (a) Remove the 2 screws and roof headlining spacer.

- (b) Employ the same manner described above to the other side.