


REMOVAL

1. REMOVE REAR NO.2 SEAT
2. REMOVE SLIDE DOOR SCUFF PLATE

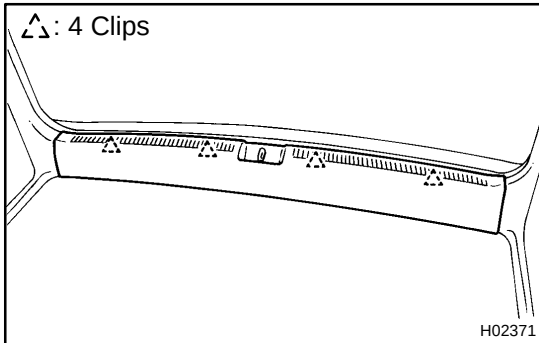


3. REMOVE BACK DOOR SCUFF PLATE

Using a screwdriver, remove the back door scuff plate.

HINT:

Tape the screwdriver tip before use.

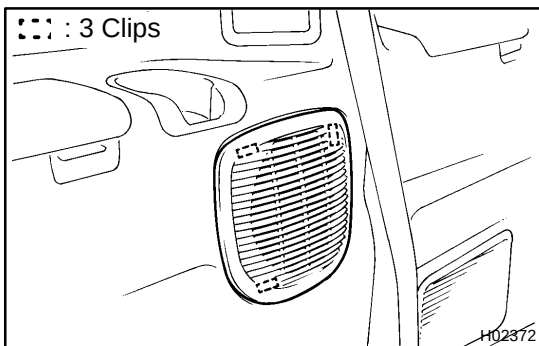


4. REMOVE REAR LH QUARTER TRIM PANEL

(a) Using a screwdriver, remove the speaker grille.

HINT:

Tape the screwdriver tip before use.

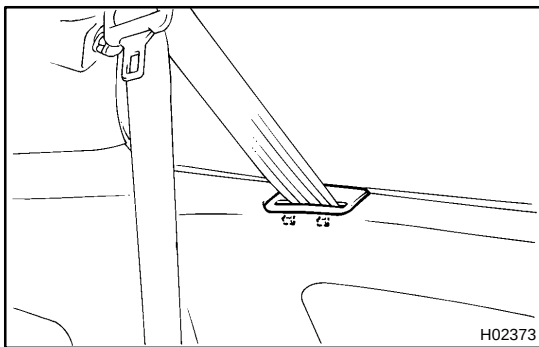

(b) Remove the quarter trim cover.


(c) Using a screwdriver, remove the rear side trim board cover.

HINT:


Tape the screwdriver tip before use.

(d) Remove the luggage room light, then disconnect the connector.

(e) Remove the slide door courtesy light, then disconnect the connector.

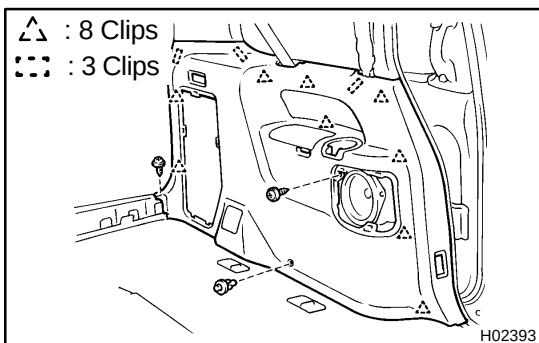

(f) Remove the 2 screws, clip and rear LH quarter trim panel.

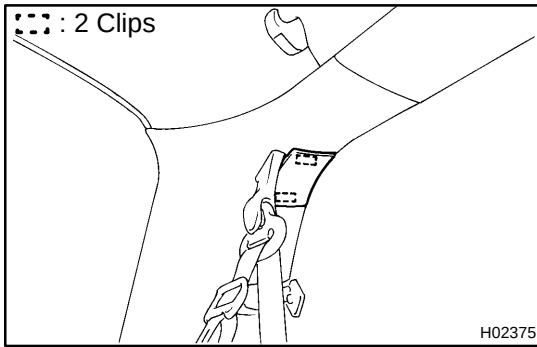


5. REMOVE NO.2 LH REAR WINDOW SIDE GARNISH

- (a) Using a screwdriver, remove the quarter pillar cover.

HINT:

Tape the screwdriver tip before use.

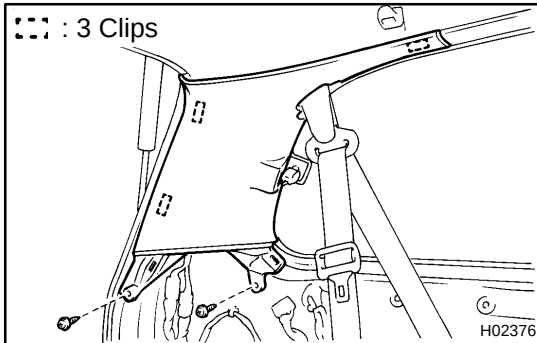


- (b) Remove the 2 screws and No.2 LH rear window side garnish.


6. REMOVE LH REAR WINDOW SIDE GARNISH

- (a) Remove the No.1 rear seat outer belt shoulder anchor.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

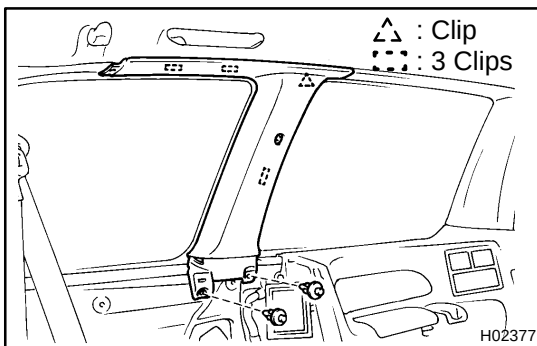

- (b) Remove the 2 clips and LH rear window side garnish.

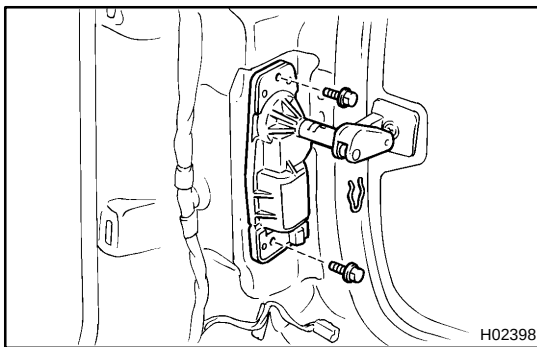

7. w/ Power vent window:

REMOVE REAR SIDE WINDOW

- (a) Disconnect the power vent window motor connector.
 (b) Remove the clip, 2 bolts and power vent window motor.
 (c) Remove the 2 nuts and rear side window.
 (d) Remove the screw and quarter window lock hinge from the rear side window.

8. w/o Power vent window:

REMOVE REAR SIDE WINDOW

- (a) Remove the 2 bolts, 2 nuts and rear side window.
 (b) Remove the screw and quarter window lock from the rear side window.

9. REMOVE REAR SIDE WINDOW WEATHERSTRIP