



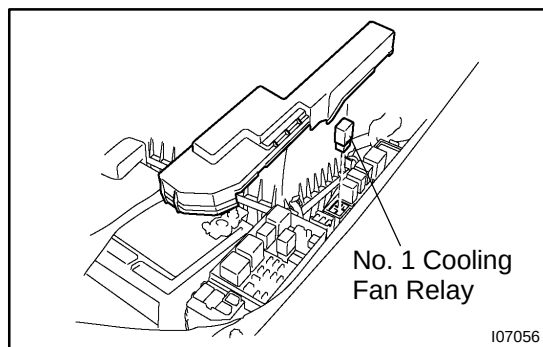


COOLING FAN RELAY INSPECTION

AC21J-01


1. REMOVE NO. 1 COOLING FAN RELAY (Marking: FAN NO. 1) FROM ENGINE ROOM R/B NO. 1

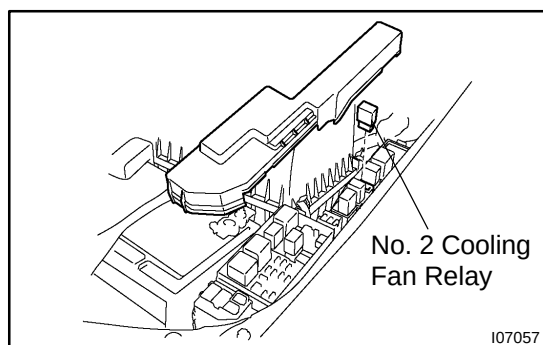

2. REMOVE NO. 2 COOLING FAN RELAY (Marking: FAN NO. 2) FROM ENGINE ROOM R/B NO. 1

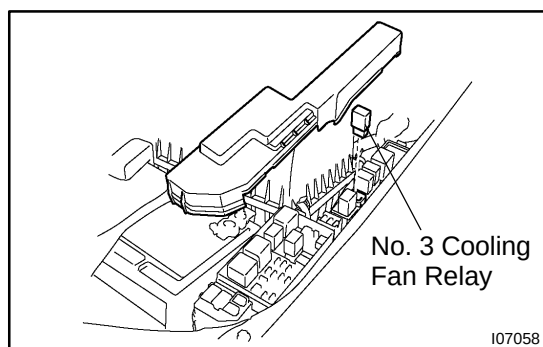


3. REMOVE NO. 3 COOLING FAN RELAY (Marking: FAN NO. 3) FROM ENGINE ROOM R/B NO. 1

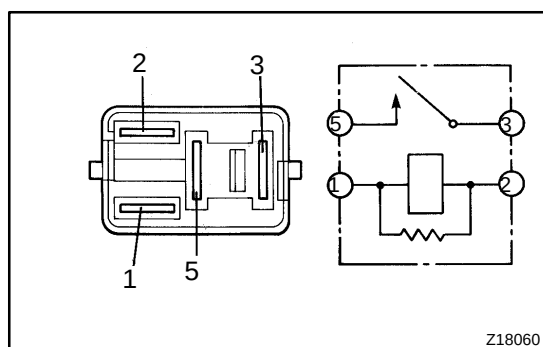

4. INSPECT NO. 1 FAN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity


If continuity is not as specified, replace the relay.

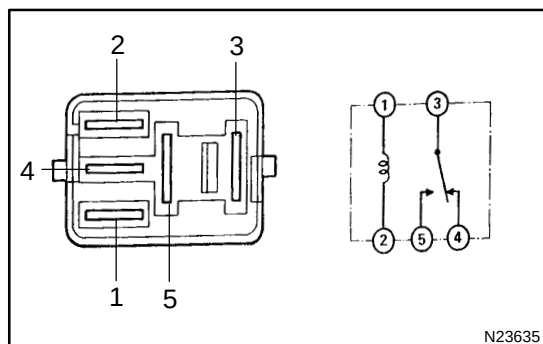

5. INSPECT NO. 2 FAN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2 3 - 4	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

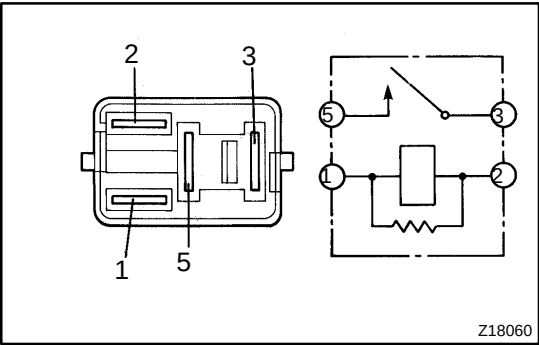

6. INSPECT NO. 3 FAN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.