


REAR BLOWER SWITCH INSPECTION


AC3DY-01

1. REMOVE CENTER CLUSTER FINISH PANEL (See page [BO-101](#))

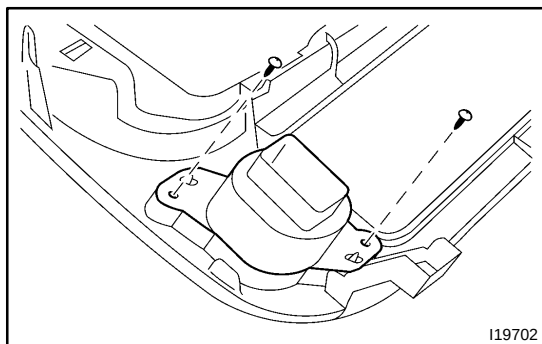

2. REMOVE REAR BLOWER SWITCH

- (a) Pull out the switch knob.
- (b) Remove the 2 screws and switch.

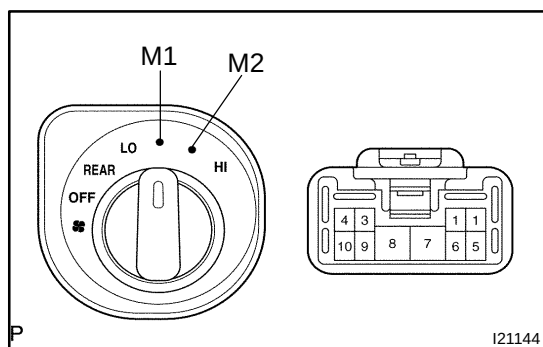

3. Manual A/C:
INSPECT REAR BLOWER SWITCH CONTINUITY


Position / Circuit	Tester connection	Specified condition
OFF	-	No continuity
REAR	1 - 6 - 8	Continuity
LO	5 - 6 - 8	Continuity
M1	2 - 6 - 8	Continuity
M2	7 - 6 - 8	Continuity
HI	3 - 6 - 8	Continuity
Illumination circuit	9 - 10	Continuity

Switch continuity:

If continuity is not as specified, replace the switch.

Illumination circuit:

If continuity is not as specified, check the bulb.

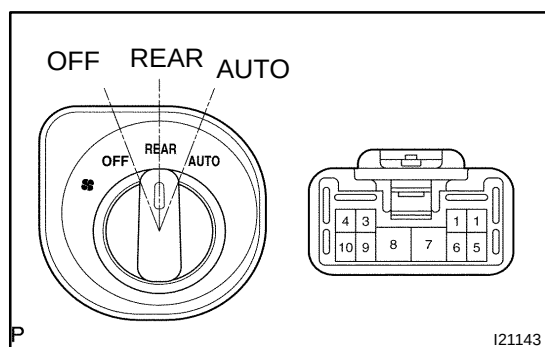**4. Auto A/C:****INSPECT REAR BLOWER SWITCH CONTINUITY**

Position / Circuit	Tester connection	Specified condition
OFF	-	No continuity
REAR	1 - 6 - 8	Continuity
AUTO	5 - 6 - 8	Continuity
Illumination circuit	9 - 10	Continuity

Illumination circuit:

If continuity is not as specified, check the bulb.

Switch continuity:

If continuity is not as specified, replace the switch.

5. Auto A/C:

INSPECT REAR BLOWER SWITCH CIRCUIT (See page [DI-781](#))

6. INSTALL REAR BLOWER SWITCH

- (a) Install the switch with the 2 screws.
- (b) Install the switch knob.

7. INSTALL CENTER CLUSTER FINISH PANEL

Install the panel, then connect the connector.