




I GROUND POINT

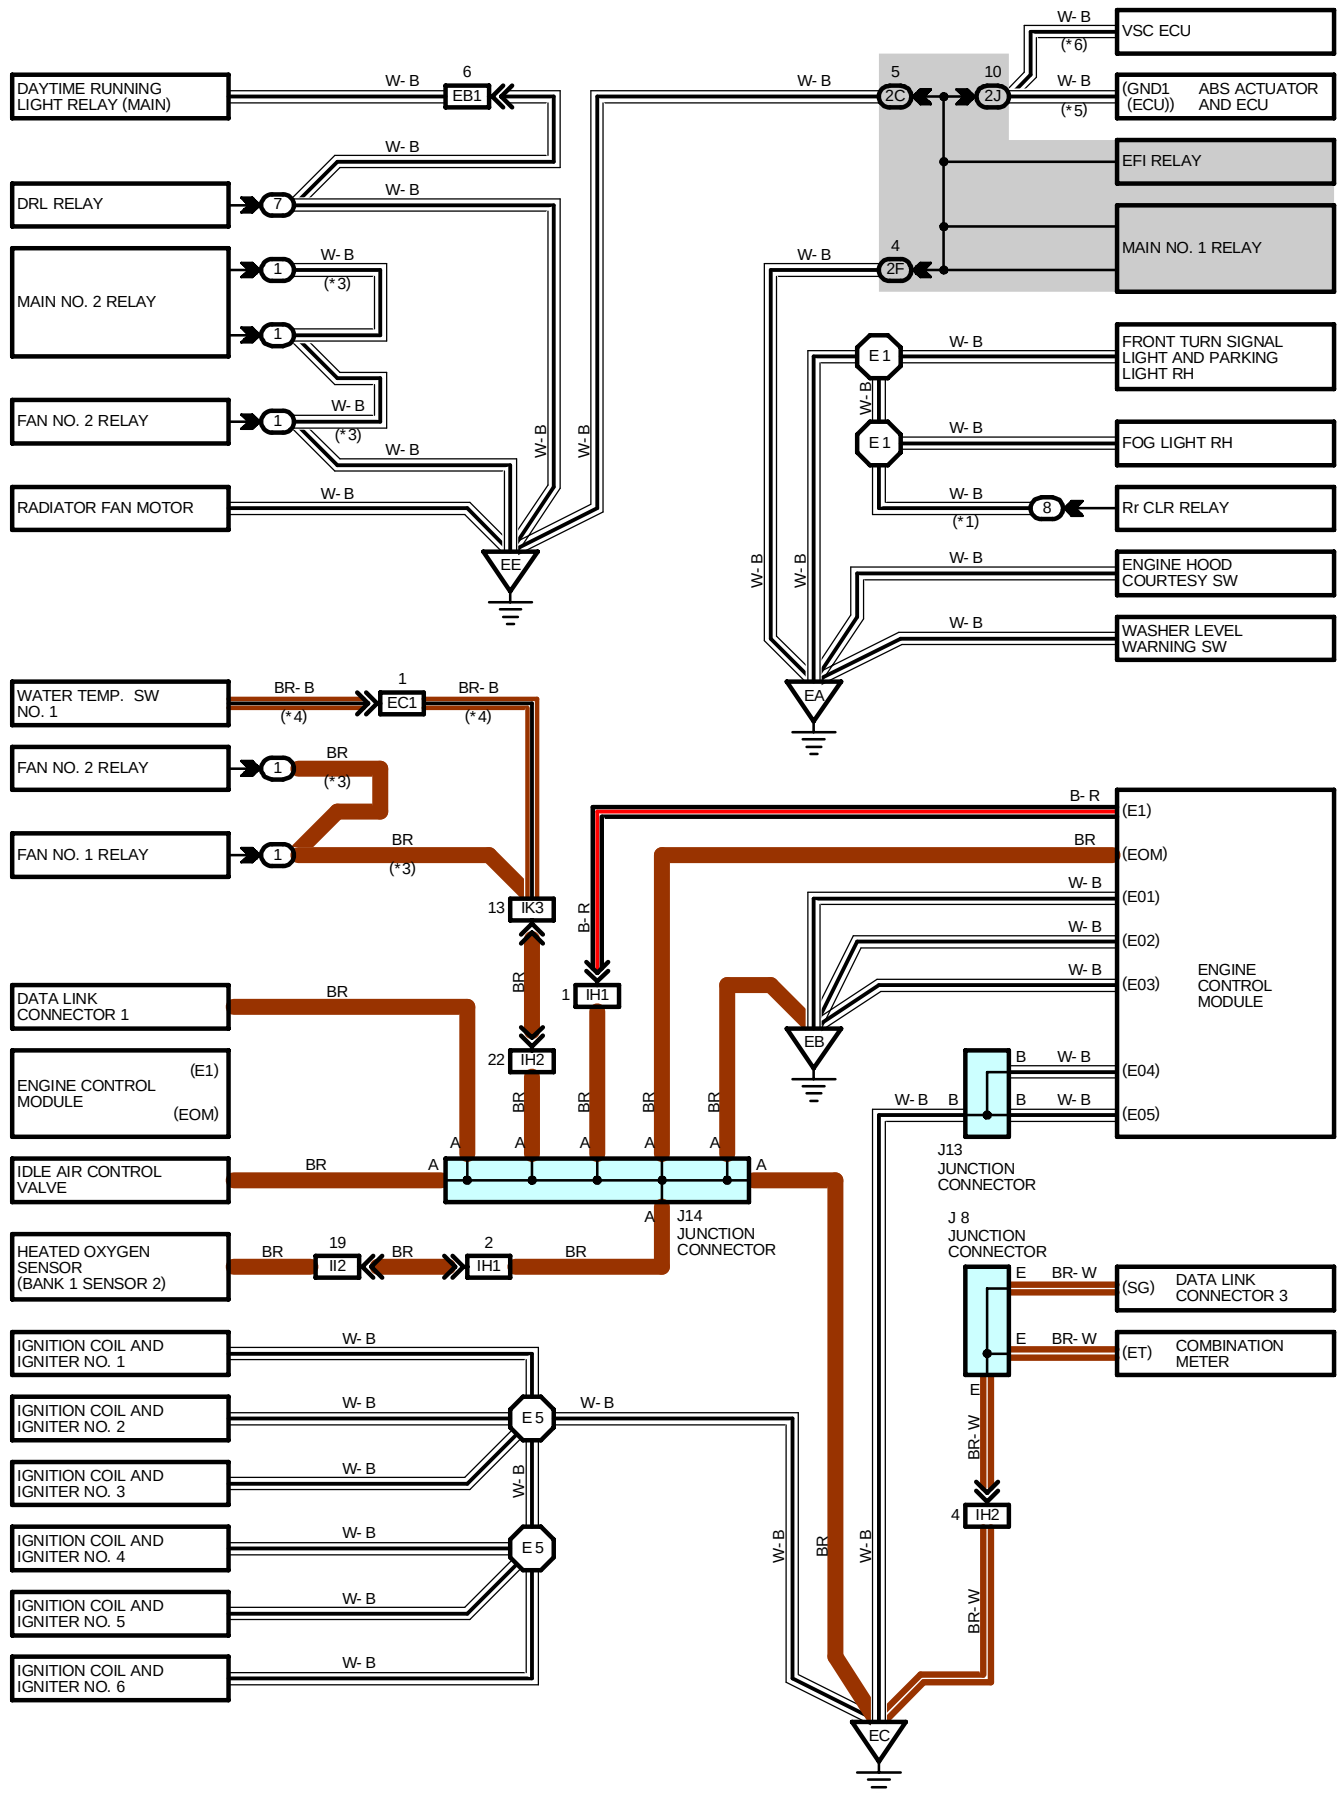

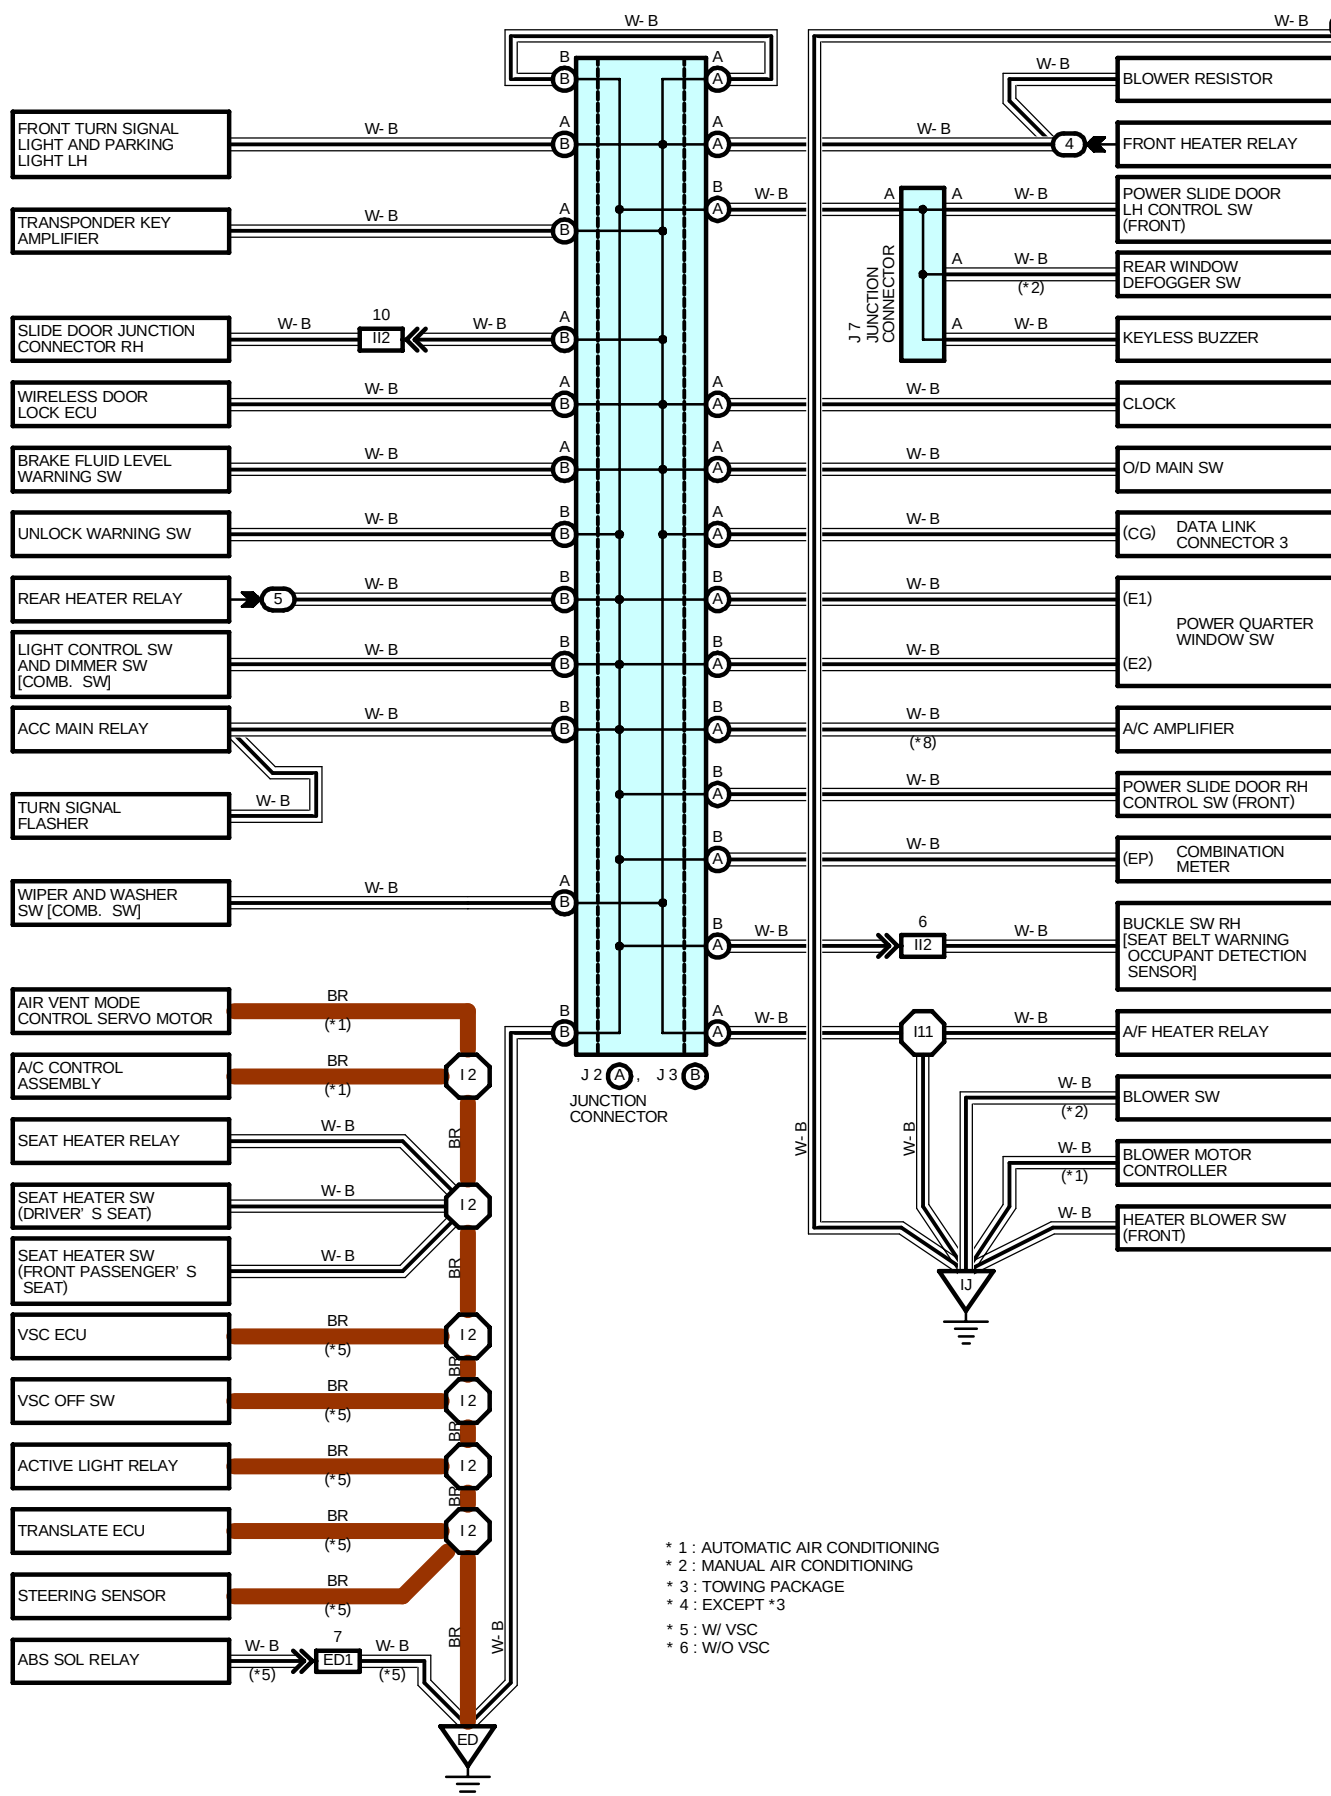

I GROUND POINT

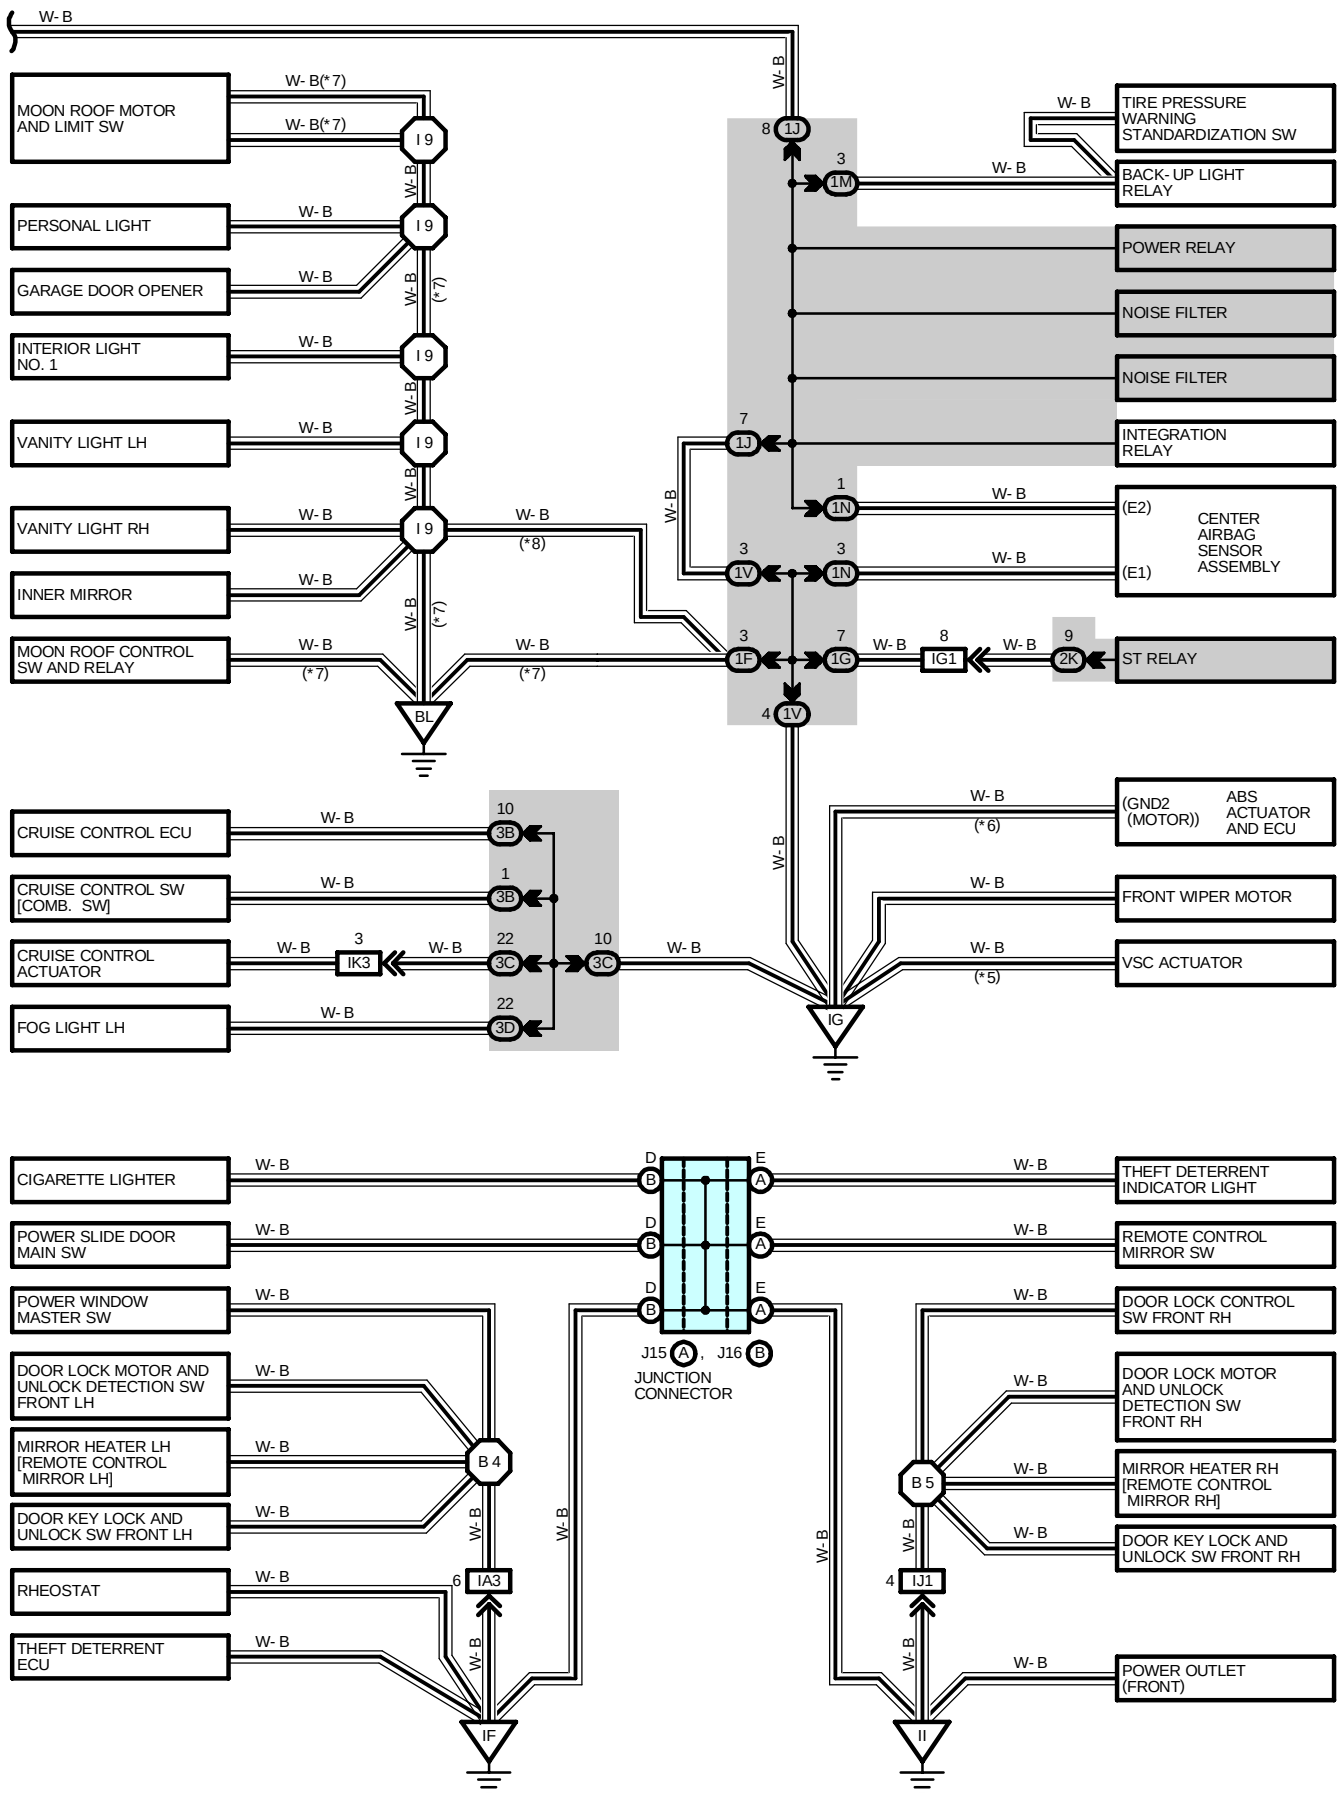

I GROUND POINT

: PARTS LOCATION

Code		See Page	Code		See Page	Code	See Page
J2	A	35	J13		35	J22	36
J3	B	35	J14		35	J23	36
J7		35	J15	A	35		
J8		35	J16	B	35		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	28	Engine Room R/B No.1 (Engine Compartment Left)
4	29	Passenger Side R/B No.4 (Front Side the Blower Motor)
5	29	Driver Side R/B No.5 (Lower Finish Panel)
7	29	R/B No.7 (Engine Compartment Left)
8	30	R/B No.8 (Engine Compartment Right)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	22	Roof Wire and Driver Side J/B No.1 (Lower Finish Panel)
1G	22	Instrument Panel Wire and Driver Side J/B No.1 (Lower Finish Panel)
1J	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1M		
1N		
1V		
2C	24	Engine Room Main Wire and Engine Room J/B No.2 (Engine Compartment Left)
2F		
2J	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)
2K		
3B	26	Cowl Wire and J/B No.3 (Behind the Combination Meter)
3C		
3D		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	40	Cowl Wire and Engine Room Main Wire (Inside the Lower Cover of Engine Room J/B No.2)
EC1	40	Engine Room Main Wire and Engine Room No.2 Wire (Near the Condenser Fan Motor)
ED1	40	Cowl Wire and Engine Room Main Wire (Behind Headlight LH)
IA3	42	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC2	42	Cowl Wire and Floor Wire (Left Cowl Side Panel)
ID1	42	Instrument Panel Wire and Cowl Wire (The Back Side of the Lower Finish Panel)
IG1	42	Instrument Panel Wire and Cowl Wire (Behind the Combination Meter)
IH1	44	Engine Wire and Cowl Wire (Front Side of the Blower Motor)
IH2		
II2	44	Floor No.2 Wire and Cowl Wire (Right Kick Panel)
IJ1	44	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IK3	44	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
BA2	46	Gauge Wire and Floor Wire (On the Left Rear Wheel House)
BB1	46	Back Door No.1 Wire and Floor Wire (Left Rear Quarter Panel)
BD1	46	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of the Back Door)
BD2		
BF1	46	Rear Window No.2 Wire and Back Door No.2 Wire (Right Side of the Back Door)
BG2	48	Floor Wire and Seat Wire (Beneath the Driver Seat)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	40	Front Side of the Right Fender Apron
EB	40	Right Side of the Surge Tank
EC	40	Rear Side of the Surge Tank
ED	40	Near the Left Front Suspension Support
EE	40	Front Side of the Left Fender Apron
IF	42	Left Kick Panel
IG	42	Left Cowl Side Panel
IH	42	Right Instrument Panel Brace
II	42	Right Kick Panel
IJ	42	Right Cowl Side Panel
BK	46	Under the Left Center Pillar
BL	46	Left Side of the Roof Side Panel
BM	46	Left Rear Quarter Panel
BN	46	Right Side of the Back Door
BO	46	Right Rear Quarter Panel

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	40	Engine Room Main Wire	I11	44	Cowl Wire
E5	40	Engine Wire	B4	46	Front Door LH Wire
I2	44	Cowl Wire	B5	46	Front Door RH Wire
I6			B8	46	Floor Wire
I9					