



TAILLIGHT

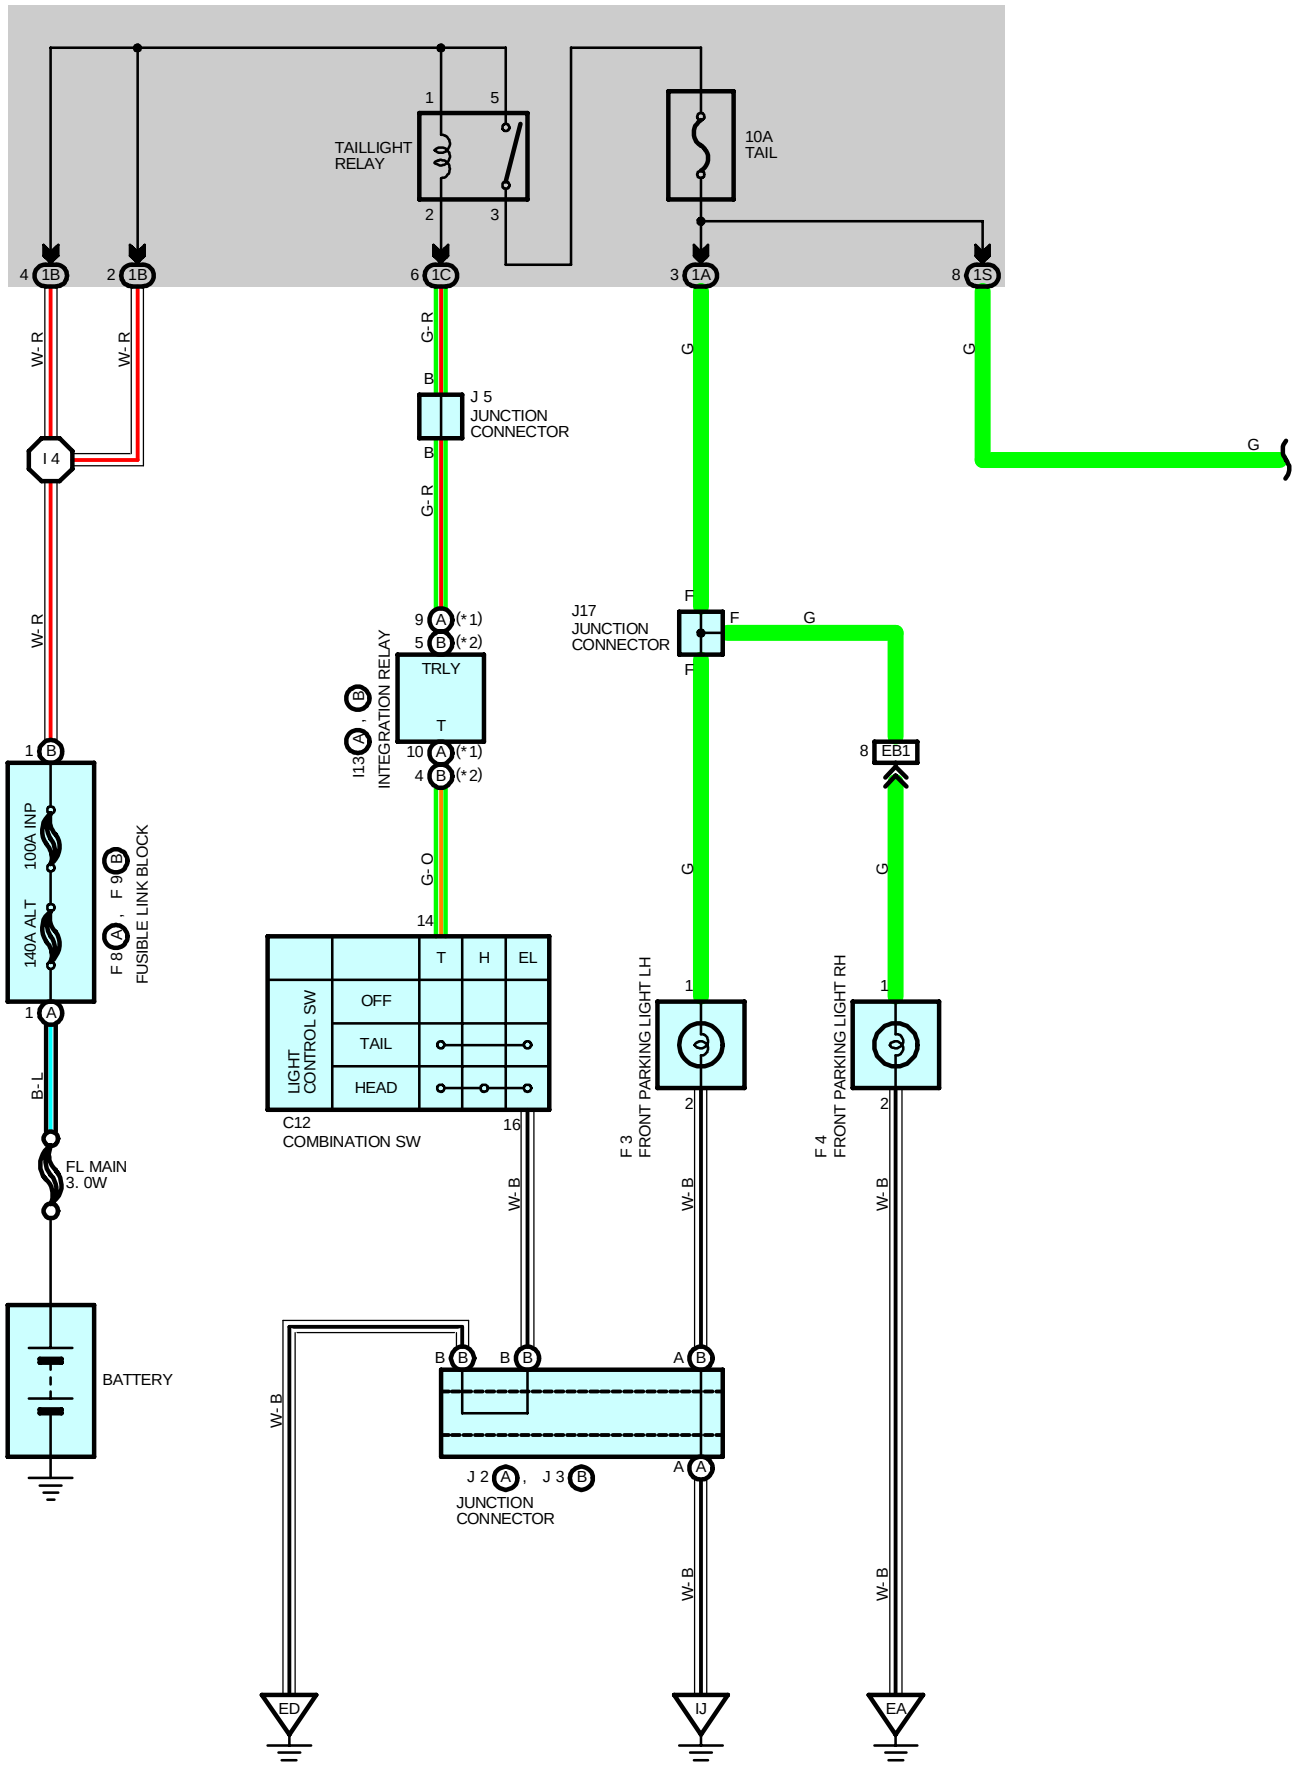

- * 1 : W/ DOOR LOCK CONTROL
- * 2 : W/O DOOR LOCK CONTROL

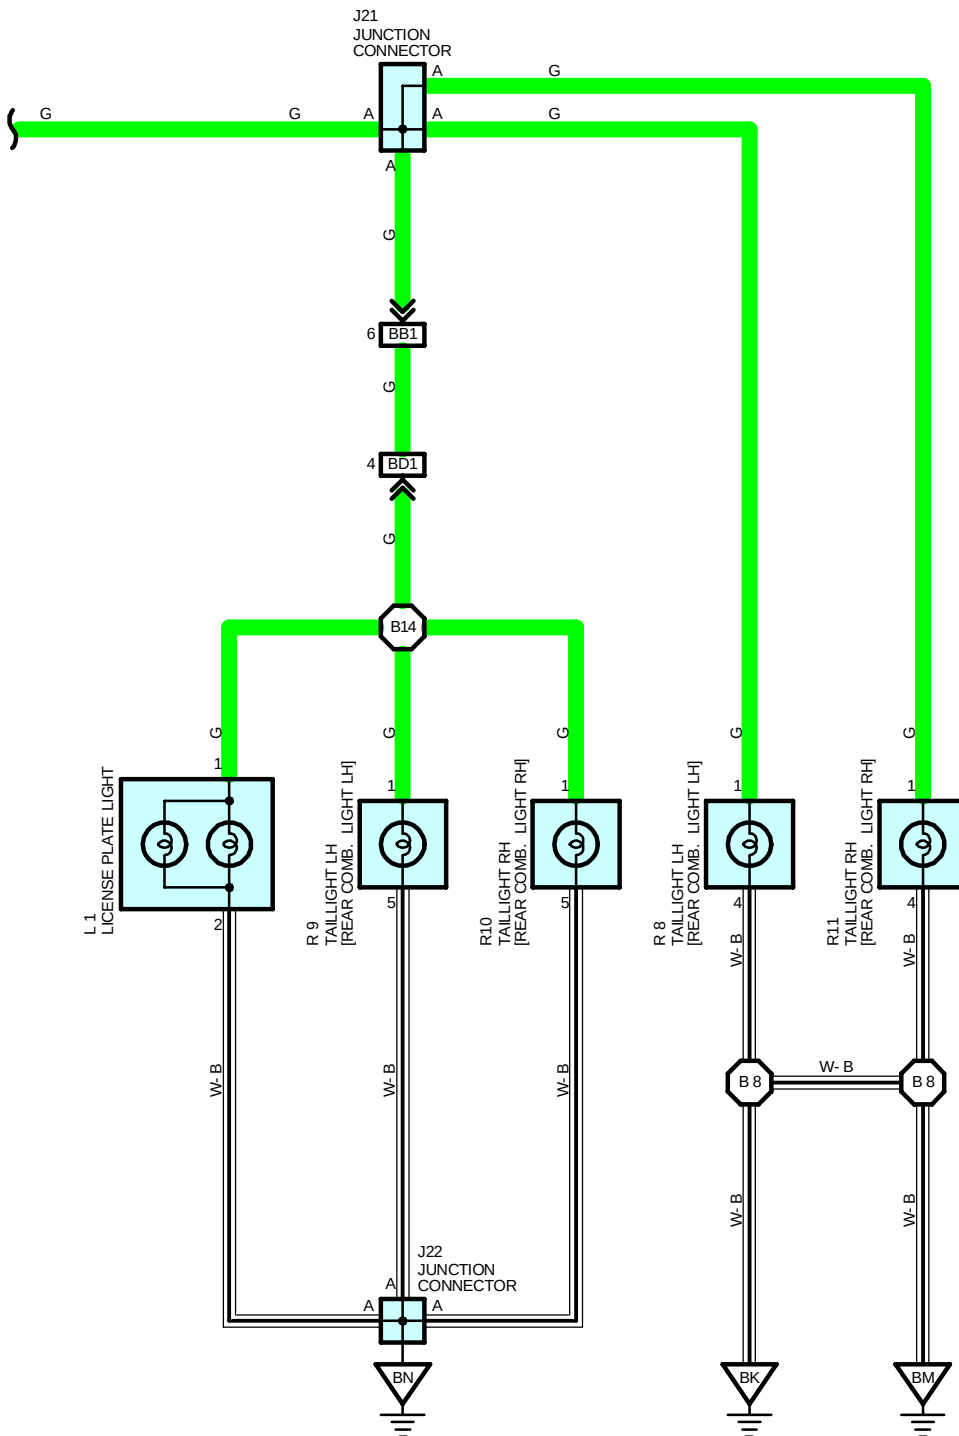

TAILLIGHT

SERVICE HINTS

TAILLIGHT RELAY

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

C12 COMBINATION SW

14-16 : Closed with the light control SW at **TAIL** or **HEAD** position

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code	See Page
C12		34	I13	B	35	J22	36
F3		32	J2	A	35	L1	36
F4		32	J3	B	35	R8	37
F8	A	32	J5		35	R9	37
F9	B	32	J17		35	R10	37
I13	A	35	J21		36	R11	37

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1B		
1C		
1S	22	Floor Wire and Driver Side J/B No.1 (Lower Finish Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	40	Cowl Wire and Engine Room Main Wire (Inside the Lower Cover of Engine Room J/B No.2)
BB1	46	Back Door No.1 Wire and Floor Wire (Left Rear Quarter Panel)
BD1	46	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of the Back Door)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	40	Front Side of the Right Fender Apron
ED	40	Near the Left Front Suspension Support
IJ	42	Right Cowl Side Panel
BK	46	Under the Left Center Pillar
BM	46	Left Rear Quarter Panel
BN	46	Right Side of the Back Door

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	44	Cowl Wire	B14	46	Back Door No.2 Wire
B8	46	Floor Wire			

