


SERVICE HINTS

P1 BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW]

2-8 : Closed with the shift lever at **R** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B2	34	J17	35	R9	37
D12	34	J22	36	R10	37
J7	35	P1	33		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1J		
1M		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	42	Cowl Wire and Floor Wire (Left Cowl Side Panel)
IH1	44	Engine Wire and Cowl Wire (Front Side of the Blower Motor)
BB1	46	Back Door No.1 Wire and Floor Wire (Left Rear Quarter Panel)
BD1	46	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of the Back Door)

: GROUND POINTS

Code	See Page	Ground Points Location
IJ	42	Right Cowl Side Panel
BN	46	Right Side of the Back Door

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B11	46	Back Door No.2 Wire			