


CIGARETTE LIGHTER AND CLOCK

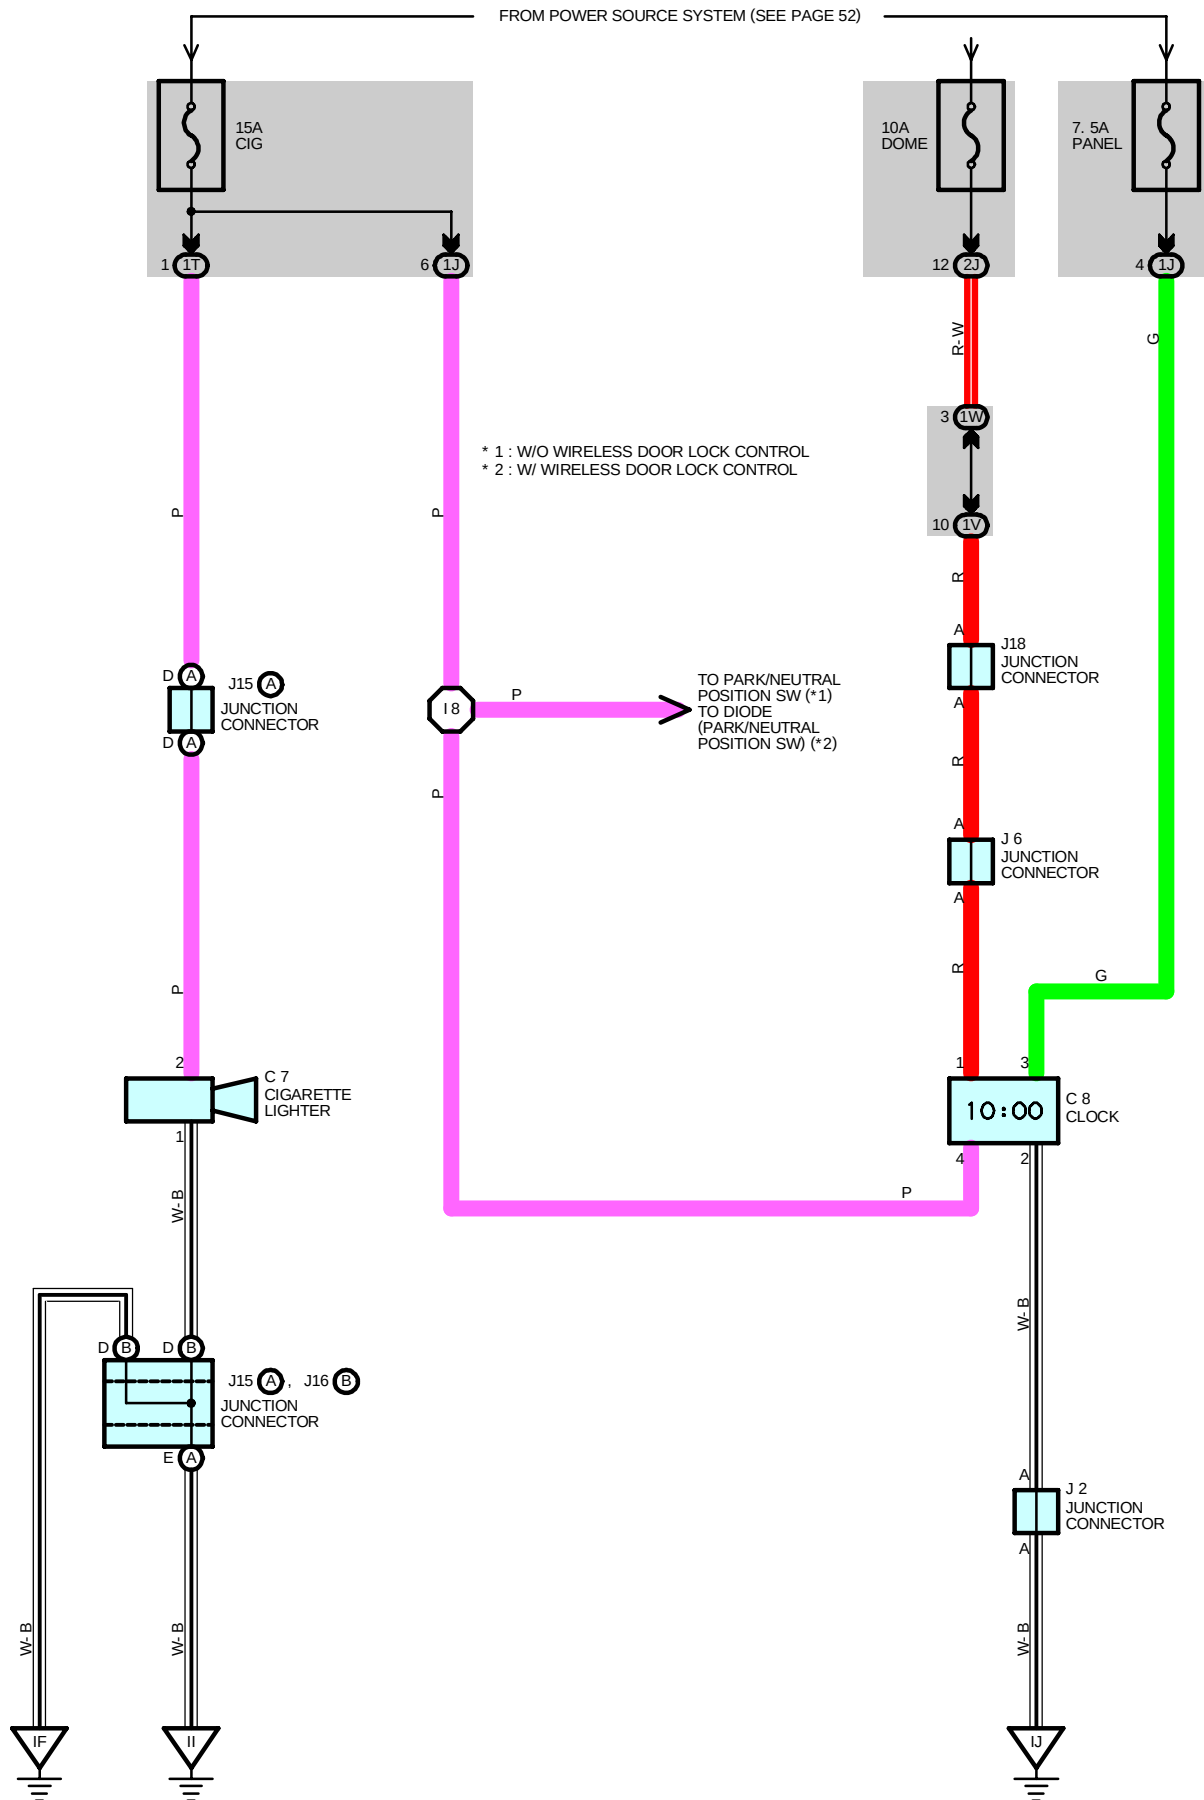

SERVICE HINTS

C7 CIGARETTE LIGHTER

2-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

1-GROUND : Always continuity

C8 CLOCK

4-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

1-GROUND : Always approx. **12** volts

2-GROUND : Always continuity

3-GROUND : Approx. **12** volts with the light control SW at **TAIL** or **HEAD** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C7	34	J6	35	J18	35
C8	34	J15	A	35	
J2	35	J16	B	35	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1J	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1T	22	Instrument Panel Wire and Driver Side J/B No.1 (Lower Finish Panel)
1V	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1W	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
2J	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	42	Left Kick Panel
II	42	Right Kick Panel
IJ	42	Right Cowl Side Panel

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I8	44	Cowl Wire			