


GARAGE DOOR OPENER

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

* 1 : W/O MOON ROOF

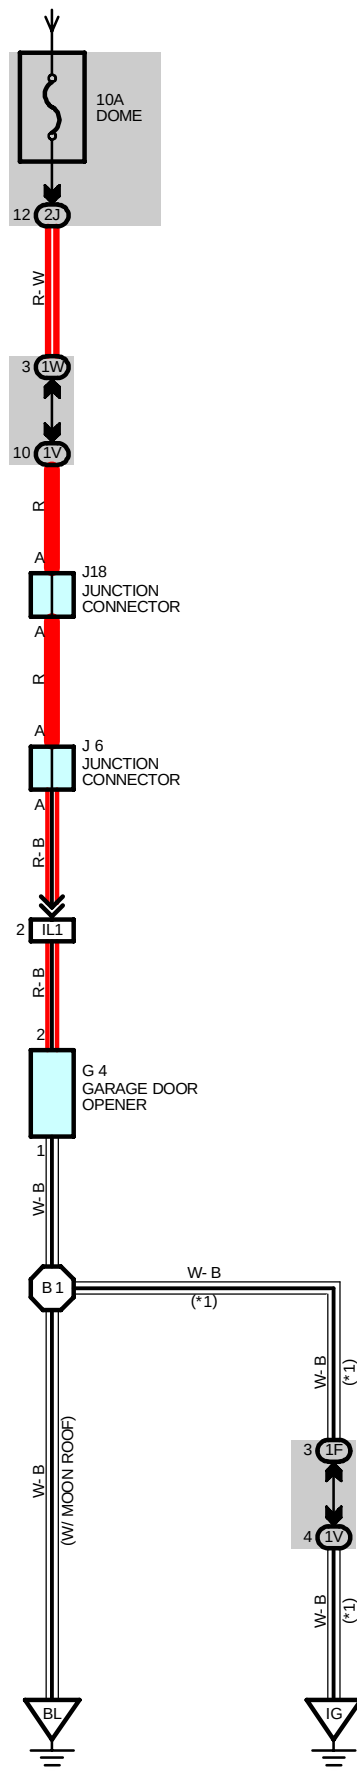

SERVICE HINTS

G4 GARAGE DOOR OPENER

- 1-GROUND : Always continuity
- 2-GROUND : Always approx. **12** volts

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
G4	36	J6	35	J18	35

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	22	Roof Wire and Driver Side J/B No.1 (Lower Finish Panel)
1V	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1W		
2J	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL1	44	Roof Wire and Cowl Wire (The Back Side of the Lower Finish Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
IG	42	Left Cowl Side Panel
BL	46	Left Side of the Roof Side Panel

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	46	Roof Wire			