




AUTOMATIC AIR CONDITIONING (FRONT)

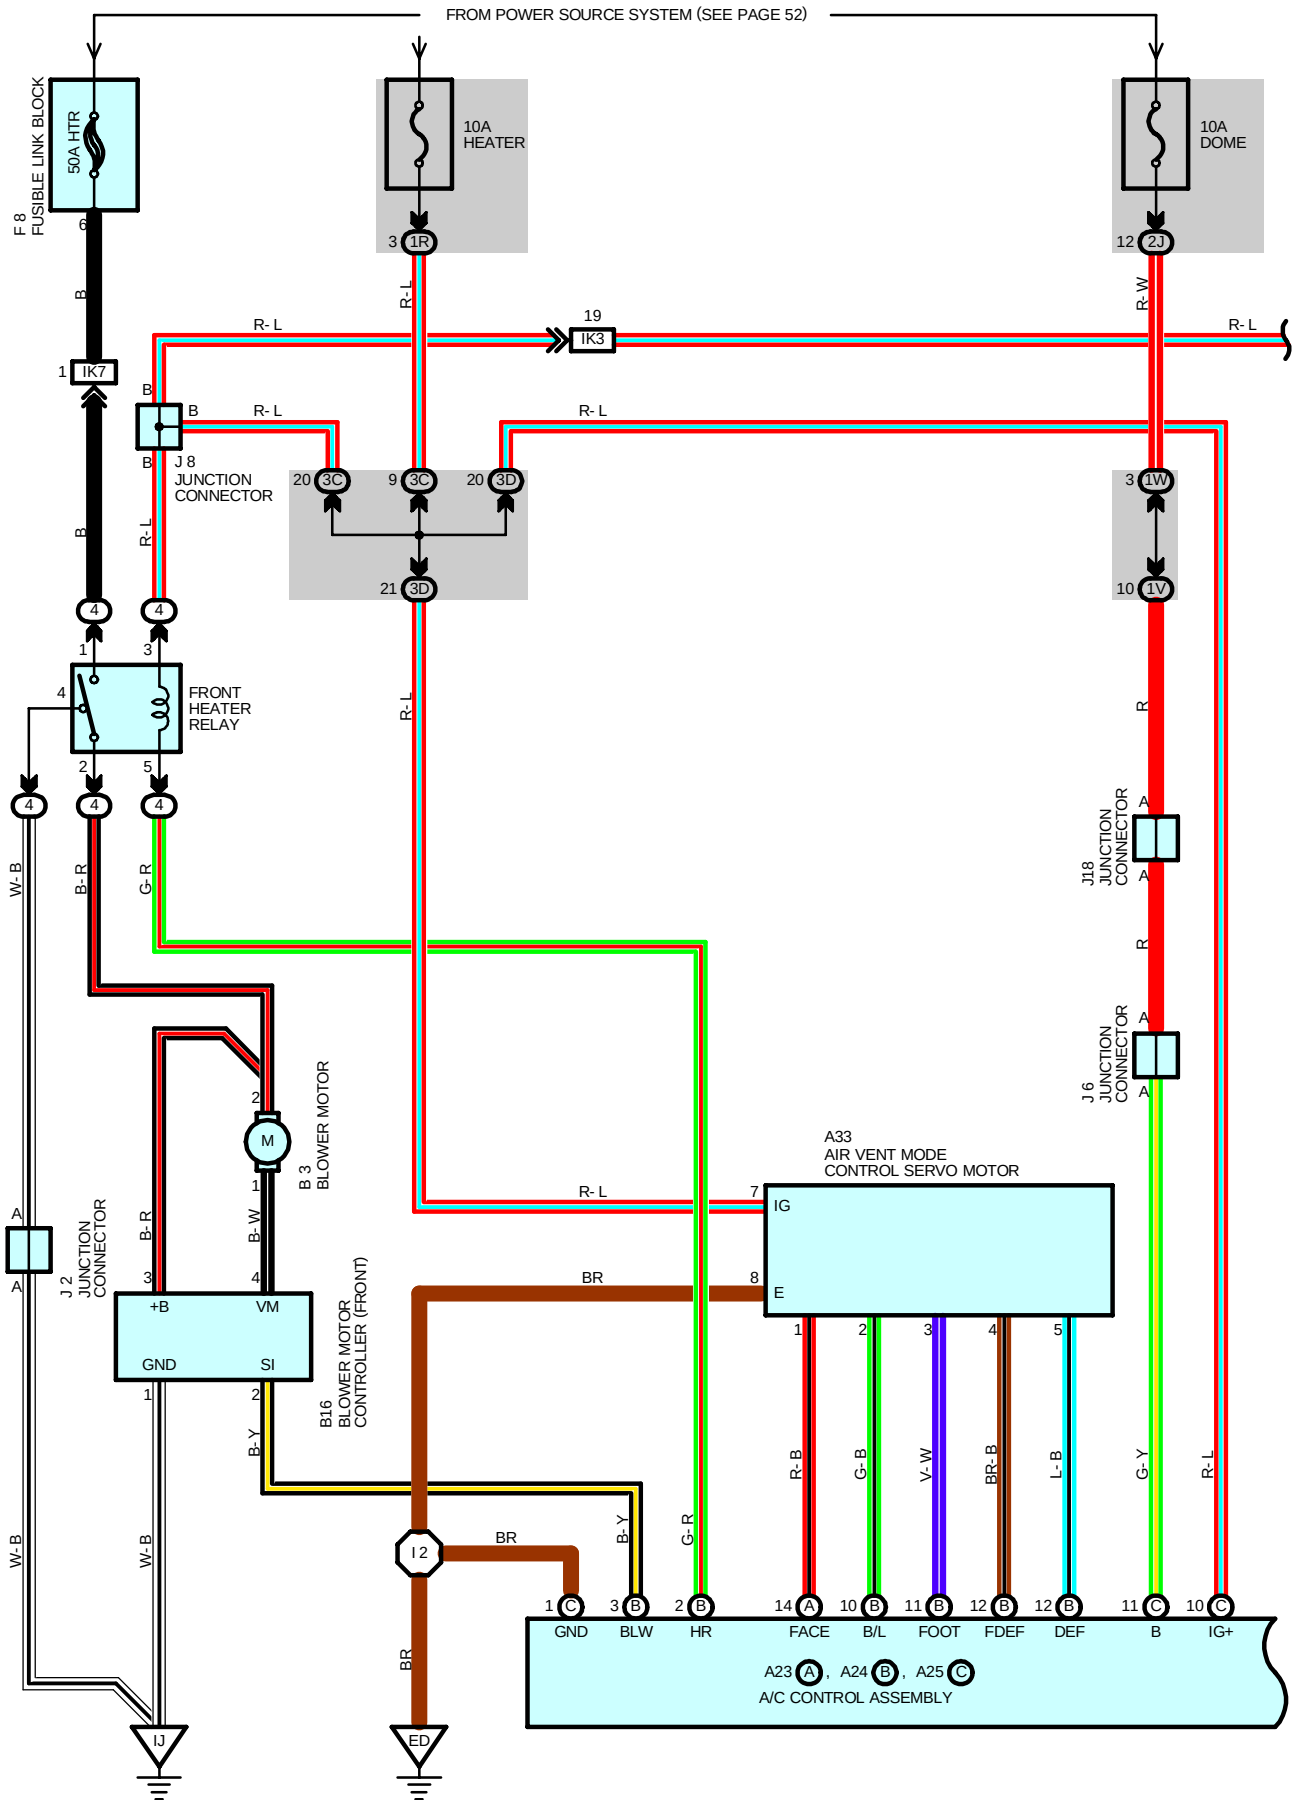

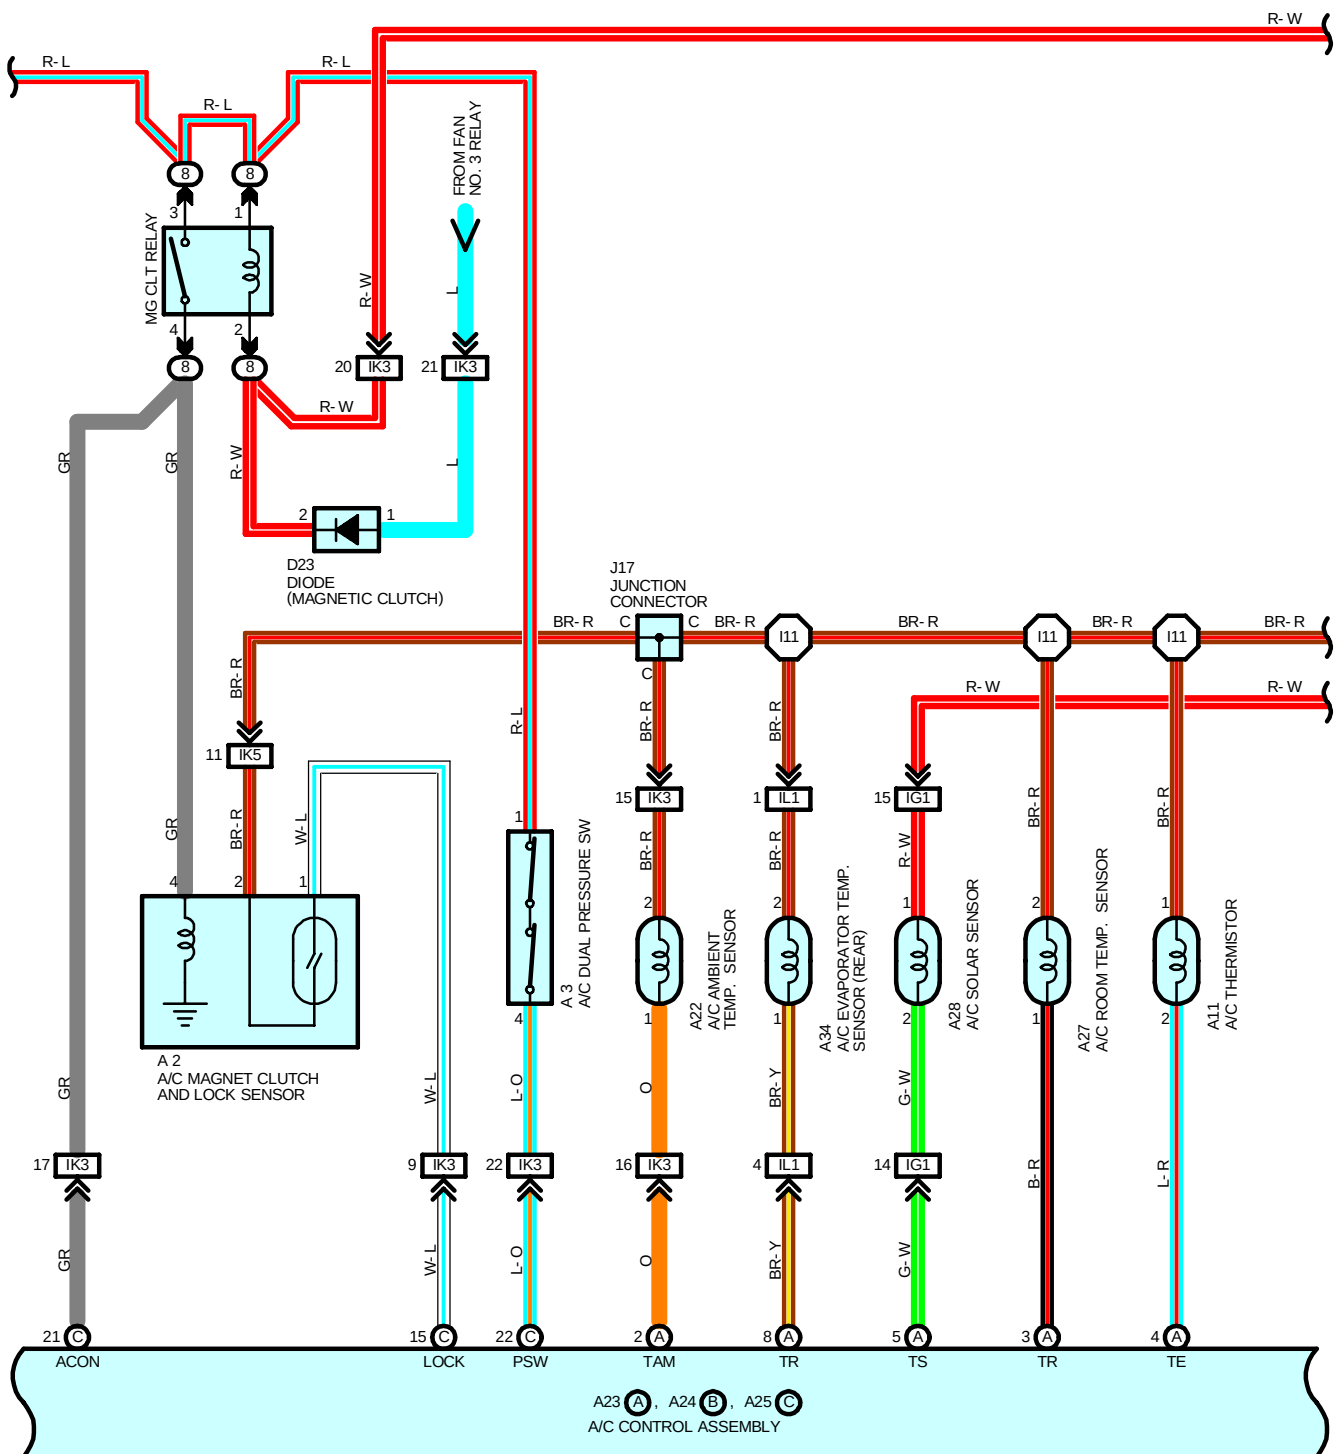

AUTOMATIC AIR CONDITIONING (FRONT)

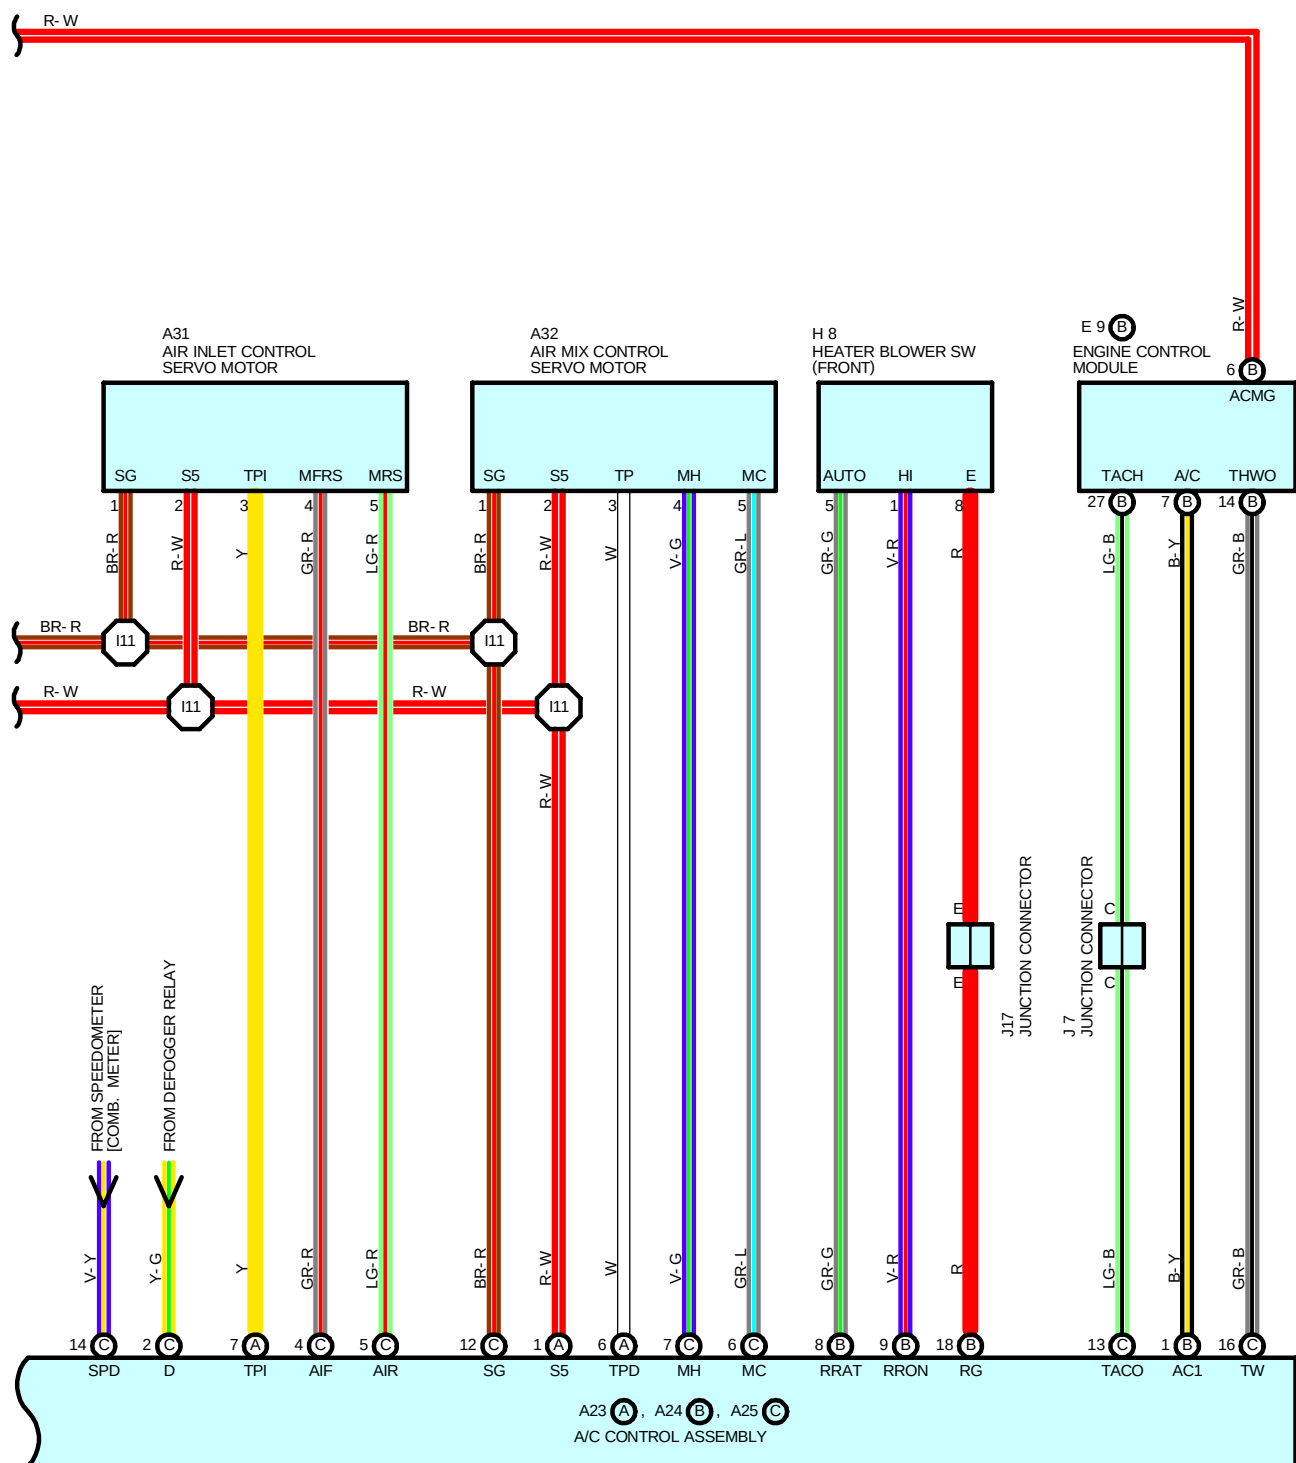

SERVICE HINTS

A25 (C) A/C CONTROL ASSEMBLY

11-GROUND : Always approx. **12** volts

10-GROUND : Approx. **12** volts with the ignition SW at **ON** position

1-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A2	32	A31	34	H8	34
A3	32	A32	34	J2	35
A11	34	A33	34	J6	35
A22	32	A34	36	J7	35
A23	A 34	B3	34	J8	35
A24	B 34	B16	34	J17	35
A25	C 34	D23	32	J18	35
A27	34	E9	B 34		
A28	34	F8	32		

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
4	29	Passenger Side R/B No.4 (Front Side the Blower Motor)
8	30	R/B No.8 (Engine Compartment Right)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1R	22	Cowl Wire and Driver Side J/B No.1 (Lower Finish Panel)
1V		
1W		
2J	24	Cowl Wire and Engine Room J/B No.2 (Engine Compartment Left)
3C	26	Cowl Wire and J/B No.3 (Behind the Combination Meter)
3D		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	42	Instrument Panel Wire and Cowl Wire (Behind the Combination Meter)
IK3	44	Engine Room Main Wire and Cowl Wire (Right Cowl Side Panel)
IK5		
IK7		
IL1	44	Roof Wire and Cowl Wire (The Back Side of the Lower Finish Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
ED	40	Near the Left Front Suspension Support
IJ	42	Right Cowl Side Panel

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	44	Cowl Wire	I11	44	Cowl Wire