



SECTION 1-1


OPERATION OF INSTRUMENTS AND CONTROLS

Overview of instruments and controls

Instrument panel overview	2
Instrument cluster overview	5
Indicator symbols on the instrument panel	7


01 SIENNA_U (L/O0008)

Instrument panel overview

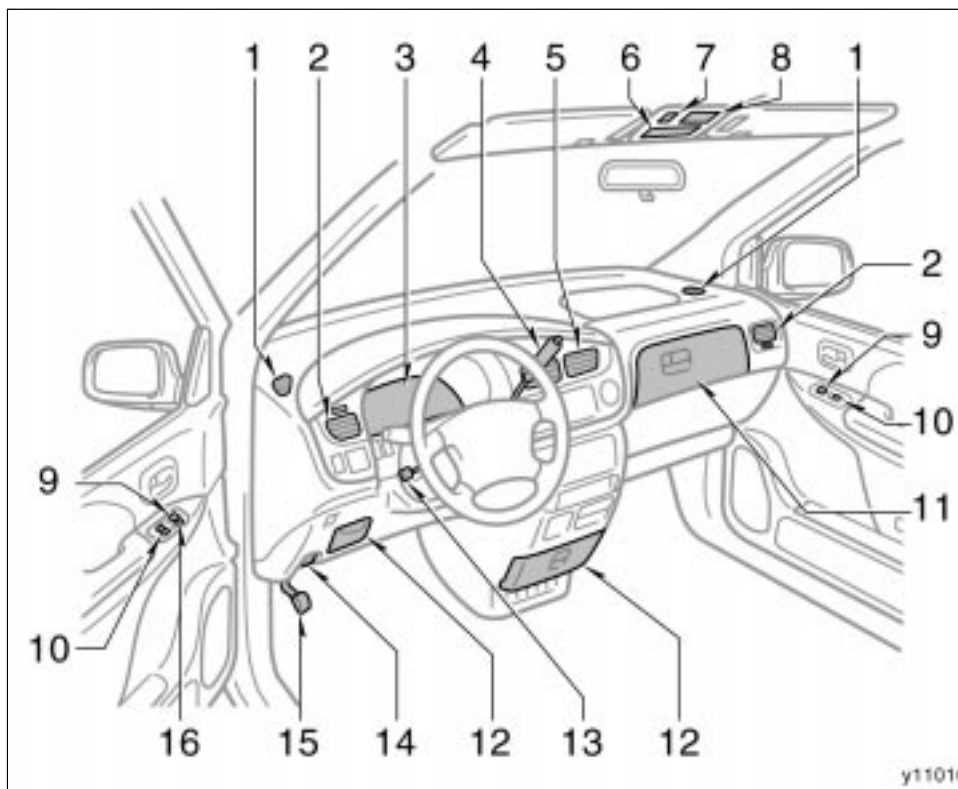

1. Side defroster outlets
2. Side vents
3. Instrument cluster
4. Automatic transmission selector lever
5. Center vents
6. Garage door opener, garage door opener box or auxiliary box
7. Electric moon roof switch, front personal light or front interior light switch
8. Front personal lights or front interior light
9. Power door lock switches
10. Power window switches
11. Glove box
12. Auxiliary boxes
13. Tilt steering lock release lever
14. Hood lock release lever
15. Parking brake pedal
16. Window lock switch

01 SIENNA_U (L/O0008)

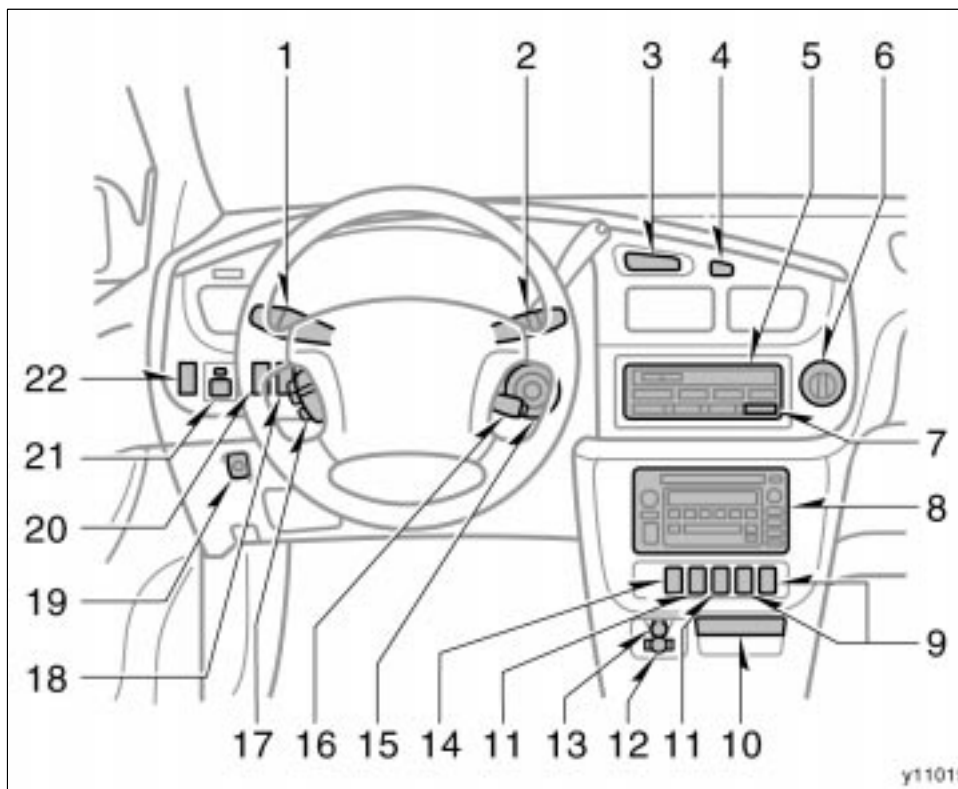

1. Headlight, turn signal and front fog light switches
2. Wiper and washer switches
3. Clock and front passenger's seat belt reminder light
4. Emergency flasher switch
5. Front air conditioning controls
6. Rear fan speed selector or rear fan position selector
7. Rear window and outside rear view mirror defoggers switch
8. Car audio
9. Seat heater switches
10. Ashtray
11. Power sliding door switches
12. Power outlet
13. Cigarette lighter
14. Power rear quarter window switch
15. Ignition switch
16. Cruise control switch
17. Audio remote control buttons
18. Power sliding door off switch


01 SIENNA_U (L/O0008)

- 19. Tire pressure warning system reset switch or traction control system off switch
- 20. Theft deterrent system/Engine immobiliser system indicator light
- 21. Power rear view mirror control switch
- 22. Instrument panel light control dial

01 SIENNA_U (L/O0008)

Instrument cluster overview

►With tachometer

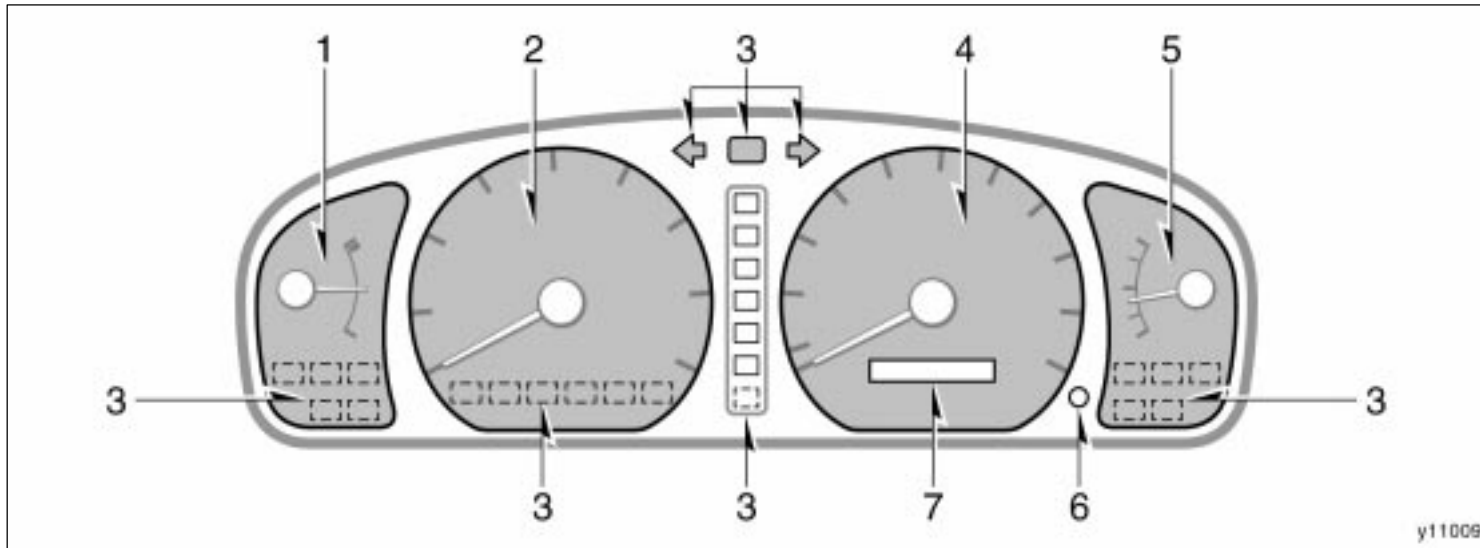


- 1. Engine coolant temperature gauge
- 2. Tachometer
- 3. Service reminder indicators and indicator lights

- 4. Speedometer
- 5. Fuel gauge
- 6. Trip meter reset knob

- 7. Odometer and two trip meters

01 SIENNA_U (L/O0008)

►Without tachometer

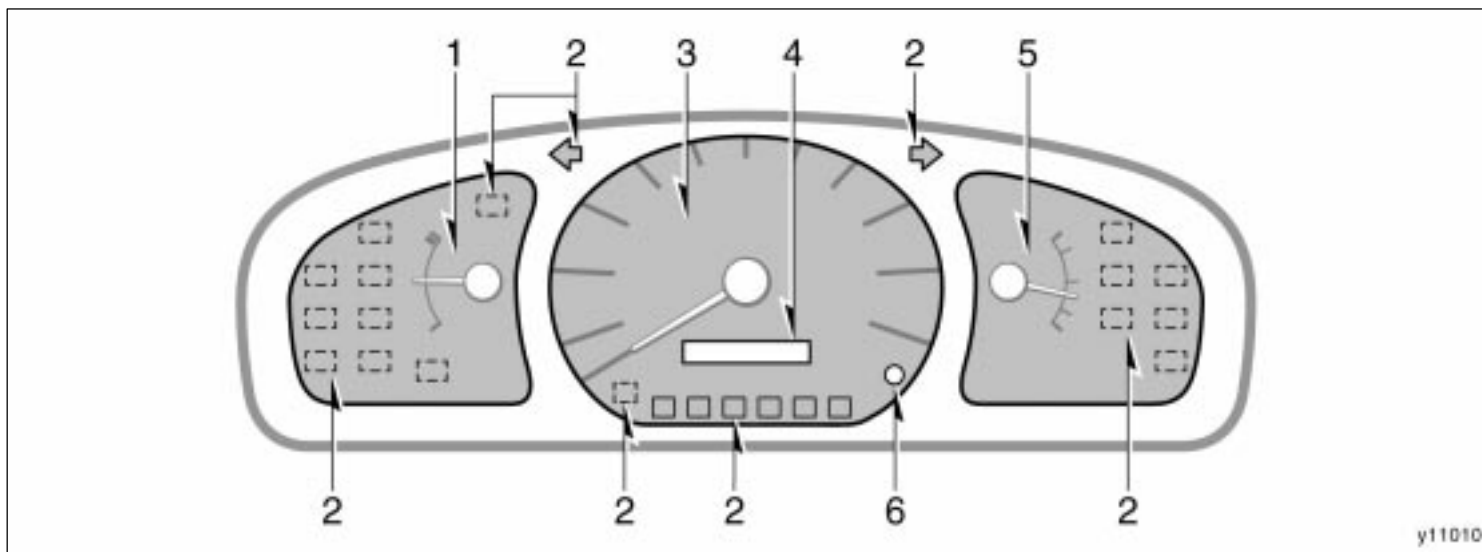

- | | |
|---|---------------------------------|
| 1. Engine coolant temperature gauge | 4. Odometer and two trip meters |
| 2. Service reminder indicators and indicator lights | 5. Fuel gauge |
| 3. Speedometer | 6. Trip meter reset knob |

01 SIENNA_U (L/O0008)

Indicator symbols on the instrument panel

BRAKE or 	Brake system warning light* ¹	ABS or 	Anti-lock brake system warning light* ¹
	Driver's seat belt reminder light* ¹		Open door warning light* ¹
PASSENGER 	Front passenger's seat belt reminder light* ¹	PWR DOOR 	Open power sliding door warning light* ¹
	Discharge warning light* ¹		SRS warning light* ¹
 CHECK or 	Malfunction indicator lamp* ¹	VSC 	Vehicle skid control system warning light* ¹
	Low fuel level warning light* ¹		Low windshield washer fluid level warning light* ¹
	Low oil pressure warning light* ¹		Low tire pressure warning light* ¹
		TRAC OFF 	Traction control system off indicator/warning light* ¹

01 SIENNA_U (L/O0008)

	Turn signal indicator lights
	Headlight high beam indicator light
O/D OFF	Overdrive-off indicator light
CRUISE	Cruise control indicator light* ²
P R N D 2 L	Automatic transmission indicator lights
	Slip indicator light

*1: For details, see “Service reminder indicators and warning buzzers” in Section 1–5.

*2: If this light flashes, see “Cruise control” in Section 1–6.