


Chevrolet Malibu 2013 – 2015 fuse box diagram

Passenger Compartment Fuse Box

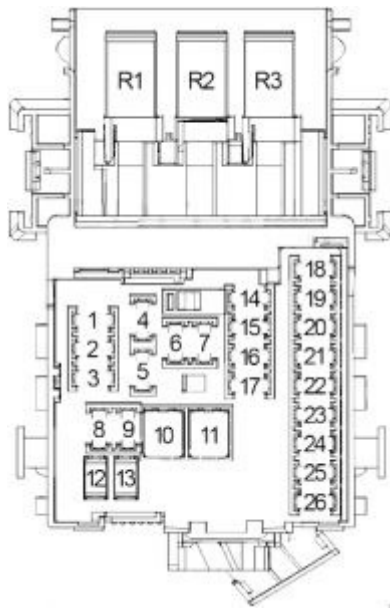


Chevrolet Malibu – fuse box diagram – passenger compartment

No.	A	Protected Component
1	2	Steering Wheel Controls Switch (Left/Right)
2	15	Body Control Module (Right Rear Turn Signal, Left Mirror Turn Signal, Left Front Turn Signal, Door Locks)
3	15	Body Control Module (Left Stoplamp, Left Daytime Running Light Lamp, Headlamp Control, Right Taillamp, Right Park/Sidemarkers Lamps, Right MirrorTurn, Right Front Turn Signals)
4	15	Radio
5	7.5	Telematics Communication Interface Control Module (OnStar)
6	20	Front Accessory Power Outlet
7	20	Console Bin Power Outlet, Accessory Power Outlet 110V AC
8	15	Body Control Module (License Plate Lamp, Center High-Mounted Stoplamp, Rear Fog Lamps, Right Front Park/Sidemarkers Lamps, LED Indicator Dim, Washer Pump, Right Stoplamp, Trunk Release)
9	15	Body Control Module (Left Low – Beam Headlamp, Daytime Running Light)
10	30	Body Control Module, Power Door Locks
11	40	Blower Control Module
12	25	<i>Circuit Breaker:</i> Passenger Seat

13	25	<i>Circuit Breaker:</i> Driver Seat, Seat Memory Control Module
14	7.5	Data Link Connector
15	10	Inflatable Restraint Sensing and Diagnostic Module
16	5	Rear Compartment Lid Unlatch Relay
17	10	Heater Ventilation Air Conditioning (HVAC) Control Module
18	30	Audio System
19	10	Radio Controls, Heater Ventilation Air Conditioning (HVAC) Controls, Info Display Module, Auxiliary Audio Input with Memory Card Receptacle (MCR)
20	5	Passenger Presence Module
21	5	Instrument Cluster
22	2	Ignition Switch (without BTM)
23	15	Body Control Module (Right Low – Beam Headlamp, Daytime Running Light)
24	15	Body Control Module (Ambient Light, Switch Backlighting (LED), Trunk Lamp, Shift Lock, Key Capture)
25	25	Accessory AC/DC Power Inverter Module (110V AC)
26	–	–
Relay		
R1	Rear Compartment Lid Unlatch	
R2	–	
R3	Power Outlets	

Engine Compartment Fuse Box

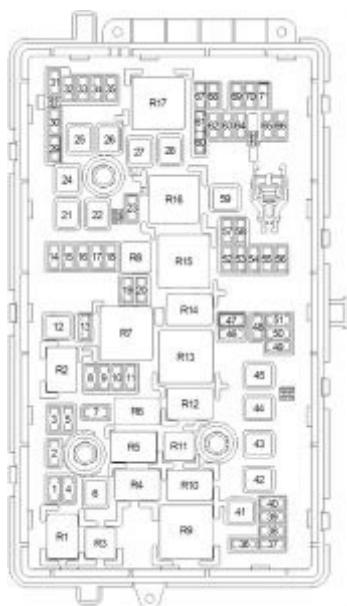

Chevrolet Malibu – fuse box diagram – engine compartment

No.	A	Protected Component
1	15	Transmission Control Module (TCM)
2	10	2.5L LKW: Air Conditioning Compressor Clutch Relay
	5	2.4L LUK, 2.0L LTG: Engine Control Module (ECM)
3	10	2.4L LUK, 2.0L LTG: Air Conditioning Compressor Clutch Relay
4	5	2.5L LKW: Engine Control Module (ECM)
5	5	2.4L LUK, 2.0L LTG: Engine Control Module (ECM)
6	25	Windshield Wiper Relay, Windshield Wiper Speed Control Relay
7	5	2.5L LKW: Engine Control Module (ECM)
8	15	–
9	15	Ignition Coils
10	20	Engine Control Module (ECM)

11	10	2.5L LKW, 2.0L LTG: Multifunction Intake Air Sensor, Heated Oxygen Sensor
12	40	2.5L LKW: Starter Relay No.2
	30	2.4L LUK, 2.0L LTG: Starter Relay
13	7.5	2.5L LKW, 2.0L LTG: Chassis Control Module, Control Solenoid Valve Assembly, Fuel Pump Driver Control Module
	7.5	2.4L LUK: Control Solenoid Valve Assembly
14	10	2.4L LUK: Auxiliary Heater Coolant Pump
15	10	2.4L LUK: Starter/Generator Coolant Pump Relay
16	7.5	2.5L LKW, 2.0L LTG: Active Grille Air Shutter Actuator
	7.5	2.4L LUK: Starter/Generator Control Module, Active Grille Air Shutter Actuator
17	5	Inflatable Restraint Sensing and Diagnostic Module
18	5	2.5L LKW: Battery Isolator Control Module
19	–	–
20	25	2.5L LKW: Transmission Fluid Pump Relay (Auxiliary)
21	30	Rear Power Window
22	30	Sunroof Motor
23	7.5	2.4L LUK: Starter/Generator Control Module
24	30	Front Power Window
25	30	Keyless Entry Control Module

26	60	Electronic Brake Control Module (ABS – Pump)
27	30	–
28	40	Rear Window Defogger
29	15	Seat Lumbar Support Switch (Driver)
30	15	Seat Lumbar Support Switch (Passenger)
31	15	2.5L LKW, 2.0L LTG: Chassis Control Module
	15	2.4L LUK: Hybrid/EV Battery Pack Cooling Fan
32	15	Body Control Module (Back-Up Lamps, Interior Lamp)
33	25	Seat Heating Control Module, Seat Memory Control Module
34	25	Electronic Brake Control Module (ABS – Valve)
35	30	Audio Amplifier
36	–	–
37	10	Right Headlamp (High Beam), High Beam Solenoid Actuator (Right)
38	10	Left Headlamp (High Beam), High Beam Solenoid Actuator (Left)
39	–	–
40	–	–
41	–	–
42	30	Cooling Fan High Speed Relay

43	–	–
44	20	2.5L LKW: Starter Relay No.1
	30	2.4L LUK: Transmission Fluid Pump Relay (Auxiliary)
45	30	Cooling Fan Low Speed Relay
46	10	Cooling Fan Low Speed Relay, Cooling Fan Speed Control Relay
47	10	2.5L LKW: Heated Oxygen Sensor 1, Evaporative Emission Purge Solenoid Valve, Rocker Arm Actuator
	10	2.0L LTG: Heated Oxygen Sensor 1, Evaporative Emission Purge Solenoid Valve, Turbocharger Bypass Solenoid Valve, Turbocharger Wastegate Solenoid Valve, Engine Oil Pressure Control Solenoid Valve
	10	2.4L LUK: Heated Oxygen Sensor 1, Heated Oxygen Sensor 2, Mass Air Flow/Intake Air Temperature Sensor, Evaporative Emission Purge Solenoid Valve
48	15	Front Fog Lamps
49	15	Right Headlamp
50	15	Left Headlamp
51	15	Horn
52	5	Instrument Cluster
53	10	Inside Rearview Mirror, Rearview Camera
54	5	Heater Ventilation Air Conditioning (HVAC) Control Module, Collision Alert Indicators
55	7.5	Outside Rearview Mirror Switch, Window Switch (Driver), Garage Door Opener
56	15	Windshield Washer Pump

57	5	–
58	–	–
59	50	2.4L LUK: Secondary Air Injection Pump Relay
60	7.5	Outside Rearview Mirror Glass (Driver/Passenger)
61	–	–
62	10	Evaporative Emission Vent Solenoid Valve
63	–	–
64	–	–
65	–	–
66	15	2.4L LUK: Secondary Air Injection Solenoid Valve Relay
67	20	2.5L LKW, 2.0L LTG: Fuel Pump Control Module
	20	2.4L LUK: Chassis Control Module
68	–	–
69	5	Body Control Module
70	5	Side Object Sensor Module (Left/Right), Rear Parking Assist Control Module, Vehicle Camera Module
71	5	Keyless Entry Control Module
Relay		
R1	Air Conditioning Compressor Clutch	

R2	Starter (No.1)
R3	–
R4	Front Wiper (Speed)
R5	Front Wiper (On/Off)
R6	2.4L LUK: Auxiliary Heater Coolant Pump
R7	Engine Control Module (ECM)
R8	2.5L LKW: Transmission Auxiliary Oil Pump
R9	Cooling Fan (No.2)
R10	Cooling Fan (No.3)
R11	2.5L LKW: Starter (No.2)
	2.4L LUK: Transmission Auxiliary Oil Pump
R12	–
R13	Cooling Fan (No.1)
R14	Low Beam
R15	Run/Crank
R16	2.4L LUK: Secondary Air Injection Pump
R17	Rear Window Defogger
Relay (Non-Serviceable)	

R18	Child Security Lock Disable
R19	2.4L LUK: Starter/Generator Coolant Pump
R20	Headlamp (High Beam)
R21	Horn
R22	Front Fog Lamp
R23	Windshield Washer Pump
R24	2.4L LUK, 2.5 LKW: Secondary Air Injection Pump
R25	–
R26	–


Fusible Link Block

Type 1:



Chevrolet Malibu – fuse box diagram – fusible link block type 1

Type 2:

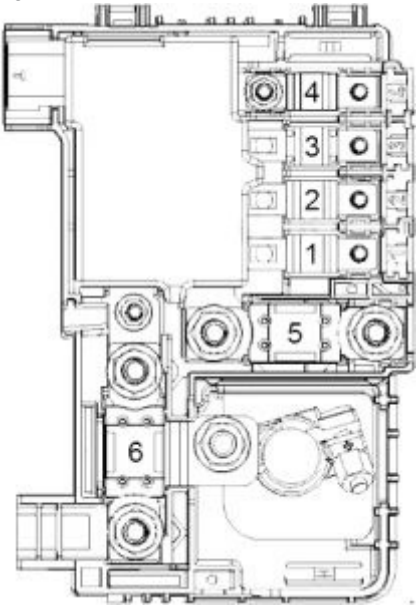

Chevrolet Malibu – fuse box diagram – fusible link block type 2

No.	A	Circuit Protected
1	60	Fuse Block (Instrument Panel)
2	60	Fuse Block (Instrument Panel)
3	80	Power Steering Control Module
4	175	Type 2: Battery (Auxiliary)
5	250	Type 1: Fuse Block (Underhood)
	200	Type 2: Fuse Block (Underhood)
6	300	Type 1: Generator, Starter Motor
	500	Type 2: Generator, Starter Motor