


Citroen C2 (2003 – 2009) – fuse box diagram

Year of production: 2003, 2004, 2005, 2006, 2007, 2008, 2009


Fuse box under dashboard

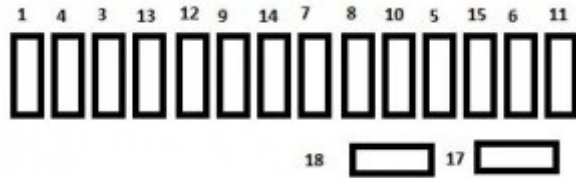

Citroen C2 – fuse box – under dashboard

Fuse	Ampere rating [A]	Function
3	5	Airbags
4	10	Diagnostic socket, particle filter additive, clutch switch, steering angle sensor
5	30	—
6	30	Screen wash
8	20	Digital clock, controls at the steering wheel, radio, display
9	30	Cigar-lighter, digital clock, interior lamps, vanity mirror
10	15	Alarm
11	15	Ignition switch, diagnostic socket
12	15	Airbag ECU, rain and brightness sensor
14	15	Parking assistance, instrument panel, air conditioning, bluetooth® telephone
15	30	Central locking, deadlocking
17	40	Demisting – deicing of the rear screen
18	SHUNT	CUSTOMER PARK SHUNT

Fuse box in engine compartment

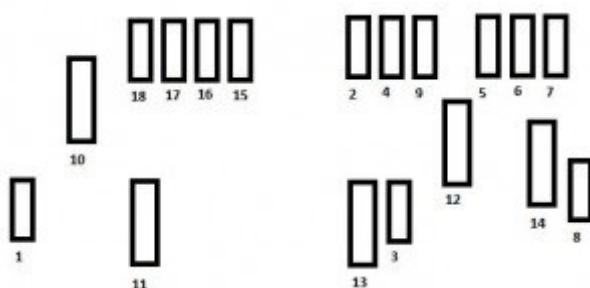

Citroen C2 – fuse box – engine compartment

Fuse	Ampere rating [A]	Function
1	20	Water-in-diesel-fuel sensor
2	15	Horn
3	10	Screen wash

4	20	Headlamp wash
5	15	Fuel pump
6	10	Power steering
7	10	Coolant level sensor
8	25	Starter
9	10	ECUs (ABS, ESP)
10	30	Engine control actuators (Ignition coil, Electrovalve, Oxygen sensor, Injection), Canister purge
11	40	Air blower
12	30	Windscreen wiper
14	30	Air pump (petrol version), Diesel fuel heater

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market