


ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

*1 : 3UZ-FE

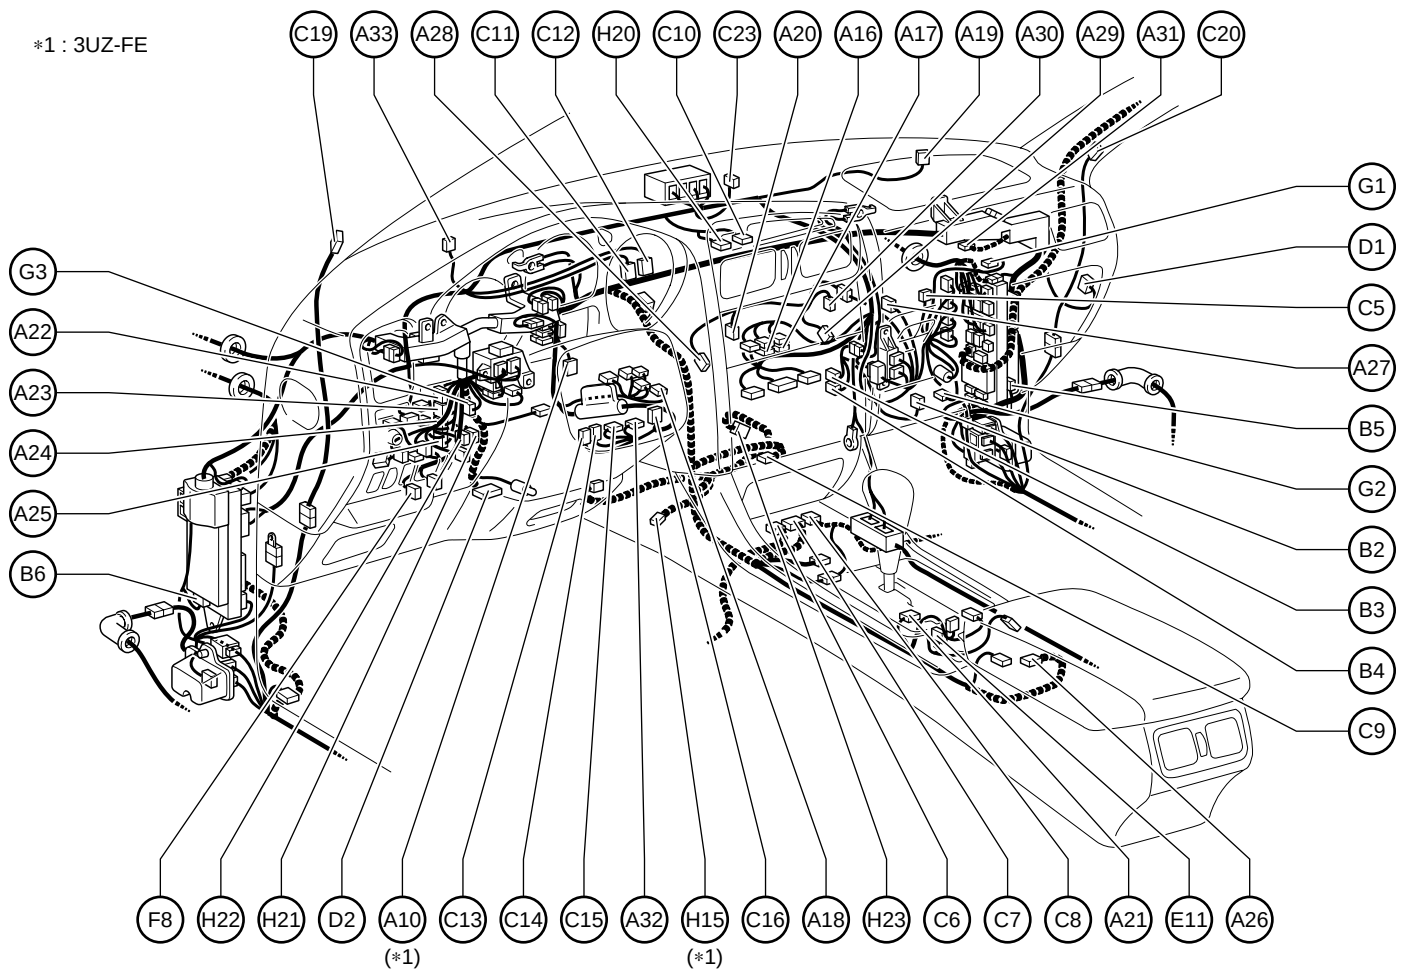

A10 Accel Position Sensor
A16 A/C Control Assembly
A17 A/C Control Assembly
A18 A/C Room Temp. Sensor
A19 A/C Solar Sensor
A20 A/C Thermistor
A21 A/T Shift Position Illumination
A22 ABS & TRC & VSC ECU
A23 ABS & TRC & VSC ECU
A24 ABS & TRC & VSC ECU
A25 ABS & TRC & VSC ECU
A26 ABS Deceleration Sensor
A27 Air Inlet Control Servo Motor
A28 Air Mix Control Servo Motor (Driver Side)
A29 Air Mix Control Servo Motor (Front Passenger Side)
A30 Air Vent Mode Control Servo Motor
A31 Airbag Squib (Front Passenger Airbag Assembly)
A32 Airbag Squib (Steering Wheel Pad)
A33 Automatic Light Control Sensor

B 2 Blower Motor
B 3 Blower Motor Controller
B 4 Blower Motor Controller
B 5 Body ECU No.1
B 6 Body ECU No.2

C 5 CD Automatic Changer
C 6 Center Airbag Sensor Assembly
C 7 Center Airbag Sensor Assembly

C 8 Center Airbag Sensor Assembly
C 9 Cigarette Lighter
C10 Clock
C11 Combination Meter
C12 Combination Meter
C13 Combination SW
C14 Combination SW
C15 Combination SW
C16 Combination SW
C19 Curtain Shield Airbag Squib LH
C20 Curtain Shield Airbag Squib RH
C23 Center Speaker

D 1 Daytime Running Light Relay
D 2 DLC3

E 11 ECT Pattern Select SW

F 8 Fuel Lid Opener SW


G 1 Glove Box Light
G 2 Glove Box Light SW
G 3 Gateway ECU

H15 Heated Oxygen Sensor (Bank 1 Sensor 2)
H20 Hazard SW
H21 Headlight Beam Level Control SW
H22 Headlight Cleaner SW
H23 Heated Oxygen Sensor (Bank 2 Sensor 2)

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[LHD]

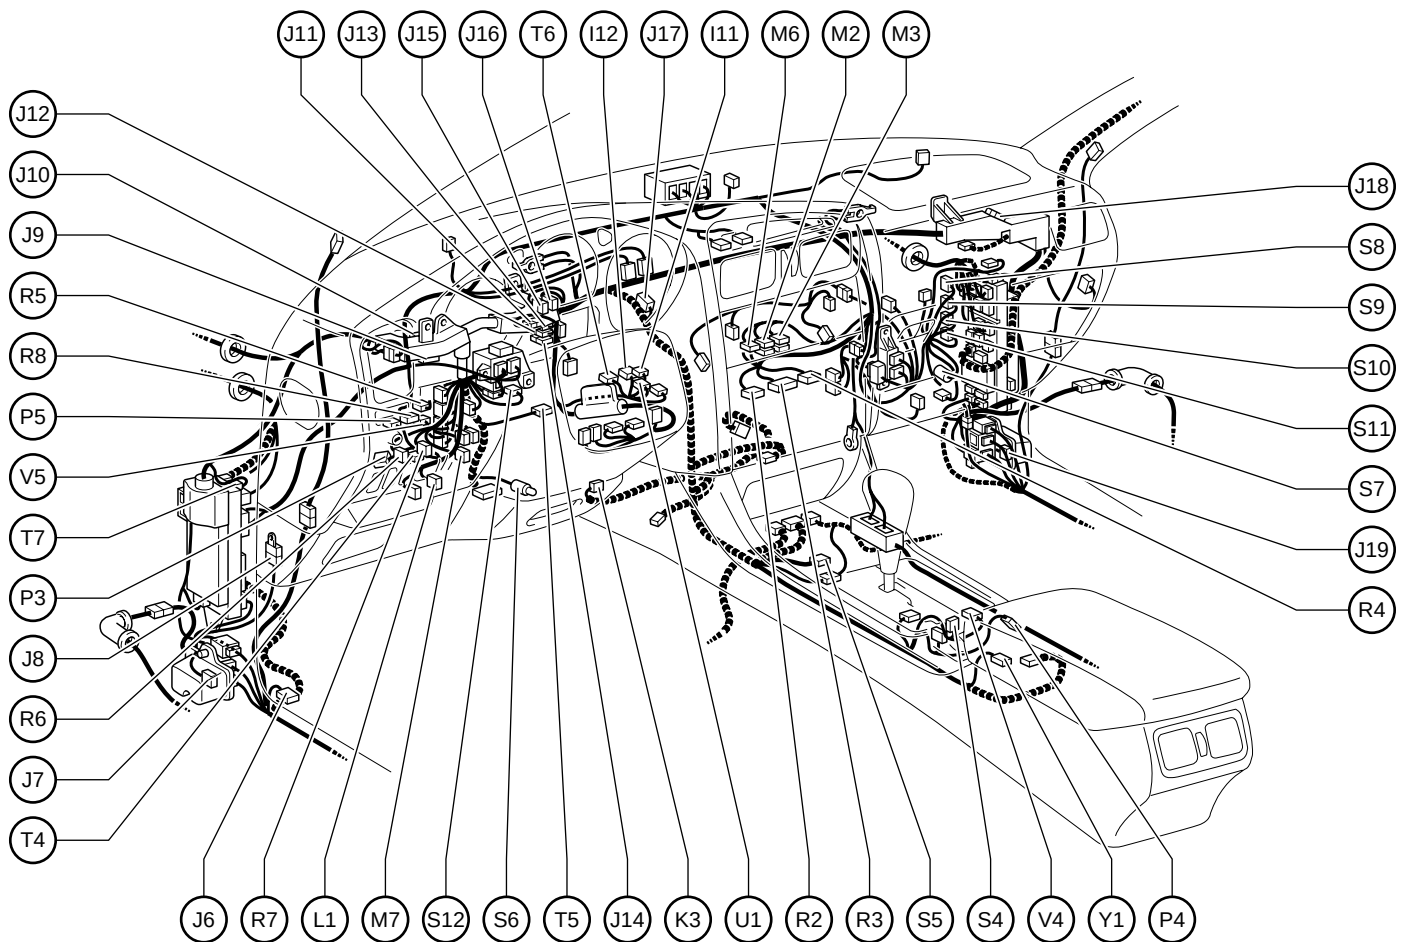

I 11 Ignition Key Cylinder Light
I 12 Ignition SW

J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector

K 3 Kick Down SW

L 1 Luggage Compartment Door Opener SW

M 2 Multi-Display
M 3 Multi-Display
M 6 Multi-Display
M 7 Mirror Retractor SW

P 3 Parking Brake SW
P 4 Power Outlet
P 5 PPS ECU

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 5 Rear Fog Light Relay
R 6 Rear Fog Light SW
R 7 Remote Control Mirror SW
R 8 Rheostat

S 4 Seat Heater SW
S 5 Shift Lock Control ECU
S 6 Step Light LH
S 7 Step Light RH
S 8 Stereo Component Amplifier
S 9 Stereo Component Amplifier
S 10 Stereo Component Amplifier
S 11 Stereo Component Amplifier
S 12 Stop Light SW

T 4 Telephone Microphone
T 5 Tilt and Telescopic ECU
T 6 Transponder Key Amplifier
T 7 Turn Signal Flasher

U 1 Unlock Warning SW and Key Interlock Solenoid


V 4 VSC Off SW
V 5 VSC Warning Buzzer

Y 1 Yaw Rate Sensor

ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

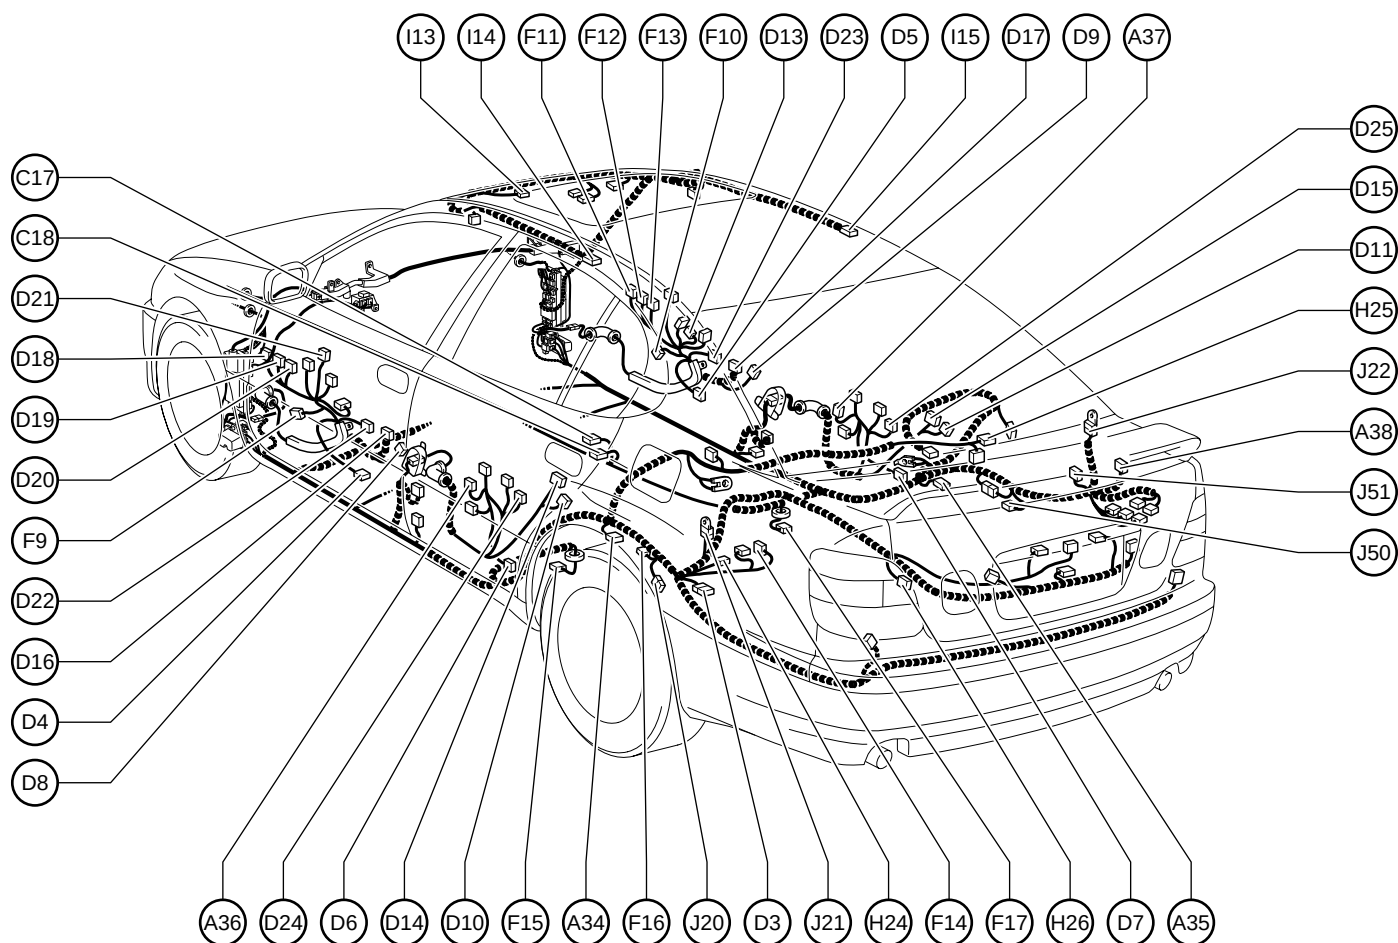

A34 ABS Speed Sensor Rear LH
 A35 ABS Speed Sensor Rear RH
 A36 Ashtray Illumination Rear LH
 A37 Ashtray Illumination Rear RH
 A38 Auto Antenna Control Relay and Motor

C17 Cellular Phone (Hand Set)
 C18 Cellular Phone (Hand Set)

D 3 Diode (Luggage Door Open Detection)
 D 4 Door Courtesy Light Front LH
 D 5 Door Courtesy Light Front RH
 D 6 Door Courtesy Light Rear LH
 D 7 Door Courtesy Light Rear RH
 D 8 Door Courtesy SW Front LH
 D 9 Door Courtesy SW Front RH
 D10 Door Courtesy SW Rear LH
 D11 Door Courtesy SW Rear RH
 D13 Door Lock Control SW RH
 D14 Door Lock Motor and Door Lock Detection SW Rear LH
 D15 Door Lock Motor and Door Lock Detection SW Rear RH
 D16 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front LH
 D17 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front RH
 D18 Driver Door ECU
 D19 Driver Door ECU
 D20 Driver Door ECU
 D21 Driving Position Memory SW

D22 Door Lock Motor and SW Front LH
 D23 Door Lock Motor and SW Front RH
 D24 Door Lock Motor and SW Rear LH
 D25 Door Lock Motor and SW Rear RH

F 9 Front Door Speaker LH
 F10 Front Door Speaker RH
 F11 Front Passenger Door ECU
 F12 Front Passenger Door ECU
 F13 Front Passenger Door ECU
 F14 Fuel Lid Opener Motor
 F15 Fuel Pump and Sender
 F16 Fuel Pump Control ECU
 F17 Fuel Sender (Sub)

H24 Height Control Sensor (Rear)
 H25 High Mounted Stop Light (Bulb Type)
 H26 High Mounted Stop Light (LED Type)


I 13 Inner Mirror
 I 14 Interior Light Rear LH
 I 15 Interior Light Rear RH

J 20 Junction Connector
 J 21 Junction Connector
 J 22 Junction Connector
 J 50 Junction Connector
 J 51 Junction Connector

ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

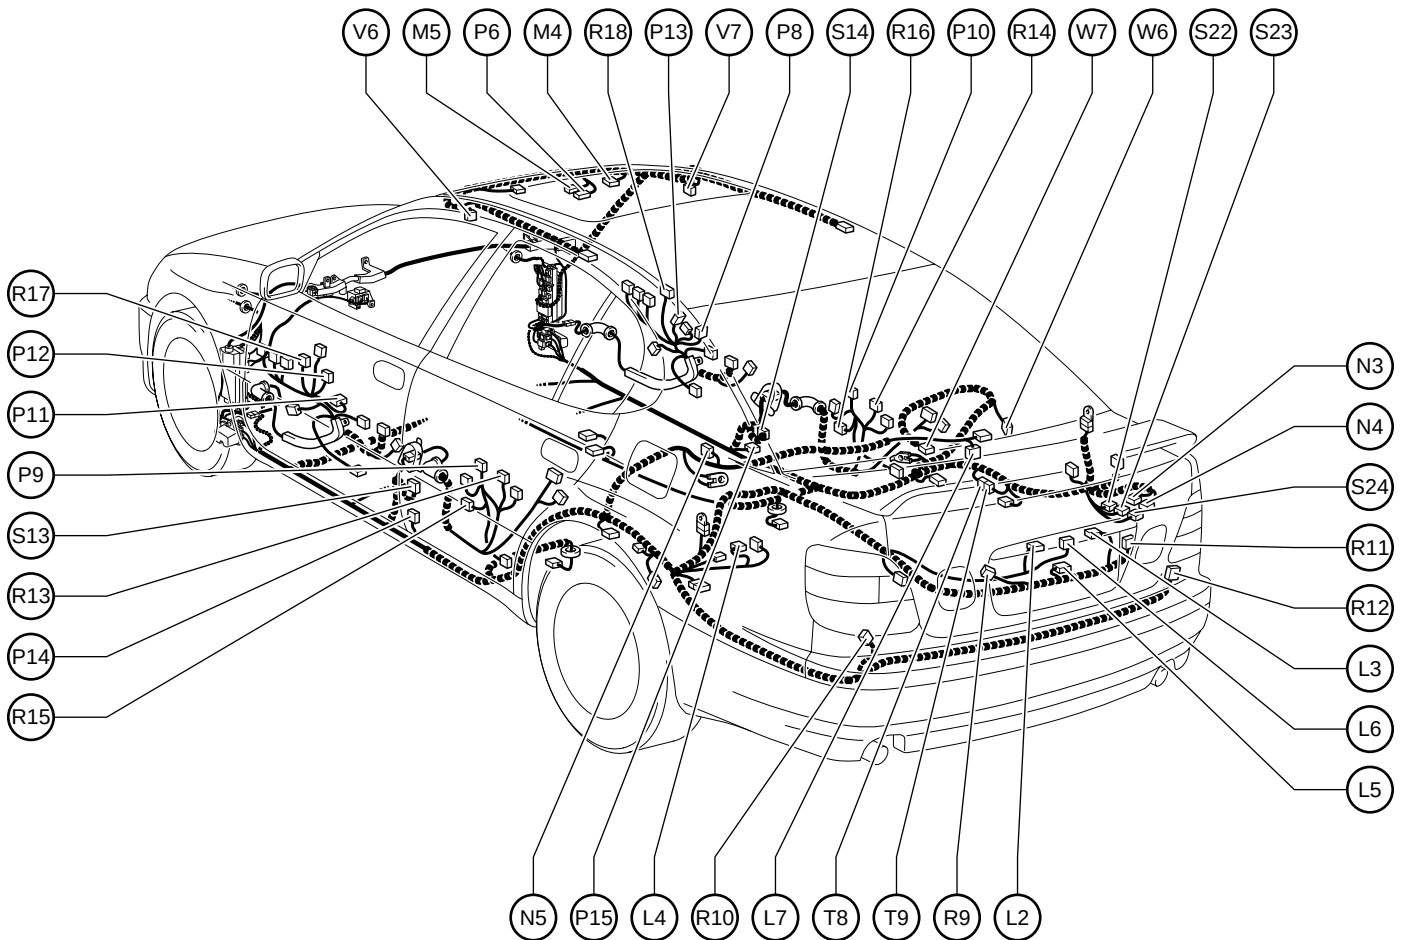

L 2 License Plate Light LH
 L 3 License Plate Light RH
 L 4 Light Failure Sensor
 L 5 Luggage Compartment Door Courtesy SW and Opener Motor
 L 6 Luggage Compartment Door Key Unlock SW
 L 7 Luggage Compartment Light

M 4 Moon Roof Control ECU
 M 5 Moon Roof Control SW

N 3 Navigation ECU
 N 4 Navigation ECU
 N 5 Noise Filter (Rear Window Defogger)

P 6 Personal Light
 P 8 Power Window Control SW Front RH
 P 9 Power Window Control SW Rear LH
 P10 Power Window Control SW Rear RH
 P11 Power Window Master SW
 P12 Power Window Motor Front LH
 P13 Power Window Motor Front RH
 P14 Pretensioner LH
 P15 Pretensioner RH

R 9 Rear Combination Light LH
 R10 Rear Combination Light LH
 R11 Rear Combination Light RH
 R12 Rear Combination Light RH
 R13 Rear Door LH ECU
 R14 Rear Door RH ECU
 R15 Rear Door Speaker LH
 R16 Rear Door Speaker RH
 R17 Remote Control Mirror LH
 R18 Remote Control Mirror RH

S13 Side Airbag Sensor LH
 S14 Side Airbag Sensor RH
 S22 Stereo Component Amplifier
 S23 Stereo Component Amplifier
 S24 Stereo Component Amplifier

T 8 Telephone Transceiver and Speaker Relay
 T 9 Telephone Transceiver and Speaker Relay


V 6 Vanity Light LH
 V 7 Vanity Light RH

W 6 Wireless Door Lock Control ECU
 W 7 Woofer (Speaker)

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

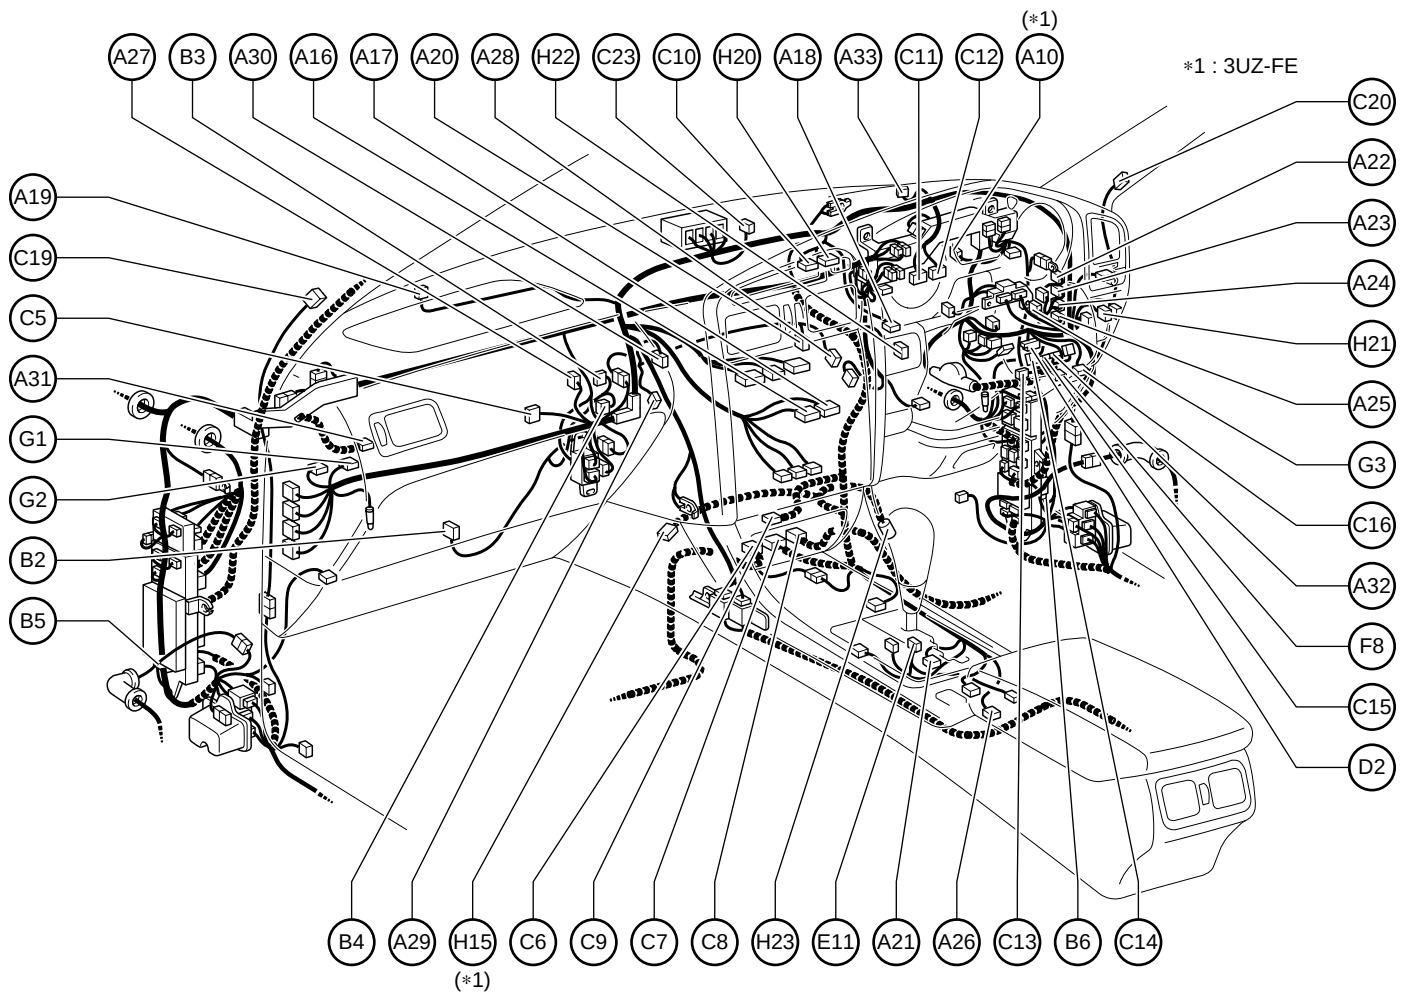

- A10 Accel Position Sensor
- A16 A/C Control Assembly
- A17 A/C Control Assembly
- A18 A/C Room Temp. Sensor
- A19 A/C Solar Sensor
- A20 A/C Thermistor
- A21 A/T Shift Position Illumination
- A22 ABS & TRC & VSC ECU
- A23 ABS & TRC & VSC ECU
- A24 ABS & TRC & VSC ECU
- A25 ABS & TRC & VSC ECU
- A26 ABS Deceleration Sensor
- A27 Air Inlet Control Servo Motor
- A28 Air Mix Control Servo Motor (Driver Side)
- A29 Air Mix Control Servo Motor (Front Passenger Side)
- A30 Air Vent Mode Control Servo Motor
- A31 Airbag Squib (Front Passenger Airbag Assembly)
- A32 Airbag Squib (Steering Wheel Pad)
- A33 Automatic Light Control Sensor
- B 2 Blower Motor
- B 3 Blower Motor Controller
- B 4 Blower Motor Controller
- B 5 Body ECU No.1
- B 6 Body ECU No.2
- C 5 CD Automatic Changer
- C 6 Center Airbag Sensor Assembly
- C 7 Center Airbag Sensor Assembly

- C 8 Center Airbag Sensor Assembly
- C 9 Cigarette Lighter
- C10 Clock
- C11 Combination Meter
- C12 Combination Meter
- C13 Combination SW
- C14 Combination SW
- C15 Combination SW
- C16 Combination SW
- C19 Curtain Shield Airbag Squib LH
- C20 Curtain Shield Airbag Squib RH
- C23 Center Speaker

D 2 DLC3

E 11 ECT Pattern Select SW

F 8 Fuel Lid Opener SW

G 1 Glove Box Light

G 2 Glove Box Light SW

G 3 Gateway ECU

H15 Heated Oxygen Sensor (Bank 1 Sensor 2)

H20 Hazard SW

H21 Headlight Beam Level Control SW


H22 Headlight Cleaner SW

H23 Heated Oxygen Sensor (Bank 2 Sensor 2)

ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

[RHD]

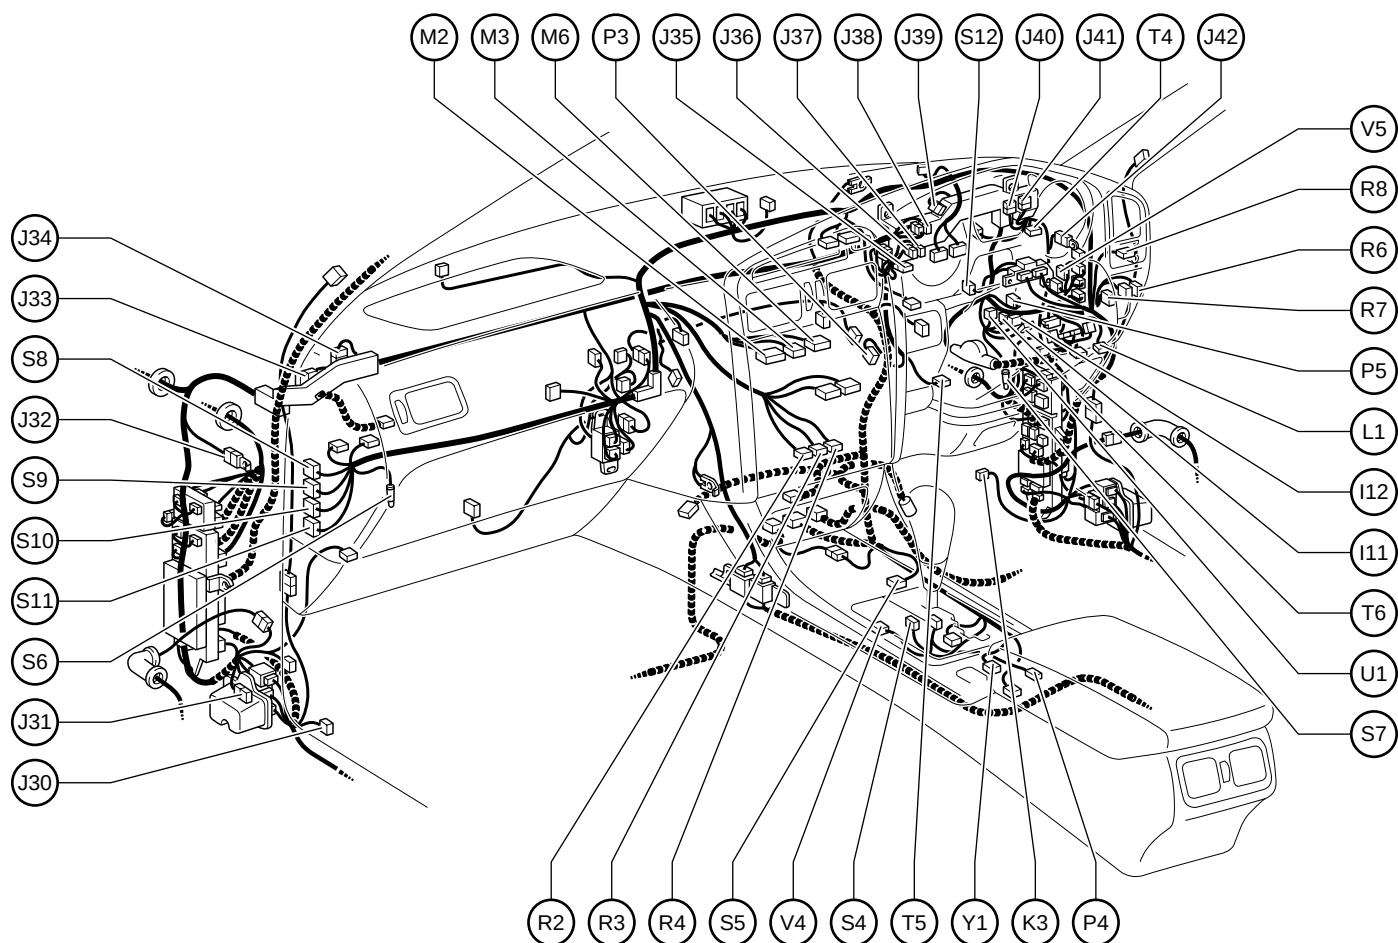

I 11 Ignition Key Cylinder Light
I 12 Ignition SW

J 30 Junction Connector
J 31 Junction Connector
J 32 Junction Connector
J 33 Junction Connector
J 34 Junction Connector
J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector
J 39 Junction Connector
J 40 Junction Connector
J 41 Junction Connector
J 42 Junction Connector

K 3 Kick Down SW

L 1 Luggage Compartment Door Opener SW

M 2 Multi-Display
M 3 Multi-Display
M 6 Multi-Display

P 3 Parking Brake SW
P 4 Power Outlet
P 5 PPS ECU

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 6 Rear Fog Light SW
R 7 Remote Control Mirror SW
R 8 Rheostat

S 4 Seat Heater SW
S 5 Shift Lock Control ECU
S 6 Step Light LH
S 7 Step Light RH
S 8 Stereo Component Amplifier
S 9 Stereo Component Amplifier
S 10 Stereo Component Amplifier
S 11 Stereo Component Amplifier
S 12 Stop Light SW

T 4 Telephone Microphone
T 5 Tilt and Telescopic ECU
T 6 Transponder Key Amplifier

U 1 Unlock Warning SW and Key Interlock Solenoid


V 4 VSC Off SW
V 5 VSC Warning Buzzer

Y 1 Yaw Rate Sensor

ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD]

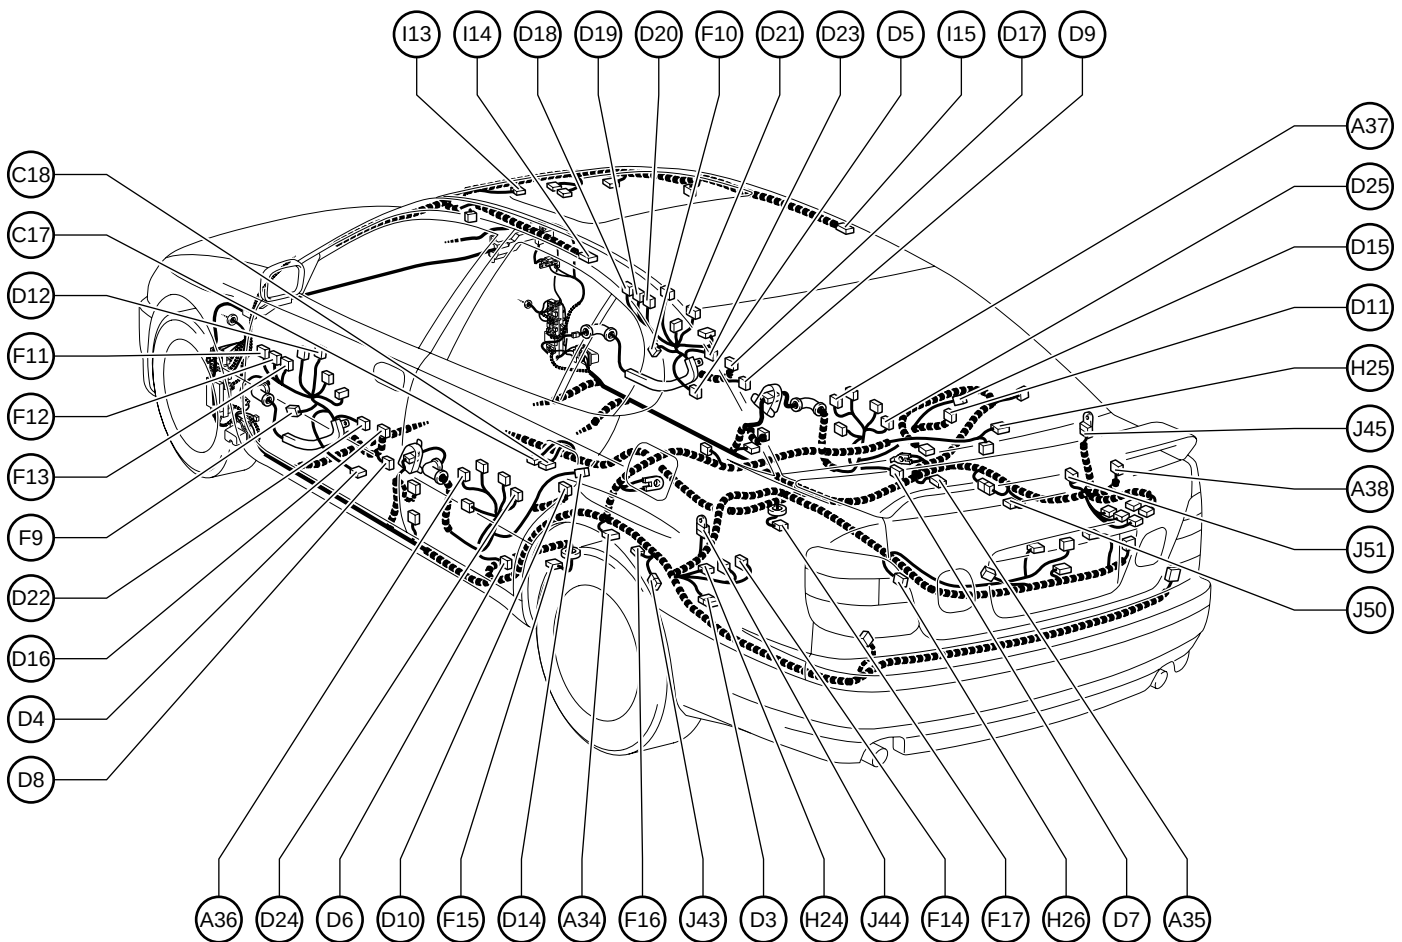

A34 ABS Speed Sensor Rear LH
 A35 ABS Speed Sensor Rear RH
 A36 Ashtray Illumination Rear LH
 A37 Ashtray Illumination Rear RH
 A38 Auto Antenna Control Relay and Motor

C17 Cellular Phone (Hand Set)
 C18 Cellular Phone (Hand Set)

D 3 Diode (Luggage Door Open Detection)
 D 4 Door Courtesy Light Front LH
 D 5 Door Courtesy Light Front RH
 D 6 Door Courtesy Light Rear LH
 D 7 Door Courtesy Light Rear RH
 D 8 Door Courtesy SW Front LH
 D 9 Door Courtesy SW Front RH
 D10 Door Courtesy SW Rear LH
 D11 Door Courtesy SW Rear RH
 D12 Door Lock Control SW LH
 D14 Door Lock Motor and Door Lock Detection SW Rear LH
 D15 Door Lock Motor and Door Lock Detection SW Rear RH
 D16 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front LH
 D17 Door Lock Motor, Door Key Lock and Unlock SW and Door Lock Detection SW Front RH
 D18 Driver Door ECU
 D19 Driver Door ECU
 D20 Driver Door ECU
 D21 Driving Position Memory SW

D22 Door Lock Motor and SW Front LH
 D23 Door Lock Motor and SW Front RH
 D24 Door Lock Motor and SW Rear LH
 D25 Door Lock Motor and SW Rear RH

F 9 Front Door Speaker LH
 F10 Front Door Speaker RH
 F11 Front Passenger Door ECU
 F12 Front Passenger Door ECU
 F13 Front Passenger Door ECU
 F14 Fuel Lid Opener Motor
 F15 Fuel Pump and Sender
 F16 Fuel Pump Control ECU
 F17 Fuel Sender (Sub)

H24 Height Control Sensor (Rear)
 H25 High Mounted Stop Light (Bulb Type)
 H26 High Mounted Stop Light (LED Type)


I 13 Inner Mirror
 I 14 Interior Light Rear LH
 I 15 Interior Light Rear RH

J 43 Junction Connector
 J 44 Junction Connector
 J 45 Junction Connector
 J 50 Junction Connector
 J 51 Junction Connector

ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD]

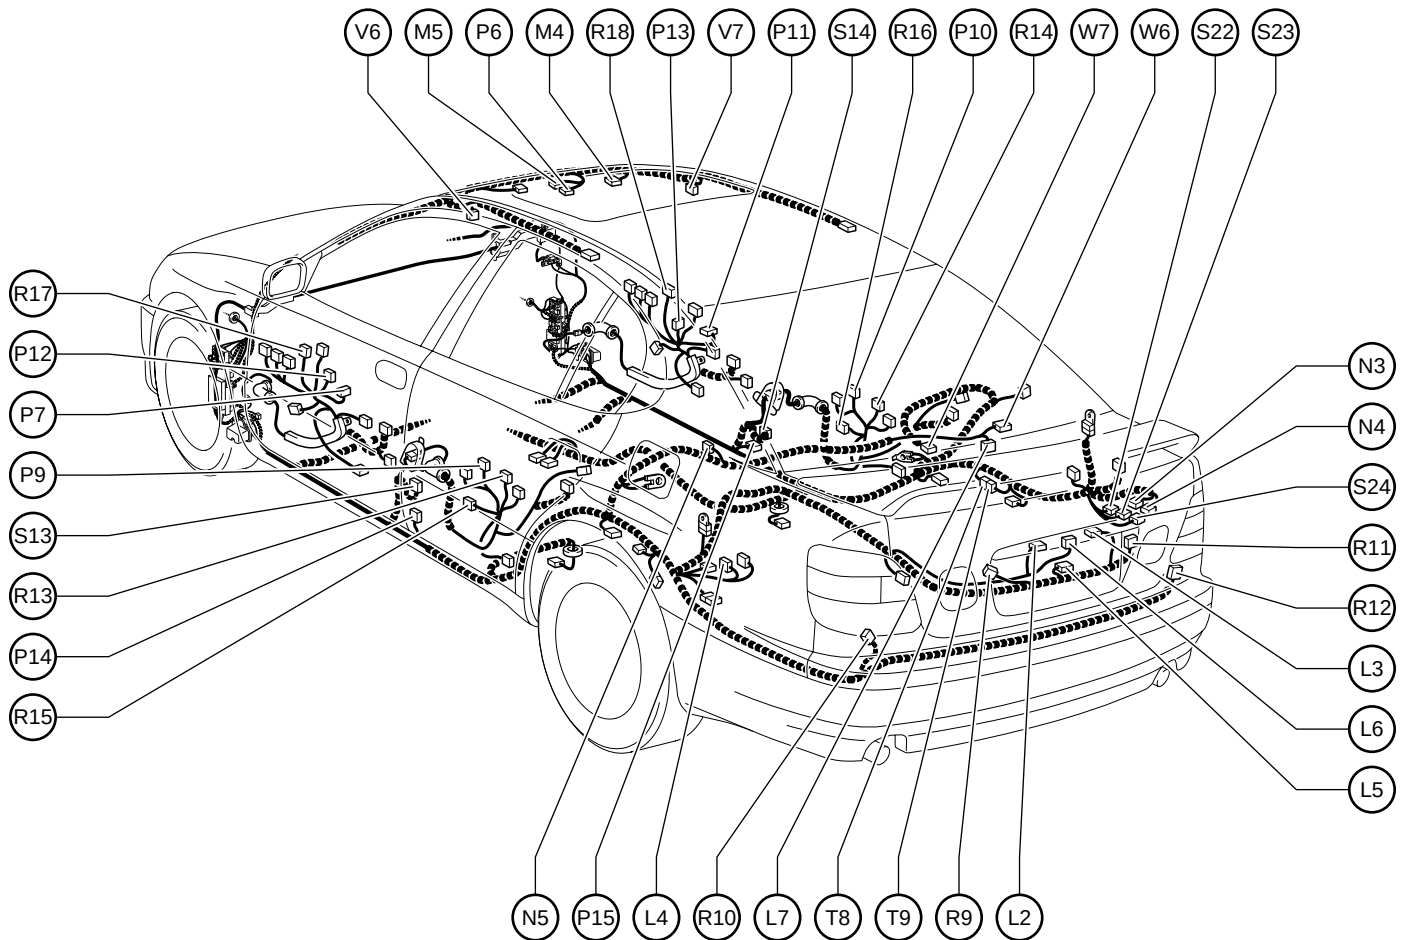

L 2 License Plate Light LH
 L 3 License Plate Light RH
 L 4 Light Failure Sensor
 L 5 Luggage Compartment Door Courtesy SW and Opener Motor
 L 6 Luggage Compartment Door Key Unlock SW
 L 7 Luggage Compartment Light

M 4 Moon Roof Control ECU
 M 5 Moon Roof Control SW

N 3 Navigation ECU
 N 4 Navigation ECU
 N 5 Noise Filter (Rear Window Defogger)

P 6 Personal Light
 P 7 Power Window Control SW Front LH
 P 9 Power Window Control SW Rear LH
 P10 Power Window Control SW Rear RH
 P11 Power Window Master SW
 P12 Power Window Motor Front LH
 P13 Power Window Motor Front RH
 P14 Pretensioner LH
 P15 Pretensioner RH

R 9 Rear Combination Light LH
 R10 Rear Combination Light LH
 R11 Rear Combination Light RH
 R12 Rear Combination Light RH
 R13 Rear Door LH ECU
 R14 Rear Door RH ECU
 R15 Rear Door Speaker LH
 R16 Rear Door Speaker RH
 R17 Remote Control Mirror LH
 R18 Remote Control Mirror RH

S13 Side Airbag Sensor LH
 S14 Side Airbag Sensor RH
 S22 Stereo Component Amplifier
 S23 Stereo Component Amplifier
 S24 Stereo Component Amplifier

T 8 Telephone Transceiver and Speaker Relay
 T 9 Telephone Transceiver and Speaker Relay

V 6 Vanity Light LH
 V 7 Vanity Light RH


W 6 Wireless Door Lock Control ECU
 W 7 Woofer (Speaker)

ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[LHD]

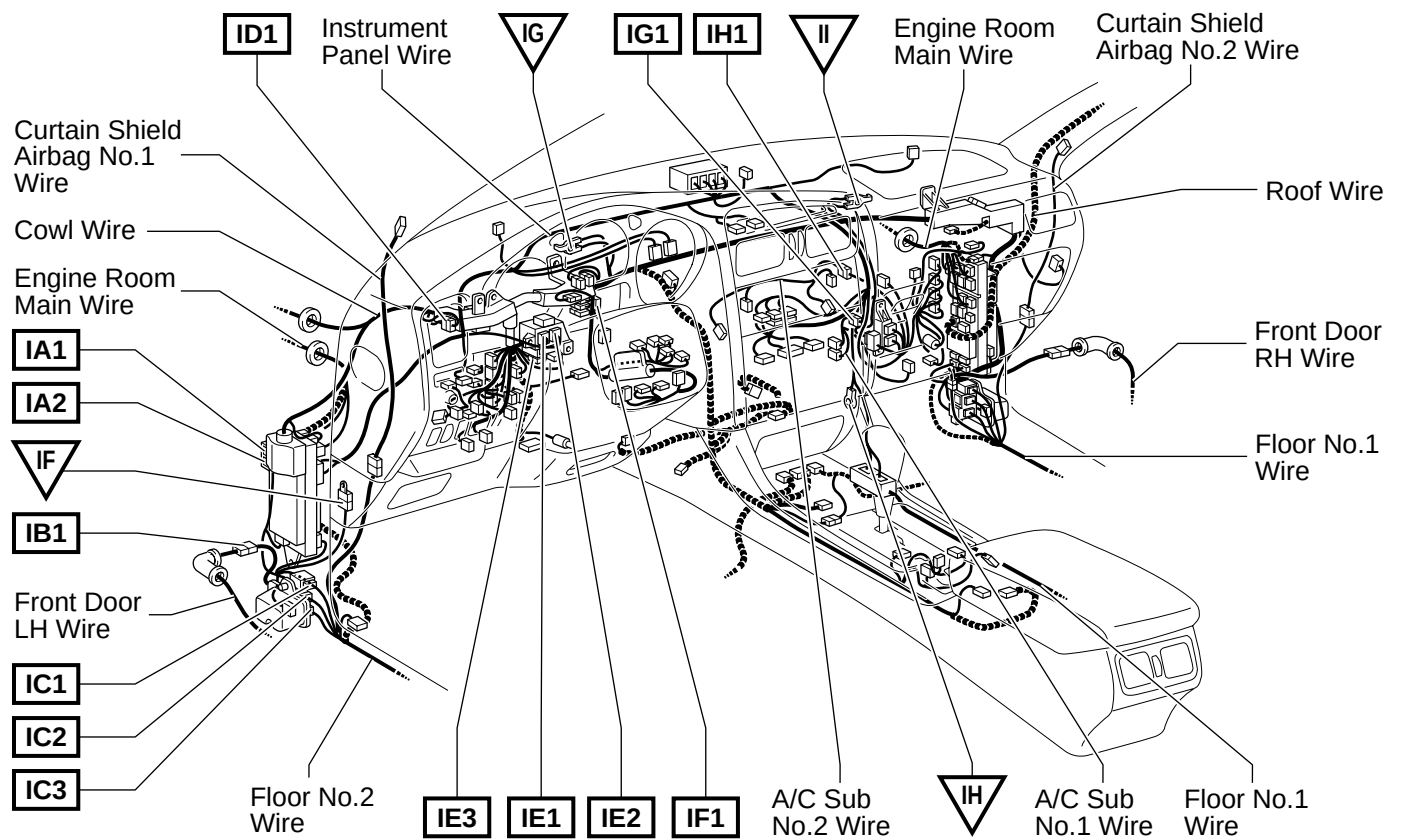

ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

[LHD]

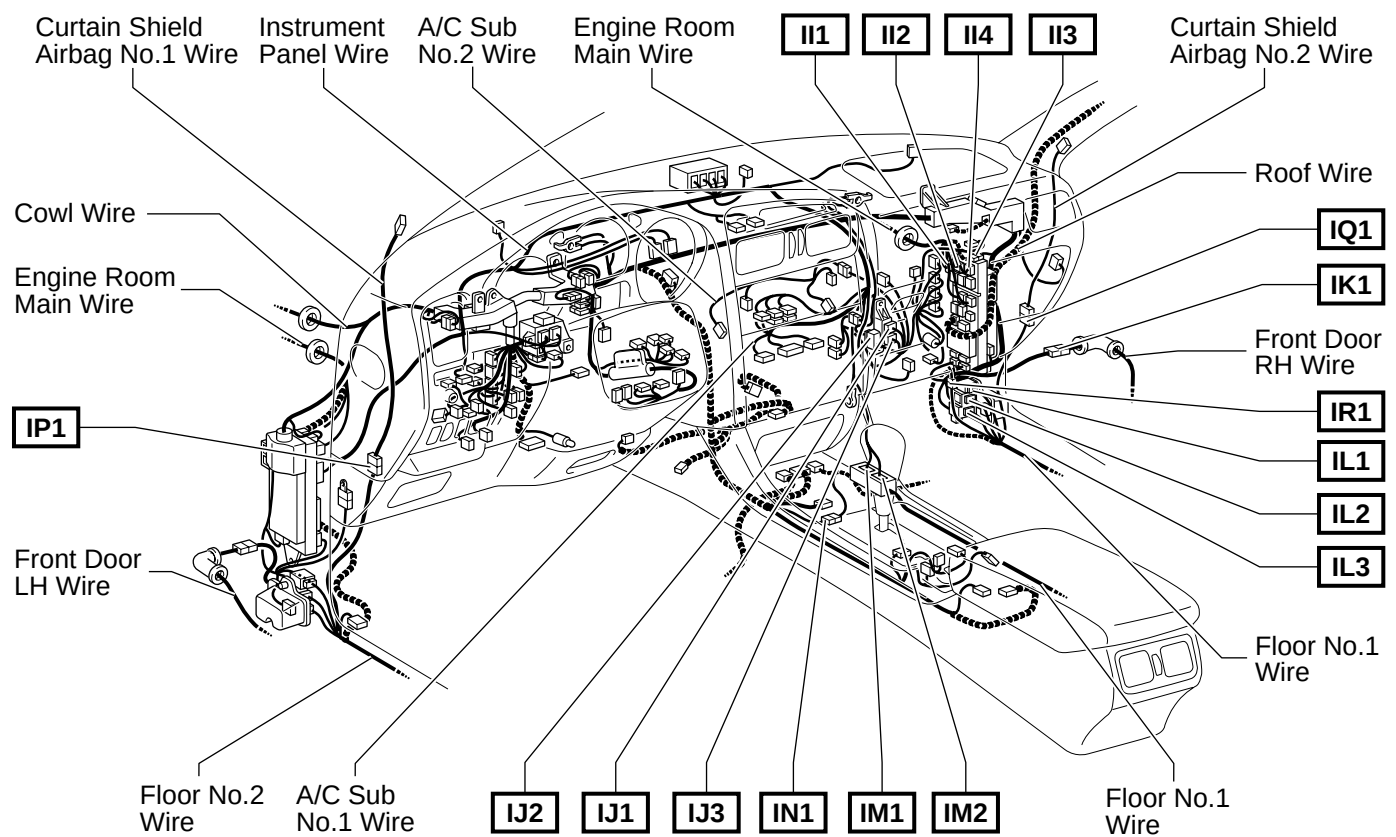


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[LHD]

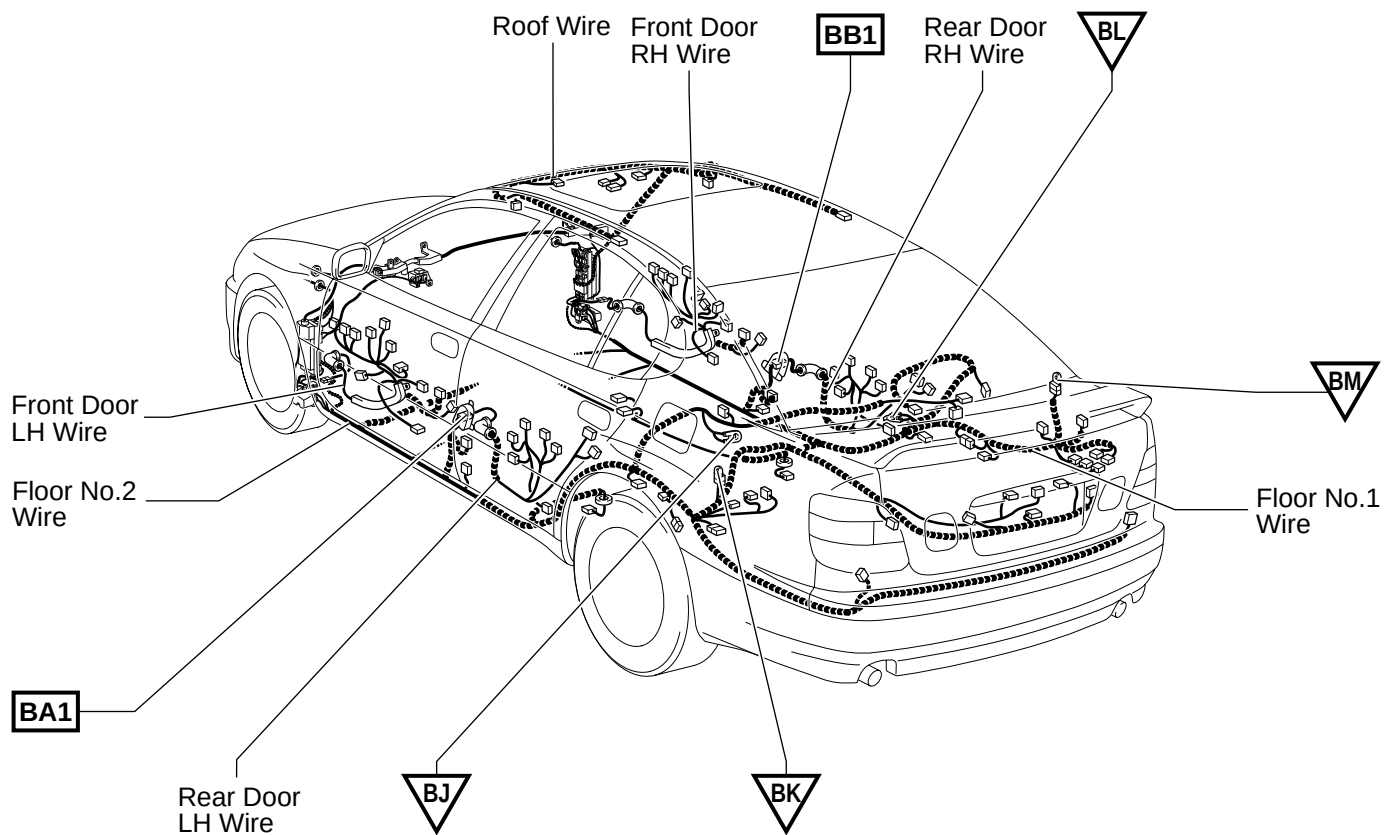


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[RHD]

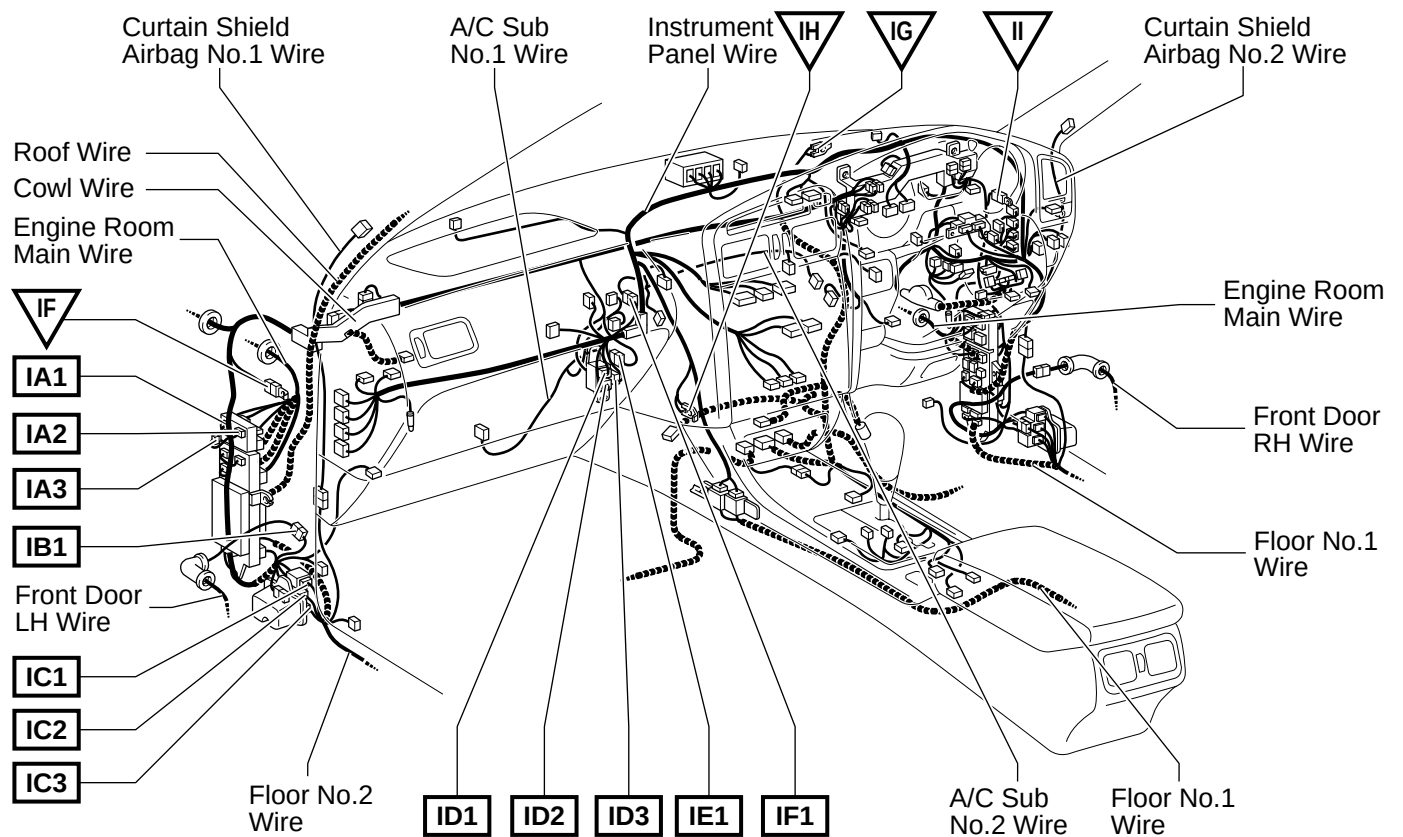

ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

[RHD]

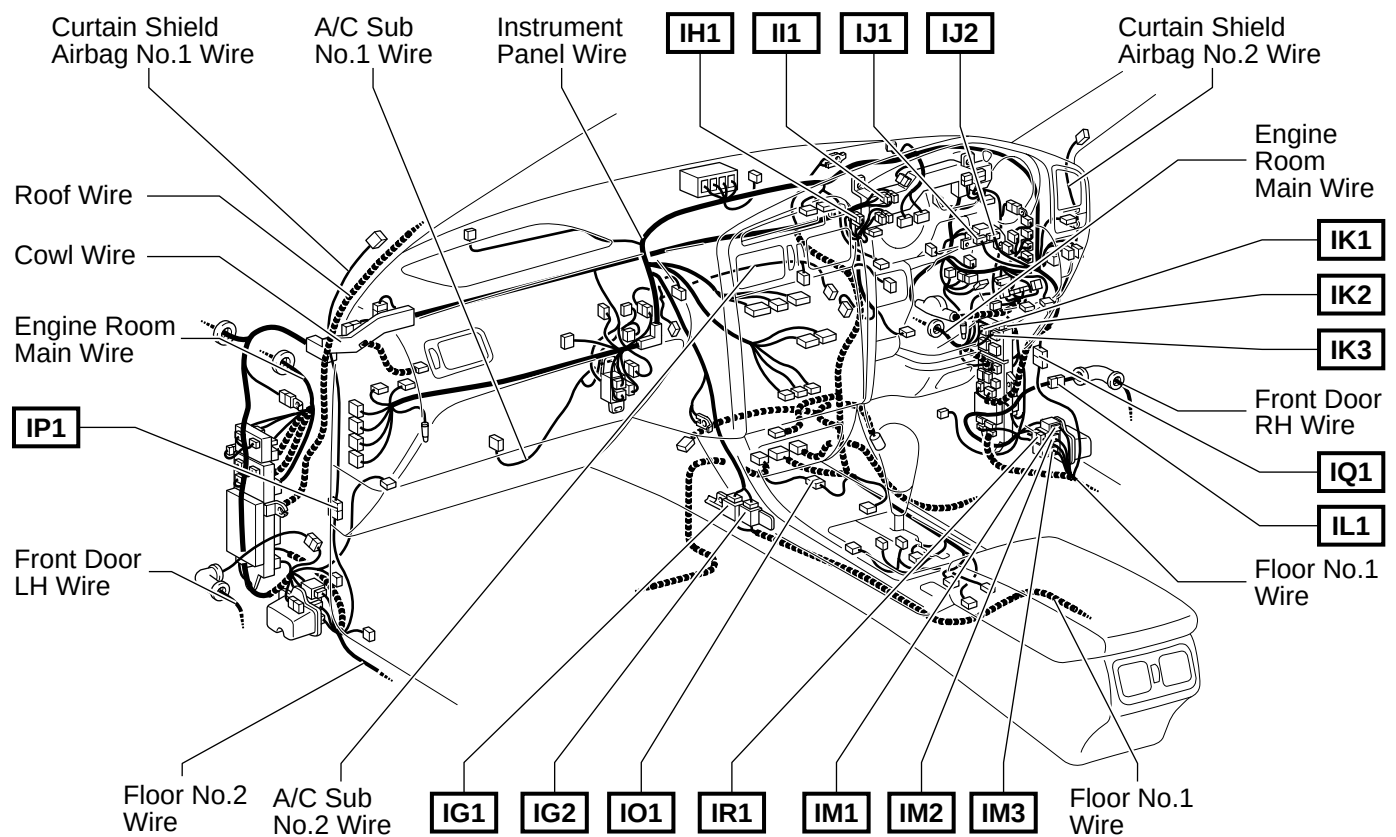

ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points

[RHD]

